


OPERATOR'S MANUAL

KUBOTA DIESEL ENGINE

MODELS D1503-M-E · D1703-M-E · D1803-M-E
V2003-M-E · V2203M-E · V2003-M-T-E · V2403M-E

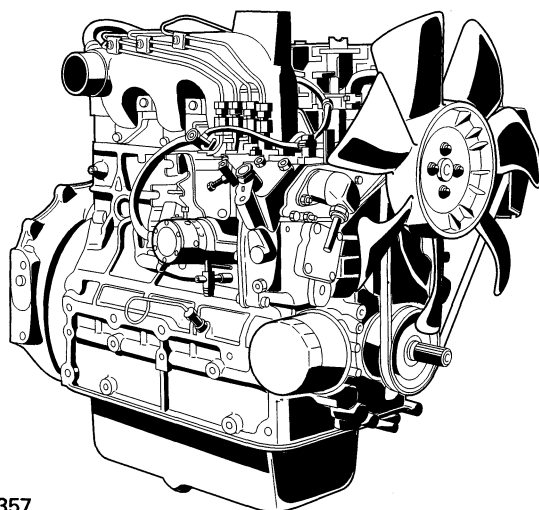

D-2357

READ AND SAVE THIS BOOK

Kubota

CONTENTS

▲ SAFE OPERATION	1
SERVICING OF THE ENGINE	1
NAMES OF PARTS	2
PRE-OPERATION CHECK	3
BREAK-IN	3
DAILY CHECK	3
OPERATING THE ENGINE.....	4
STARTING THE ENGINE(NORMAL)	4
COLD WEATHER STARTING	5
STOPPING THE ENGINE.....	6
CHECKS DURING OPERATION.....	6
Radiator Cooling water(Coolant)	6
Oil pressure lamp.....	6
Fuel.....	7
Color of exhaust.....	7
Immediately stop the engine if;	7
REVERSED ENGINE REVOLUTION AND REMEDIES	7
How to tell when the engine starts running backwards.....	7
Remedies.....	7
MAINTENANCE.....	8
SERVICE INTERVALS	9
PERIODIC SERVICE.....	11
FUEL	11
Fuel level check and refueling	11
Air bleeding the fuel system.....	12
Checking the fuel pipes	13
Cleaning the fuel filter pot.....	13
Fuel filter cartridge replacement	14
ENGINE OIL.....	14
Checking oil level and adding engine oil.....	14
Changing engine oil.....	15
Replacing the oil filter cartridge	16
RADIATOR.....	17
Checking coolant level, adding coolant	17
Changing coolant.....	18
Remedies for quick decrease of coolant.....	18
Checking radiator hoses and clamp	18
Precaution at overheating.....	19
Cleaning radiator core(outside)	19
Anti-freeze	19
Radiator cement	20
AIR CLEANER	20
Evacuator valve	21
Dust indicator (optional).....	21

ENGLISH

CONTENTS

For the air cleaner with a dust cup (optional).....	21
BATTERY.....	22
Battery charging.....	22
Direction for long term storage	23
ELECTRIC WIRING	23
FAN BELT	23
Adjusting Fan Belt Tension.....	23
CARRIAGE AND STORAGE.....	24
CARRIAGE	24
STORAGE.....	24
TROUBLESHOOTING.....	25
SPECIFICATIONS.....	27
WIRING DIAGRAMS	28