


# OPERATOR'S MANUAL

# KUBOTA DIESEL ENGINE

**MODELS** D1503-M-E · D1703-M-E · D1803-M-E  
V2003-M-E · V2203M-E · V2003-M-T-E · V2403M-E

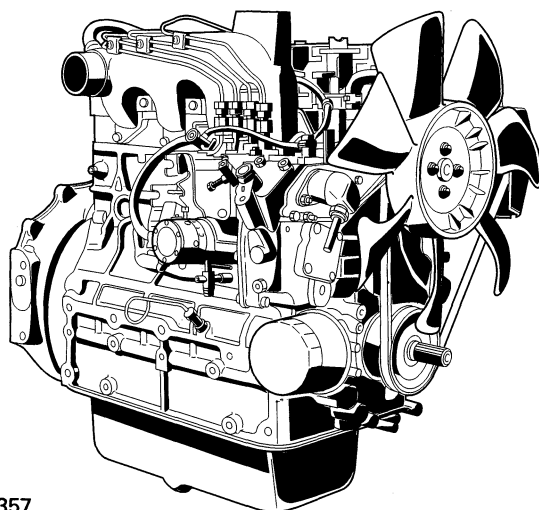

D-2357

*READ AND SAVE THIS BOOK*

**Kubota**

# CONTENTS

▲ SAFE OPERATION .....	1
SERVICING OF THE ENGINE .....	1
NAMES OF PARTS .....	2
PRE-OPERATION CHECK .....	3
BREAK-IN .....	3
DAILY CHECK .....	3
OPERATING THE ENGINE.....	4
STARTING THE ENGINE(NORMAL) .....	4
COLD WEATHER STARTING .....	5
STOPPING THE ENGINE.....	6
CHECKS DURING OPERATION.....	6
Radiator Cooling water(Coolant) .....	6
Oil pressure lamp.....	6
Fuel.....	7
Color of exhaust.....	7
Immediately stop the engine if; .....	7
REVERSED ENGINE REVOLUTION AND REMEDIES.....	7
How to tell when the engine starts running backwards.....	7
Remedies.....	7
MAINTENANCE.....	8
SERVICE INTERVALS .....	9
PERIODIC SERVICE.....	11
FUEL .....	11
Fuel level check and refueling .....	11
Air bleeding the fuel system.....	12
Checking the fuel pipes .....	13
Cleaning the fuel filter pot.....	13
Fuel filter cartridge replacement .....	14
ENGINE OIL.....	14
Checking oil level and adding engine oil.....	14
Changing engine oil.....	15
Replacing the oil filter cartridge .....	16
RADIATOR.....	17
Checking coolant level, adding coolant .....	17
Changing coolant.....	18
Remedies for quick decrease of coolant.....	18
Checking radiator hoses and clamp .....	18
Precaution at overheating.....	19
Cleaning radiator core(outside) .....	19
Anti-freeze .....	19
Radiator cement .....	20
AIR CLEANER .....	20
Evacuator valve .....	21
Dust indicator (optional).....	21

## CONTENTS

---

For the air cleaner with a dust cup (optional).....	21
BATTERY.....	22
Battery charging.....	22
Direction for long term storage .....	23
ELECTRIC WIRING .....	23
FAN BELT .....	23
Adjusting Fan Belt Tension.....	23
CARRIAGE AND STORAGE.....	24
CARRIAGE .....	24
STORAGE.....	24
TROUBLESHOOTING.....	25
SPECIFICATIONS.....	27
WIRING DIAGRAMS .....	28