


# OPERATOR'S MANUAL

ENGLISH

# KUBOTA DIESEL ENGINE

**MODELS**

**V3600-E3 · V3600-T-E3 ·  
V3800-DI-T-E3 · V3300-E3BG ·  
V3600-T-E3BG**

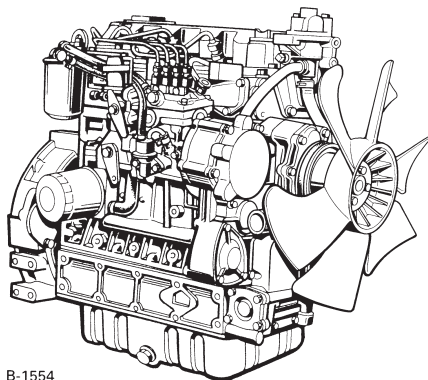

B-1554

*READ AND SAVE THIS MANUAL*

**Kubota**

# FOREWORD

You are now the proud owner of a KUBOTA Engine. This engine is a product of KUBOTA quality engineering and manufacturing. It is made of fine materials and under a rigid quality control system. It will give you long, satisfactory service. To obtain the best use of your engine, please read this manual carefully. It will help you become familiar with the operation of the engine and contains many helpful hints about engine maintenance. It is KUBOTA's policy to utilize as quickly as possible every advance in our research. The immediate use of new techniques in the manufacture of products may cause some small parts of this manual to be outdated. KUBOTA distributors and dealers will have the most up-to-date information. Please do not hesitate to consult with them.



## SAFETY FIRST

This symbol, the industry's "Safety Alert Symbol", is used throughout this manual and on labels on the machine itself to warn of the possibility of personal injury. Read these instructions carefully. It is essential that you read the instructions and safety regulations before you attempt to assemble or use this unit.



**DANGER :** Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



**WARNING :** Indicates a potentially hazardous situation which, if not avoided, COULD result in death or serious injury.



**CAUTION :** Indicates a potentially hazardous situation which, if not avoided, MAY result in minor or moderate injury.

**IMPORTANT :** Indicates that equipment or property damage could result if instructions are not followed.

**NOTE :** Gives helpful information.

# CONTENTS

- ▲ SAFE OPERATION ..... 1
- SERVICING OF THE ENGINE ..... 1
- NAMES OF PARTS ..... 2
- PRE-OPERATION CHECK..... 3
  - BREAK-IN ..... 3
  - DAILY CHECK ..... 3
- OPERATING THE ENGINE..... 4
  - STARTING THE ENGINE(NORMAL) ..... 4
  - COLD WEATHER STARTING ..... 5
  - STOPPING THE ENGINE ..... 6
  - CHECKS DURING OPERATION ..... 6
    - Radiator Cooling water(Coolant) ..... 6
    - Oil pressure lamp ..... 6
    - Charge lamp ..... 6
    - Fuel ..... 7
    - Color of exhaust..... 7
    - Immediately stop the engine if; ..... 7
  - REVERSED ENGINE REVOLUTION AND REMEDIES ..... 7
    - How to tell when the engine starts running backwards ..... 7
    - Remedies ..... 7
- MAINTENANCE ..... 8
  - SERVICE INTERVALS ..... 9
- PERIODIC SERVICE ..... 12
  - FUEL ..... 12
    - Fuel level check and refueling ..... 12
    - Air bleeding the fuel system ..... 13
    - Checking the fuel pipes ..... 14
    - Cleaning the fuel filter pot ..... 14
    - Fuel filter cartridge replacement ..... 15
  - ENGINE OIL ..... 15
    - Checking oil level and adding engine oil ..... 15
    - Changing engine oil ..... 16
    - Replacing the oil filter cartridge ..... 17
  - RADIATOR ..... 17
    - Checking coolant level, adding coolant ..... 18
    - Changing coolant ..... 19
    - Remedies for quick decrease of coolant ..... 19
    - Checking radiator hoses and clamp ..... 19
    - Precaution at overheating ..... 19
    - Cleaning radiator core(outside) ..... 19
    - Anti-freeze ..... 20
    - Radiator cement ..... 20

---

AIR CLEANER .....	21
Cleaning Primary Air Filter Element.....	21
Evacuator valve .....	21
For the air cleaner with a dust cup (optional).....	21
Dust indicator (optional).....	22
BATTERY .....	22
Battery charging.....	22
Direction for long term storage .....	23
ELECTRIC WIRING .....	23
FAN BELT .....	24
Adjusting Fan Belt Tension.....	24
CARRIAGE AND STORAGE .....	25
CARRIAGE.....	25
STORAGE.....	25
TROUBLESHOOTING.....	26
SPECIFICATIONS .....	28
WIRING DIAGRAMS .....	32