


- A: System Title
- B: Indicates the wiring color.

Wire colors are indicated by an alphabetical code.

= Red = Black = Blue BR = Brown LG = Light Green V = Violet = White G = Green O = OrangeP = Pink= Yellow GR = Gray

The first letter indicates the basic wire color and the second letter indicates the color of the stripe.

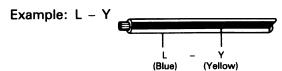

- Indicates the connector to be connected to a part (the numeral indicates the pin No.)
- **D**: The position of the parts is the same as shown in the wiring diagram and wire routing.
- Indicates the pin number of the connector. The numbering system is different for female and male connectors.

Example: Numbered in order Numbered in order from upper left to lower right

from upper right to lower left





The numbering system for the overall wiring diagram is the same as above.

Indicates a Relay Block. No shading is used and only the Relay Block No. is shown to distinguish it from the J/B.

Example: Indicates Relay Block No. 1.


G: Junction Block (The number in the circle is the J/B No. and the connector code is shown beside it). Junction Blocks are shaded to clearly separate them from other parts (different junction blocks are shaded differently for further clarification).

Example:



3B indicates that it is inside Junction Block No. 3.

- Indicates related system.
- Indicates the wiring harness and wiring harness connector. The wiring harness with male terminal is shown with arrows (>>). Outside numerals are pin numbers.

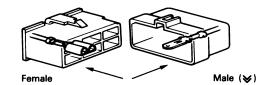

- ) is used to indicate different wiring and connector, etc. when the vehicle model, engine type, or specification is different.
- Indicates a shielded cable.



- Indicates and located on ground point.
- The same code occuring on the next page indicates that the wire harness is continuous.

SYSTEMS	LOCATION		SYSTEMS	LOCATION		SYSTEMS LOCA		ATION
ABS	(Car)	11-2	Fog Light		9-1	Radio and Player		21-2 (w/ CD Player) 22-2 (w/o CD Player)
ABS and Traction Control	TRAC	10-2	Fuel Lid Opener		19-1	Rear Window Defogger and Mirror Heater		16-3
Auto Antenna		21-8 (w/ CD Player) 22-4 (w/o CD Player)	Headlight and Light Auto Turn Off		6-2 (USA) 7-2 (Canada)	Remote Control Mirror		12-3 (w/ Memory) 12-2 (w/o Memory)
Automatic Air Conditioning		25-2	Horn		15-1	Seat Heater		16-1
Automatic Glare-Resistant EC Mirror		20-3	Ignition		1-6 (1UZ-FE) 1-7 (2JZ-GE)	Shift Lock		17-1
Automatic Light Control		28-2	Illumination		6-7 (USA) 27-2 (Canada)	SRS		17-3
Back-Up Light	A REPORT OF THE PARTY OF THE PA	4-8 (1UZ-FE) 5-8 (2JZ-GE)	Interior Light		8-2	Starting		1-3
Cellular Mobile Telephone		23-2	Moon Roof		14-2	Taillight and Stop Light	THE SOF	6-5 (USA) 7-7 (Canada)
Charging		1-2	Power Seat (1UZ-FE and 2JZ-GE w/ Driving Position Memory)		13-5	Theft Deterrent and Door Lock Control		19-2
Cigarette Lighter	<b>©</b>	16-4	Power Seat (2JZ-GE w/o Driving Position Memory)		26-2	Turn Signal and Hazard Warning Light		9-3
Combination Meter	E003	24-2	Power Seat (Passenger's) and Electric Tension Reducer		13-7	Unlock and Seat Belt Warning		6-4 (USA) 7-6 (Canada)
Cruise Control	40ser	18-2	Power Source		1~28-1	Wiper and Washer		15-2
Electronically Controlled Transmission and A/T Indicator	PRND2	4-2 (1UZ-FE) 5-2 (2JZ-GE)	Power Tilt and Power Telescopic		13-2	Wireless Door Lock Control		19-7
Electronically Controlled Hydraulic Cooling Fan (1UZ-FE)		20-2	Power Window	-	14-3			
Engine Control		2-2 (1UZ-FE) 3-2 (2JZ-GE)	PPS		17-2			

## Full download: http://manualplace.com/download/lexus-sc400-1996-wiring-diagram/

