

LIEBHERR

Mobile crane with telescopic boom

LTM 1200-5.1

LTM 1200-5-1-007+009

ab Muli 001

Operating instructions

BAL-No.: 21000-04-02

Pages: 1662

Works-Number	
Date	

ORIGINAL OPERATING MANUAL

The operating manual is part of the crane!

It must always be available within reach!

**The traffic regulations and those for crane operation
must be observed!**

Liebherr-Werk Ehingen GmbH

Postfach 1361

D-89582 Ehingen / Donau

☎: +49 (0) 7391 502-0

Fax: +49 (0) 7391 502-3399

✉: info.lwe@liebherr.com

www.liebherr.com

Foreword

General

This crane was built according to the state of technology and recognized safety technical regulations. Despite that, dangers to body and life for the user and / or third persons or damage to the crane and / or other material assets can occur.

This crane may only be used:

- in impeccable technical condition.
- for destined use.
- by trained personnel, which acts in a safety and danger conscious way.
- when no safety relevant problems are present.
- when no modifications were made on the crane.

Any problems, which could affect safety must be fixed immediately.

Modifications on the crane may only be made with written approval by Liebherr-Werk Ehingen GmbH.

Data recording device

This crane is equipped with a data recording device. Among others, the following data is recorded:




- Date and time of day
- Entered configuration of the crane
- Actual load
- Percentage of utilization of the crane
- Working radius
- Main boom angle, luffing jib angle
- Total telescopic boom length, length of each telescopic section
- Every actuation of bypass devices

The recorded data can be read with a respective software.

Safety and warning notes

Safety and warning notes are directed to all persons who work with the crane.


The terms **DANGER**, **WARNING**, **CAUTION** and **NOTICE** used in the crane documentation are intended to point out certain rules of conduct to all persons working with the crane.

Warn- ing signs	Signal word	Explanation
	DANGER	Designates a dangerous situation which will lead to death or serious injury if it is not prevented ¹⁾
	WARNING	Designates a dangerous situation, which can lead to death or serious injury if it is not prevented. ¹⁾
	CAUTION	Designates a dangerous situation, which can lead to slight or medium-grade injuries if it is not prevented. ¹⁾
	NOTICE	Designates a dangerous situation, which can lead to property damage if it is not prevented.

¹⁾This could also result in property damage.

Additional notes

The term **Note** is used in the crane documentation to make all persons working with the crane aware of useful information and tips.

Sign	Signal word	Explanation
	Note	Designates useful information and tips.

Crane documentation

The crane documentation is comprised of:

- all supplied documents on paper and in digital form.
- all supplied programs and applications.
- all subsequently supplied information, updates and addenda for the crane documentation.

The crane documentation:

- makes it possible for you to operate the crane safely.
- supports you to utilize the permissible application possibilities of the crane.
- provides you with information about the functionality of important components and systems.



Note

Terminology in the crane documentation.

Certain expressions are used in the crane documentation.

- ▶ In order to avoid misunderstandings, the same expressions should always be used.

Translations from the German version of the crane documentation: The crane documentation has been translated to be best of one's knowledge. Liebherr-Werk Ehingen GmbH assumes no liability for translation errors. The German version of the crane documentation is solely applicable for factual accuracy. If you find any errors or if any misunderstandings arise when reading the crane documentation, please contact Liebherr-Werk Ehingen GmbH immediately.

**WARNING**

Danger of accident due to incorrect operation of the crane!

Incorrect operation of the crane can lead to accidents!

Personnel can be killed or seriously injured!

This could result in property damage!

- ▶ Only authorized and trained expert personnel are permitted to work on the crane.
- ▶ The crane documentation is part of the crane and must be accessible on the crane.
- ▶ The crane documentation and on-site regulations and specifications (such as accident prevention regulations) must be observed.

Using the crane documentation:

- **makes it easier** to become familiar with the crane.
- **avoids** problems due to improper operation.

Observing the crane documentation:

- **increases** reliability in use.
- **extends** the service life of the crane.
- **minimizes** repair costs and downtime.

Place the crane documentation accessible in the driver's cab or in the crane cab.

**WARNING**

Outdated version of crane documentation!

If subsequently supplied information, updates and addenda to the crane documentation are not observed and added, there is a danger of accidents!

Personnel can be killed or seriously injured!

This could result in property damage!

- ▶ Observe and add all subsequently supplied information, updates and addenda for the crane documentation.
- ▶ Make sure that all affected persons always know and understand the latest version of the crane documentation.

**WARNING**

Crane documentation is not understood!

If parts of the crane documentation are not understood and the tasks are carried out on or with the crane, then there is a danger of accidents!

Personnel can be killed or seriously injured!


This could result in property damage!

- ▶ Clear up open questions regarding the crane documentation with Liebherr Service before carrying out the respective task.

This documentation may not be reproduced or duplicated, distributed or used for purposes of competition, neither in part nor in excerpts. All rights are expressly reserved in accordance with copyright laws.

All accident prevention guidelines, operating instructions, load charts etc. are based on destined use of the crane.

blank page!

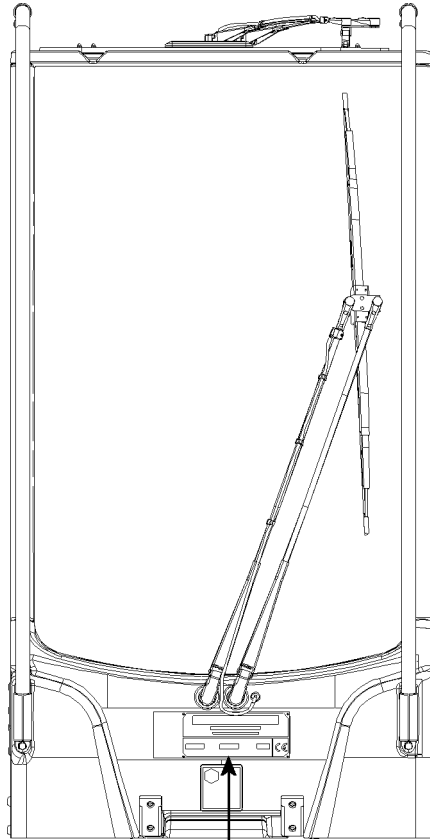

1

LIEBHERR		
WERK EHINGEN GMBH D-89582 EHINGEN/DONAU		
Type	n° d'usine	année de construction
	Werk-Nr.	Baujahr
Type	Works No.	Year of manufacture
Manufactured in Germany		
		CE



2

LIEBHERR		
WERK EHINGEN GMBH D-89582 EHINGEN/DONAU		
Type	n° d'usine	année de construction
	Werk-Nr.	Baujahr
Type	Works No.	Year of manufacture
Manufactured in Germany		

CE marking

The CE marking is a mark according to EU laws:

- Cranes with CE-marking according to the European machinery directive 2006/42/EC and the EN 13000! Data tag Crane with CE-marking, see illustration 1.
- Cranes which are operated outside the respective area of application do not require a CE marking. Data tag Crane without CE marking, see illustration 2.
- It is prohibited to market and operate cranes without CE marking, which do not meet the product-specific regulations valid in Europe, when a CE marking is specified for the country.
- It is prohibited to operate cranes with a tipping load utilization of 85 % which are programmed according to ASME B30.5 within the European Union or in countries which permit a lower stationary stability utilization (for example ISO 4305)! The national regulations apply. These cranes may not have a CE marking!

Destined use

The destined use of the crane consists solely in vertical lifting and lowering of free and non-adhered loads, whose weight and center of gravity are known.

To do so, a hook or hook block approved by Liebherr must be reeved on the hoist rope and it may only be operated within the permissible crane configurations.

Driving with the crane, with or without an attached load is only permissible if a corresponding driving or load chart is available. The set up configurations intended for it and the safety conditions must be observed according to the corresponding crane documentation.

Any other use or any other exceeding utilization is **not** destined use.

Destined use also includes the adherence of the required safety guidelines, conditions, prerequisites, set up conditions and working steps in the crane documentation (for example: Operating instructions, load charts, erection and take down charts, job planner).

The manufacturer is **not** liable for damages, which are caused by non-destined use or improper use of the crane. Any associated risk it is carried solely by the owner, the operator and the user of the crane.

Non-destined use

Non -destined use is:

- Working outside the permissible set up configurations according to the load chart.
- Working outside the permissible boom radii and slewing ranges according to the load chart.
- Selecting load charts, which do not correspond to the actual set up configuration.
- Selection of a set up configuration via code or via manual entry, which does not correspond to the actual set up configuration.
- Working with bypassed / deactivated safety devices, for example bypassed load moment limitation or with bypassed hoist limit switch.
- Increasing the radius of the lifted load after a LMB shut off, for example by diagonally pulling the load.
- Using the support pressure display as a safety function against tipping over.
- Use of equipment parts which are not approved for the crane.
- Using the crane at sports and recreational events, especially for "Bungee" jumps and / or "Dinner in the sky".
- Driving on a public road in non-permissible driving condition (axle load, dimension).
- Driving with the equipment in place in a non-permissible driving condition.
- Pushing, pulling or lifting loads with the leveling regulation, the sliding beams or the support cylinders.
- Pushing, pulling or lifting loads by actuating the slewing gear, the luffing gear or the telescoping gear.
- Ripping stuck objects loose with the crane.
- Utilizing the crane for a longer period of time for material handling tasks.
- Releasing the crane suddenly (grapple or dumping operation).
- Utilizing the crane when the weight of the load, which is suspended on the crane is changed, for example by filling a container suspended on the load hook, except:
 - The load moment limiter was checked before for function with a known load.
 - The crane cab is occupied.
 - The crane is operational.
 - The container size is selected in such a way that an overload of the crane with full load is eliminated within the valid used load chart.

The crane may **not** be used for:

- Attaching a stuck load for which the weight and center of gravity are not known and which is released only by flame cutting, for example.
- Letting persons drive along outside the driver's cab.
- Transporting personnel in the crane cab while driving.
- Transporting personnel with the lifting equipment and on the load.
- Transporting of persons with work baskets (cherry pickers), if the national regulations of the responsible work safety organization are not observed.
- Transporting loads on the chassis.
- Two hook operation without auxiliary equipment.
- Extended material handling operation.
- Crane operation on a barge if the conditions are not determined and the written release by **Liebherr Werk Ehingen GmbH** is not present.

The crane documentation must be read and used by all persons who are involved in use, operation, assembly and maintenance of the crane.

Safety systems

Special attention must be paid to the safety systems built into the crane. The safety systems must constantly be checked for functionality. The crane may not be operated if the safety systems are not working or not working correctly.

**Note**

Your motto must always be:

- ▶ **Safety first!**

The crane has been built in accordance with the applicable crane operation and driving regulations and has been approved by the relevant authorities.

Equipment and spare parts**WARNING**

Danger to life if original equipment parts are **not** used!

If the crane is operated with equipment parts, which are **not** original, then the crane can fail and cause fatal accidents!

Crane components can be damaged!

- ▶ Operate the crane only with original equipment parts!
- ▶ Crane operation with equipment parts, which do **not** belong to the crane is prohibited!
- ▶ If there is any doubt about the origin of equipment parts, contact Liebherr Service!

**WARNING**

The crane permit and the manufacturer's warranty will become void!

If any original installed parts are modified, manipulated or replaced (e.g. removal of parts, installation of non-original Liebherr parts), both the crane permit and the manufacturer's warranty will become void.

- ▶ Leave installed original parts unchanged!
- ▶ Do not remove installed original parts!
- ▶ Use only Original Liebherr spare parts!
- ▶ If there is any doubt about the origin of spare parts, contact Liebherr Service!

For ordering equipment and spare parts, always keep the crane number handy and provide it.

Definition of directional data for mobile cranes

Driving forwards: Driving with the driver's cab on the front.

Driving in reverse: Driving with the taillights of the crane chassis on the front.

Front, rear, right, left in the **driver's cab** refer to the crane chassis. The driver's cab is always in the front.

Front, rear, right, left in the **crane operator's cab** refer to the superstructure. Front is always in direction of the placed down boom.

Definition of directional data for crawler cranes

Driving forwards: Driving forward from the view of the crane operator seated in the crane cab. Turntable in 0° or 180° position.

Driving in reverse: Driving backward from the view of the crane operator seated in the crane cab. Turntable in 0° or 180° position.

Front, rear, right, left always orient themselves on the **crawler track** from the position of the chain tension devices. The chain tension devices on the crawler track are always on the front.

Front, rear, right, left refer to the direction of view of the crane operator seated in the **crane cab**. Front is always in direction of the placed down boom.

Optional equipment and functions

The equipment marked with * and the functions are optionally available and are **not** part of the standard crane (optional equipment).

Conversion chart**Note**

- ▶ If the crane is used in countries where US-units are customary, you can use the conversion factors in this chart for conversion of metric measuring units into US-units!

	Unit of Measure	Multiply by	To obtain
Length	millimeter (mm)	0.03937	inch (in)
	millimeter (mm)	0.00328084	foot (ft)
	meter (m)	39.37	inch (in)
	meter (m)	3.28084	foot (ft)
	meter (m)	1.09361	yard (yd)
	kilometer (km)	0.62137	mile (mi)
Area	square centimeter (cm ²)	0.155	square inch (in ²)
	square meter (m ²)	10.7639	square foot (ft ²)
	square meter (m ²)	1.196	square yard (yd ²)
	square kilometer (km ²)	0.3861	square mile (mi ²)
Volume	cubic centimeter (cm ³)	0.06102	cubic inch (in ³)
	cubic meter (m ³)	35.3147	cubic foot (ft ³)
	cubic meter (m ³)	1.308	cubic yard (yd ³)
	liter (L)	61.024	cubic inch (in ³)
	liter (L)	0.035	cubic foot (ft ³)
	liter (L)	0.264	gallon (U.S.) (gal)
Weight	gram (g)	0.03527	ounce (oz)
	kilogram (kg)	2.20462	pound (lb)
	metric ton (t)	2204.62262	pound (lb)
	metric ton (t)	1.102	short tons (U.S.)
Mass divided by length	kilogram per meter (kg/m)	0.055998	pound per inch (lb/in)
	kilogram per meter (kg/m)	0.67197	pound per foot (lb/ft)
Force	newton (N)	0.2248	pound-force (lbf)
	kilonewton (kN)	224.809	pound-force (lbf)
	kilonewton (kN)	0.2248	kip (1 kip = 1000 lbf)
Torque	newton meter (N·m)	8.85075	pound-force inch (lbf·in)
	newton meter (N·m)	0.73756	pound-force foot (lbf·ft)
Power	horsepower (metric)	0.73549	kilowatt (kW)
	horsepower (metric)	0.98632	horsepower (U.K.)
	kilowatt (kW)	1.34102	horsepower (U.K.)
Pressure	kilopascal (kPa)	0.01	bar (bar)
	kilopascal (kPa)	0.1450377	pound-force per square inch (psi)
	bar (bar)	14.50377	pound-force per square inch (psi)
	newton per square centimeter (N/cm ²)	1.450377	pound-force per square inch (psi)
	newton per square meter (N/m ²)	0.0001450377	pound-force per square inch (psi)
Speed	meter per second (m/s)	39.37	inch per second (in/s)
	meter per second (m/s)	3.28084	foot per second (ft/s)
	kilometer per hour (km/h)	0.62137	mile per hour (mi/h)

	Unit of Measure	Multiply by	To obtain
	liter per minute (l/min)	0.26417	gallon per minute (gal/min)
Temperature	degree Celsius (°C)	$([°C] \cdot 1.8) + 32$	degree Fahrenheit (°F)
	kelvin (K)	$([K] \cdot 1.8) - 459.67$	degree Fahrenheit (°F)

Conversion chart version 1

Contents

1 Description of crane	25
1.01 Terminology	26
1 Crane components	27
2 Auxiliary boom	29
1.02 Product description	30
1 Crane chassis	31
2 Crane superstructure	32
3 Auxiliary equipment	33
1.03 Technical data	35
1 Dimensions	37
2 Support	37
3 Tires	38
4 Weights	38
5 Workplace-related emission value	38
6 Vibrations	39
7 Speeds	39
8 Rope diameter	40
9 Lifting heights	40
2 Safety	45
2.01 Traffic regulations	46
1 Traffic regulations	47
2.01.10 General traffic regulations	48
1 General traffic regulations	49
2.01.20 National traffic regulations	51
1 National traffic regulations	53
2.02 Break-in instructions	54
1 Break-in instructions	55
2.03 Job planning	56
1 Planning crane operation	57

2.04 General safety technical guidelines	58
1 General	59
2 Emergency exit	67
3 Checking the rigging and fastening points	71
4 Personal protective equipment	73
5 Use of single-stranded height safety equipment, illustration 1	79
6 Use of double-stranded height safety equipment, illustration 2	79
7 Securing the assembly personnel against falling	79
8 Rescuing the assembly personnel	81
9 Documentation	81
10 Identification	81
11 Crane operator responsibilities	81
12 Selecting the location, illustrations 1 to 3	87
13 Slopes and excavations, illustrations 4 and 5	90
14 Permissible ground pressures	90
15 Support	93
16 Checking the safety measures	95
17 Endangering air traffic	95
18 Grounding	96
19 Consideration of wind conditions	96
20 Working in the vicinity of transmitters	107
21 Dangers when working together with several cranes	109
22 Hand signals for guidance	110
23 Crane operation with a load	118
24 Lifting of personnel	121
25 Crane operation in case of thunderstorms	122
26 Safety notes for external power feed (100 V AC to 400 V AC)	122
27 Welding work on the load	123
28 Interruption of crane operation.	124
29 Resumption of crane operation	125
30 Ending crane operation	125
31 Turning / driving in reverse	126
32 Parking the vehicle	126
33 Safety guidelines for ladders	129

2.05 Signs on the crane	136
1 Signs	137
2.05.10 Labeling of load lifting equipment	167
1 Identifications on the hook block or load hooks	169
2 Identifications on single hook or double hook	170
3 Identifications on auxiliary weights	171
2.06 Antifall guards on the crane	173
1 Personal protective equipment	175
2 Preparing the ladder	177
3 Attachment and fastening points	179
4 Railings on the crane superstructure	183
2.07 Access to the crane	184
1 Components on the crane	185
2 Ascent and descent on the crane chassis	189
3 Walking and stepping surfaces	199
2.08 Working in low temperatures	200
1 Working in low temperatures	201
2 Working in ambient temperatures up to -40 °C	201
3 Working in ambient temperatures below -40 °C	209
2.10 General safety technical notes for driving with dolly	211
1 Travel operation with dolly	213
3 Crane chassis operation	223
3.01 Operating and control instruments on the crane chassis	224
1 Operating and monitoring elements	225
2 Camera - monitor*	229
3 Trip recorder*	231
4 Keyboard	233
5 Display unit	237
3.02 Before starting to travel	244
1 General checks before starting to travel	245
2 Work station - Driver's cab	253
3.03 Axle suspension system	262
1 Crane vehicle axles suspended	263

2	Crane vehicle axles blocked	267
3	Level regulation	271
3.04	Travel operation	282
1	Driving configurations of the crane	283
2	Starting and stopping the engine	287
3	Driving the crane vehicle	293
4	Creeper gear (off-road gear / maneuvering or taxiing mode)	331
5	Differential locks	337
6	Steering	343
3.05	Crane at the job site	350
1	General	351
2	Bluetooth™ Terminal (BTT)	359
3	Supporting from the crane operator's cab	395
4	Before leaving the jobsite	415
3.07	Towing the crane	416
1	Towing	417
3.80	Transport of crane and crane components	418
1	Transporting the crane	419
4	Operation of crane superstructure	427
4.01	Operating and control instruments on the crane superstructure	428
1	Operating and control instruments	429
2	Operating elements on camera - monitor*	433
3	Operating elements on control consoles	435
4	Operating elements on the operating and control unit (BKE)	463
4.02	LICCON computer system	470
1	General	471
2	LICCON computer system boot up	473
3	Operating elements of the LICCON computer system	475
4	“Set up” program	479
5	“Crane operation” program	497
6	“Telescoping” program	561
7	The “Working range limitation” program*	565
8	The “Support force monitoring” program*	567

9	The settings window "Speed reduction master switch"	575
10	Power-Save and Stand-by mode in the LICCON computer system	583
4.03	Crane start up and taking the crane out of service	588
1	Checks before start up	589
2	Work station - Crane operator's cab	595
3	Preheating the hydraulic oil with the Hydraulic oil preheating*	613
4	Starting the engines from the crane operator's cab	617
5	Engine regulation from the crane driver's cab	629
6	Detaching / attaching the hook block on the fastening point	633
7	LICCON computer system after engine start	645
4.04	Safety equipment	648
1	General	649
2	Quick test Crane geometry	649
3	Quick test Overload protection	649
4	LICCON computer system	650
5	Safety devices on the crane	655
4.05	Crane operation	666
1	General	667
2	LICCON computer system	673
3	Luffing	675
4	Lifting / lowering	681
5	Turning	687
6	Telescoping	699
4.06	Rope reeving	726
1	Wire ropes and rope end connections	727
2	Reeving the hoist rope with the auxiliary reeving rope	729
3	Reeving the hook block in and out	733
4	Securing and removing the load hook*	739
5	Attaching / removing the hoist limit switch weight	743
6	Assembling / disassembling the wedge lock	747
7	Crane operation with auxiliary block* on the telescopic boom	749
8	Rope reeving	749
4.07	Counterweight	750
1	General	751

2	Assembly	757
3	Disassembly of the counterweight plates	763
4.08	Working with a load	770
1	Safety technical instructions for working with a load	771
2	Checks before starting to work with the crane	772
3	Crane movement - Telescoping	773
4	Taking on a load	775
5	Crane operation	781
4.15	Reeving plans	783
1	Reeving plans	785
4.20	Procedure for shut off of crane movements	802
1	General	803
2	Instructions to resume the crane movement	819
5	Equipment	859
5.01	Safety technical notes for assembly and disassembly	860
1	Checking the retaining elements	861
2	Rope pulleys	861
3	Checking the ropes	861
4	Control measures	862
5	Dangerous conditions without shut off	864
6	Transporting components	865
7	Pneumatic springs for assembly support of components	865
8	Manual rope winches for assembly support of components	865
9	Weights	866
10	Guy rods	866
11	Auxiliary guying	867
12	Bypassing the overload protection	867
13	Bypassing the hoist top shut off	869
14	Assembly / disassembly	871
15	Erection / take down	908
5.02	Folding jib - TK	910
1	General	911
2	Assembling the folding jib	925

3	Reeving in the hoist rope	955
4	Changing over mechanical folding jib from 0° to 22.5° or 45°	957
5	Hydraulic connections	969
6	Electrical connections	977
7	Erection	985
8	Adjusting the folding jib angle hydraulically*	987
9	Changing over mechanical folding jib from 22.5° or 45° to 0°	989
10	Unreeving the hoist rope	997
11	Removing the folding jib	999
5.09	Winch 2	1022
1	General	1023
2	Assembly	1023
3	Disassembly	1025
5.10	Boom nose	1026
1	General	1027
2	Assembly	1029
3	Disassembly	1035
5.12	Auxiliary boom	1040
1	General	1041
2	Assembling the auxiliary boom	1045
3	Reeving in the hoist rope	1069
4	Changing the mechanical auxiliary boom from 0° to 22.5° or 45°	1071
5	Hydraulic connections	1077
6	Electrical connections	1079
7	Erection	1083
8	Adjusting the auxiliary boom angle hydraulically*	1085
9	Changing the mechanical auxiliary boom from 22.5° or 45° to 0°	1087
10	Unreeving the hoist rope	1091
11	Disassembling the auxiliary boom	1093
5.14	Telescopic boom disassembly/assembly, luffing cylinder on the crane superstructure	1114
1	General	1115
2	Removal of telescopic boom	1115
3	Installation of telescopic boom	1127

5.17 Sliding beam disassembly / assembly	1138
1 General	1139
2 Remove sliding beams with auxiliary crane*	1141
3 Removing the rear sliding beams with own crane*	1143
4 Installing the sliding beams with the auxiliary crane*	1151
5 Installing the rear sliding beams with own crane*	1153
5.19 Hook blocks	1159
1 Minimum required hook block weight	1161
2 Procedure in case of slack rope	1164
3 Hook block overview	1167
4 Transporting the hook block / load hook	1169
5 Installing the single blocks	1171
6 Removing the single blocks	1175
5.25 Telescopic boom extension	1178
1 General	1179
2 Assembly	1181
3 Establishing the electrical / hydraulic connections	1183
4 Erection	1183
5 Disassembly	1185
5.31 Bluetooth™ Terminal (BTT)	1188
1 Display / operating element Bluetooth™ Terminal	1189
2 The Bluetooth™ Terminal (BTT) is plugged into the instrument console	1203
3 The Bluetooth™ Terminal (BTT) removed from its charging cradle	1209
4 Operation of the Bluetooth™ Terminal (BTT)	1243
6 Additional equipment	1249
6.01 Heater / engine preheating / Air conditioning system Driver's cab	1250
1 Heating the driver's cab	1251
2 Maintaining the engine independent heater	1273
6.02 Heater / engine preheating / Air conditioning system Crane operator's cab	1275
1 Heating the crane operator's cab	1277
2 Menu "Climate control settings"	1277
3 Maintaining the engine independent heater	1311
6.04 Support beam monitoring / sliding beam monitoring	1313