# LG938L轮式装载机 零部件图册 LG938L WHEEL LOADER PARTS CATALOG

Full download: http://manualplace.com/download/liugong-9381-wheel-loader-parts-manual/

**Liugong 9381 Wheel Loader Parts Manual** 

山东临工工程机械有限公司 SHANDONG LINGONG CONSTRUCTION MACHINERY CO.,LTD.

#### 配件与服务Spare parts and services

对于山东临工机器的所有者来说,只有山东临工配件和服务才能够使您的 机器更好地保持原有的特性。

For the owner of the machines of SDLG, only the space parts and services of SDLG can mark your machine to better maintain the original features.

只有山东临工才能够为您提供完美匹配且优质纯正的配件和对您的机器 了如指掌的专业维修人员。这样才能保证及其可持续的高产能和更长的使用寿 命。

Only SDLG is able toprovide you with the perfect match of pure quality spare parts for your machine and knowledge of professional maintenance staff. Only in this way it can ensure sustainable high productivity and longer service life.

#### LG938L轮式装载机 零部件图册 LG938L WHEEL LOADER PARTS CATALOG

2009 年 12 月 第 1 版 第 1 次印刷

2009-12 Version 1 Printed 1

山 东 临 工 程 机 械 有 限 公 司 SHANDONG LINGONG CONSTRUCTION MACHINERY CO.,LTD.

地址: 中国·临沂经济开发区临工工业园

Add: Lingong Industry Park, Linyi Economic Deve I opment Zone, Shandong, china

电话: 86-0539-8785668 Tel: 86-0539-8785624/86-0531-66590955 传真: 86-0539-8785698 Fax: 86-0539-8785618/86-0531-66590959

技术服务: 86-0539-8785800 400-6587999 Web: www.sdlg.cn

## 前言

LG938L轮式装载机零部件图册,是为了方便用户使用、维修和保养而绘制的,以供在使用过程中查阅及参考,也可帮助用户了解本机的结构和装配关系。发动机的零部件详见其随机资料,本图册不再绘出。

本图册按系统划分绘制出了各零部件的图形及相 互装配关系。凡装机后不可拆卸的部件(如焊接件、铆 合件),只标出部件代号,不另列其组成零件。本图册 明细表采用中英文对照编排。

本图册主要根据标准型产品(订货号E3815215A39) 编绘,其它非标准配置,可参照执行,详情请咨询山东 临工、或当地经销商、或登录山东临工网站查询。随着 科技的进步,产品将会不断改进,故本图册的内容可能 会有部分与以后的产品不一致,恕不另行通知。敬请用 户在定购配件时,指明所购整车的出厂日期和编号。

编者

2009年12月

### **FOREWORD**

THIS PARTS LIST OF LG938L WHEEL LOADER IS MADE FOR THE CONVENIENCE OF USERS TO USE, REPAIR AND MAINTAIN THE MACHINE, AND IT CAN BE REFERED IN THE PROCESS OF USING. IT CAN ALSO HELP THE USERS TO BE FAMILIAR WITH THE CONSTRUCTION AND ASSEMBLY RELATION OF THE MACHINE. THE PART OF THE ENGINE IS SHOWED IN DETAIL IN ITS STRUCTION HANDBOOK. SO THIS CATALOG DOES NOT CONTAIN THE ENGING PART LIST.

THE CATALOG CONTAINS THE PART DRAWINGS OF DEFERENT ASSEMBLIES, SHOWING THE SHAPE OF THE PARTS AS WELL AS THE ASSEMBLING RELATION. THE COMPONENTS WHICH CAN NOT BE TAKEN APART (SUCH AS THE WELDMENT OR RIVETED ASSEMBLIES) ARE INDICATED ONLY BY THEIR COMPONET NUMBERS WITHOUT THE CONSISTING PART NUMBERS. THE LIST IN THE CATALOG IS ARRANGED BY CHINESE VERSUS ENGLISH.

THIS CATALOG IS MAINLY BASED ON THE STANDARD PRODUCT (ORDER NUMBER E3815215A39) THE OTHERS OF NONSTANDARD PRODUCT CAN REFER THE STANDARD PRODUCT, AND THE DETAILED INFORMATION CAN BE KNOWN FROM SHANDONG LINGONG, THE LOACAL DEALER OR LINGONG WEBSITE ALTERATIONS IN DESIGN ARE NECESSARILY WITH THE THECHNICAL DEVELOPMENT SO SOME CONTENT IN THE CATALOG PROBABLY IS NOT CONSISTANT WITH THE FUTURE PRODUCTS, AND THIS WILL NOT NOTICE USERS. THEREFORE WHEN ORDERING SPARE PARTS, USERS ARE KINDLY REQUSETED TO INFORM US THE MANUFACTURING DATE AND BATCHNUMBER OF THE WHEEL LOADER.

THE COMPILER

2009. 12

## 目录 CONTENTS

## A. 发动机系统

Α.	<b>DIESEL</b>	<b>ENGINE</b>	<b>SYSTEM</b>

1	<b></b>	A1-2901001605
I	DIESEL ENGINE ASS'Y ·····	A1-2901001605
	然油箱总成	A2-2902000758
I	FUEL TANK ASSEMBLY	A2-2902000758
ŧ	<b></b>	A3-2903001003
I	RADIATOR ASSEMBLY ·····	A3-2903001003
ì	由门操纵机构	A4-2901001188
	GOVERNOR CONTROL SYSTEM ·····	A4-2901001188
1	参数牌组AP 9365-01ZZ ······	A5-4110000555
I	AGENCY,APPROVAL ·····	A5-4110000555
).	AGENCY,APPROVAL ····································	A6-4110000555
I	BLOCK,ENGINE ····································	A6-4110000555
}	摇臂组BP 9710ZZ ······	A7-4110000555
I	LEVER, ROCKER	A7-4110000555
ļ	5. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1.	A8-4110000555
I	FOLLOWER,CAM ·····	A8-4110000555
Ī	齿轮室组BP 9807-01ZZ ·······	A9-4110000555
	COVER,FRONT GEAR ·····	A9-4110000555





空压机冷却水管组CC9023-03ZZ ······	A10-4110000555
PLUMBING,CPR COOLANT	A10-4110000555
推杆室盖组CM 9016ZZ ······	A11-4110000555
COVER, CAM FOLLOWER ·····	A11-4110000555
空压机组CP 9002-03ZZ ·····	A12-4110000555
COMPRESSOR,AIR ·····	A12-4110000555
空压机接头组CP9002-1ZZ ·····	A13-4110000555
CONNECTION ·····	A13-4110000555
扭矩减震器组DA 9208ZZ ······	A14-4110000555
DAMPER,VIBRATION ·····	A14-4110000555
电子附件组EA 9099ZZ ······	A15-4110000555
ACCESSORIES,ELECTRICAL	A15-4110000555
节温器组EC 9052ZZ ······	A16-4110000555
THERMOSTAT ·····	A16-4110000555
发电机组EE 9314ZZ ······	A17-4110000555
ALTERNATOR ·····	A17-4110000555
发电机安装件组EH97541ZZ ···································	A18-4110000555
MOUNTING,ALTERNATOR ·····	A18-4110000555
发电机驱动件组EH97543ZZ ···································	A19-4110000555
DRIVE,ALTERNATOR ·····	A19-4110000555

温度传感器组EO 9141ZZ ··································	A20-4110000555
SENSOR,COO TEMPERATURE	A20-4110000555
标签组ED9071 ·····	A21-4110000081
DOCUMENTATIO,ENG IDT ·····	A21-4110000081
风扇驱动件组FA 9516ZZ ······	A21-4110000555
DRIVE,FAN ·····	A21-4110000555
风扇驱动件组FA 9702ZZ ······	A22-4110000555
DRIVE, FAN	A22-4110000555
增压补偿器连接管组FE 9701-03ZZ ···································	A23-4110000555
PLUMBING,AIR FUEL CONTRO	A23-4110000555
燃油滤清器组FF 9001-01ZZ ···································	A24-4110000555
FILTER,FUEL ·····	A24-4110000555
燃油滤清器组FF 9702-04ZZ ···································	A25-4110000555
FILTER,FUEL ·····	A25-4110000555
飞轮壳组FH 9020ZZ ······	A26-4110000555
HOUSING,FLYWHEEL ····	A26-4110000555
燃油泵连接件组FP 9764-02ZZ ······	A27-4110000555
COUPLING,FUEL PUMP ·····	A27-4110000555
燃油喷射泵组FP L006ZZ ······	A28-4110000555
PUMP, FUEL INJECTION ·····	A28-4110000555





输油泵组FS 9004-02ZZ ······	A29-4110000555
PUMP,LIFT ·····	A29-4110000555
燃油管路组FT 9786-03ZZ ······	A30-4110000555
PLUMBING,FUEL	A30-4110000555
断油电磁阀组FV 9420ZZ ·····	A31-4110000555
VALVE,FUEL SHUTOFF ····	A31-4110000555
飞轮组FW 9016ZZ ······	A32-4110000555
FLYWHEEL ····	A32-4110000555
发动机吊耳组LA 9007ZZ ··································	A33-4110000555
BRACKET,LIFTING	A33-4110000555
机油冷却器组LC 9020ZZ ······	A34-4110000555
COOLER,ENGINE OIL ·····	A34-4110000555
机油标尺组LG90235ZZ ······	A35-4110000555
GAUGE,OIL LEVEL ·····	A35-4110000555
机油泵组LP 9064ZZ ······	A36-4110000555
PUMP,LUBRICATING OIL ·····	A36-4110000555
缸体加油附件组OB 9702ZZ	A37-4110000555
COVER,CYLINDER BLOCK ·····	A37-4110000555
油底壳组OP 9005ZZ ······	A38-4110000555
PAN,OIL ····	A38-4110000555

油底壳安装件组OP 9702ZZ ···································	A39-4110000555
MOUNTING,OIL PAN ·····	A39-4110000555
气缸盖组合件PP 9980-01ZZ ······	A40-4110000555
HEAD,CYLINDER ·····	A40-4110000555
增压器组PP L012ZZ ······	A41-4110000555
TURBOCHARGER ·····	A41-4110000555
性能件组PP L013ZZ ······	A42-4110000555
PERFORMANCE PARTS	A42-4110000555
起动机安装件组SM 9712ZZ ······	A43-4110000555
MOUNTING,STARTING ·····	A43-4110000555
易损件组SS 9530ZZ ······	A44-4110000555
KIT,ENGINE INSTALLATION ·····	A44-4110000555
随机件组SS 9643ZZ ·······	A45-4110000555
KIT,ENGINE INSTALLATION ·····	A45-4110000555
增压器安装件组TB 9701-01ZZ ···································	A46-4110000555
LOCATION,TURBOCHARGER ·····	A46-4110000555
增压器安装件组TB L004ZZ ······	A47-4110000555
LOCATION,TURBOCHARGER ·····	A47-4110000555
节温器组TH 9037ZZ ······	A48-4110000555
HOUSING,THERMOSTAT ·····	A48-4110000555





服务工具组TO L003ZZ ······	A49-4110000555
TOOL,SERVICE ·····	A49-4110000555
增压器管路组TP97314ZZ ···································	A50-4110000555
PLUMBING, TURBOCHARGER ·····	A50-4110000555
气阀室罩组VC 9023ZZ ······	A51-4110000555
COVER,VALVE ·····	A51-4110000555
附件驱动皮带轮组PA 9001 ······	A51-4110000081
PULLEY,ACCESSORY ·····	A51-4110000081
预热管路组WH 9128ZZ ······	A52-4110000555
VENT,ENGINE COOLANT	A52-4110000555
进水连接管组WI 9226ZZ ······	A53-4110000555
CONNECTION, WATER INLET	A53-4110000555
进水连接管组WI 9701ZZ ······	A54-4110000555
CONNECTION, WATER INLE	A54-4110000555
水泵驱动件组WP 9617ZZ ······	A55-4110000555
PUMP,WATER ····	A55-4110000555
油漆组SS 9471 ·····	A59-4110000081
PAINT	A59-4110000081

### C. 变速箱系统

#### C. TRANSMISSION SYSTEM

变速箱系统	C1-2905001043
TRANSMISSION SYSTEM	· C1-2905001043
箱体部件	C2-4110000076
CASE PARTS ·····	C2-4110000076
输入部件	C3-4110000076
INPUT PARTS ·····	C3-4110000076
输出部件	C4-4110000076
OUTPUT PARTS ·····	C4-4110000076
操纵部件 ·······CONTROL PARTS ······	C5-4110000076
CONTROL PARTS ·····	C5-4110000076
转速表部件	C6-4110000076
SPEED INDICATOR PARTS	C6-4110000076
惰轮部件	C7-4110000076
IDLER PARTS	C7-4110000076
停车制动器部件	C8-4110000076
STOP BRAKE STAFF PARTS	C8-4110000076
压力阀部件	C9-4110000076
PRESSURE VALVE PARTS	C9-4110000076
吸油管部件	C10-4110000076
OIL SUCTION TUBE PARTS	C10-4110000076





发动机连接部件	C11-4110000076
ENGINE CONNECTION PARTS	C11-4110000076
加油管部件	C12-4110000076
OIL FILLING TUBE PARTS	C12-4110000076
滤油器部件	C13-4110000076
OIL FILTER PARTS	C13-4110000076
离合器部件	C14-4110000076
CLUTCH PARTS	C14-4110000076
离合器部件	C15-4110000076
CLUTCH PARTS	C15-4110000076
离合器部件	C16-4110000076
CLUTCH PARTS	C16-4110000076
PTO1部件P.T.02 ·····	C17-4110000076
PTO1 PARTS P.T.02 ·····	C17-4110000076
PTO2部件P.T.02 ·····	C18-4110000076
PTO2 PARTS P.T.02 ·····	C18-4110000076
操纵阀部件	C19-4110000076
CONTROL VALVE PARTS	C19-4110000076

## E. 驱动桥系统

#### E. AXLE SYSTEM

	前主传动总成	E2-2050900006
	FRONT AXLE MAIN DRIVE ASSEMBLY	E2-2050900006
	轮边减速器总成	E3-2050900004
	FINAL DRIVE ASSEMBLY	E3-2050900004
	后主传动总成	E6-2050900033
	REAR AXLE MAIN DRIVE ASSEMBLY	E6-2050900033
	制动钳(371328)	E8-4120001739
	DISK BRAKE(371328)	E8-4120001739
	DISK BRAKE(371328)	E9-2907000915
	AXLE SYSTEM ····	E9-2907000915
	轮胎GB2980-23.5-25(520101) ······	E11-4110000003
	TIRE GB2980-23.5-25 (520101)	E11-4110000003
F.	工作装置液压系统	
F.	IMPLEMENT HYDRAULIC SYSTEM	
	液压操纵总成	F1-2912001647
	HYDRAULIC CONTROL ASSEMBLY	F1-2912001647
	工作泵总成	F2-2911000828
	WORKING PUMP ASSEMBLY	F2-2911000828
	举升缸总成	F3-2913000829
	LIFTING CYLINDER ASSEMBLY	F3-2913000829





	转斗缸总成	F4-2914000836
	TILT CYLINDER ASSEMBLY	F4-2914000836
	液压油箱总成	F5-2910000950
	HYDRAULIC TANK ASSEMBLY	F5-2910000950
	转斗油缸(371368)	F7-4120001083
	DUMP CYLINDER ····	F7-4120001083
	动臂油缸 (371368)	F9-4120000867
	LIFT ARM CYLINDER ····	F9-4120000867
	多路阀(331001)	F11-4120001054
	多路阀(331001) ··································	F11-4120001054
Η	. 工作装置	
	. WORKING EQUIPMENT	
	工作装置	H3-2915000876
	WORKING EQUIPMENT ····	H3-2915000876
Γ.		
•	转向系统	
[.	STEERING SYSTEM	
[.	STEERING SYSTEM 转向泵总成 ····································	
[.	STEERING SYSTEM 转向泵总成	I1-2919000780
[.	STEERING SYSTEM 转向泵总成	I1-2919000780 I2-2920000806
[.	STEERING SYSTEM 转向泵总成	I1-2919000780 I2-2920000806

	转向缸总成	I3-2921000401
	STEERING CYLINDER ASSEMBLY	I3-2921000401
	转向油缸 (371368)	I5-4120001004
	STEERING CYLINDER	15-4120001004
J.	制动系统	
J.	BRAKE SYSTEM	
	行车制动系统	J1-2922000768
	SERVICE BRAKE ASSEMBLY	J1-2922000768
	储气罐	J2-2922000053
	AIR RESERVOIR ····	J2-2922000053
	加力泵(340201)	J3-4120000090
	BRAKE BOOSTER	J3-4120000090
	BRAKE BOOSTER ····································	J4-2923000758
	PARKING BRAKE SYSTEM ····	J4-2923000758
K	. 车架	
K	. FRAME	
	前车架总成	K1-2925000419
	FRONT FRAME	K1-2925000419
	后车架总成	K2-2926000837
	REAR FRAME ASSEMBLY	K2-2926000837





	配重铁总成	K5-2928000751
	COUNTER WEIGHT	K5-2928000751
L	. 驾驶室	
L	CAB GROUP	
	驾驶室总成	L1-2929000934
	CAB ASSEMBLY ·····	L1-2929000934
	驾驶室	L2-2929000947
	CAB ·····	L2-2929000947
	操作台架	L3-2931001417
	OPERATE BENCH ·····	L3-2931001417
	座椅总成	L4-2930000772
	SEAT ASSEMBLY	L4-2930000772
	操纵箱	L5-2932000957
	OPERATE BOX ·····	L5-2932000957
M	. 覆盖件系统	
M	I. CONVER SYSTEM	
	发动机罩总成	M1-2933002259
	ENGINE HOOD ASSEMBLY	M1-2933002259
	左台架总成	M2-2934001213
	LEFT BENCH ASSEMBLY	M2-2934001213

	右台架总成	M3-2934000850
	RIGHT BENCH ASSEMBLY	M3-2934000850
	左、右灯架	M4-2934001641
	LEFT RIGHT LAMP FRAME	M4-2934001641
	左、右挡泥瓦	M5-2934001641
	LEFT RIGHT FENDER ····	M5-2934001641
	电瓶箱总成	M6-2934001641
	BATTERY CASE ASSEMBLY	M6-2934001641
	下梯总成	M7-2934001219
	DOWN LADDER ASSEMBLY	M7-2934001219
	标志与标识	M8-2936001199
	SIGN AND LOGO ·····	M8-2936001199
N	. 空调系统	
N	. AIR CONDITIONER SYSTEM	
	暖风机	N1-2935000888
	WARMING MACHINE	N1-2935000888
	空调系统	N2-2935000945
	AIR CONDITIONER SYSTEM ·····	N2-2935000945
	暖风机	N3-4190000917
	WARMING MACHING	N3-4190000917





## O. 电气系统

#### O. ELECTRIC SYSTEM

电气系统	O1-2937001551
ELECTRIC SYSTEM ·····	O1-2937001551
仪表盘总成	O2-2937001549
PANEL ASSEMBLY	O2-2937001549
仪表台总成	O3-2937001271
PANEL ASSEMBLY ·····	O3-2937001271

# A 发动机系统 DIESEL ENGINE SYSTEM

山东临工工程机械有限公司 SHANDONG LINGONG CONSTRUCTION MACHINERY CO.,LTD.



Full download: http://manualplace.com/download/liugong-9381-wheel-loader-parts-manual/

Liugong 9381 Wheel Loader Parts Manual

#### 发动机总成 DIESEL ENGINE ASS'Y

