



OPERATOR'S HANDBOOK

Mack® TerraPro™ Series
(MRU Series)

21394655

© Mack Trucks, Inc. 2010
Printed in U.S.A.



Mack® MRU Series

OPERATOR'S HANDBOOK

21394655
April 2010



Foreword

This manual contains information concerning the operation and function of the Mack Link System. The information in this manual applies to vehicles built April 2010 and later. Please keep this manual in the vehicle at all times.

Note: Illustrations in this manual are used for reference only and may differ slightly from the actual vehicle. However, key components addressed in this document are represented as accurately as possible.

The National Highway Traffic Safety Administration (NHTSA) and Mack Trucks, Inc. should be informed immediately if you believe that the vehicle has a defect that could cause a crash, injury or death.

Contact NHTSA by calling the Auto Safety Hotline at 1 (888) 327-4236, by writing to NHTSA, U.S. Department of Transportation, Washington, DC 20590, by TTY at 1 (800) 424-9153, or visit their website at www.nhtsa.dot.gov.

Mack Trucks Inc.
Greensboro, NC USA

Order number: PV776-21394655

©2010 Mack Trucks Inc., Greensboro, NC USA

All rights reserved. No part of this publication may be reproduced, stored in retrieval system, or transmitted in any forms by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Mack Trucks Inc.

Contents

INTRODUCTION.....	1
TO THE OWNER.....	1
In Appreciation	1
About This Handbook.....	2
THE VEHICLE.....	3
Basic Configuration	3
Vehicle Management and Control System (V-MAC®).....	3
COMPONENT IDENTIFICATION	4
VIN Locations.....	4
Engine Identification.....	5
Engine Information Plate	6
Clean Idle Engines	7
Transmission Identification.....	8
WARRANTY INFORMATION	11
Air Brake System.....	11
ENGINE GASEOUS EMISSION CONTROL SYSTEMS	11
Emissions Control System Warranty	12
ENGINE GASEOUS EMISSIONS CONTROL SYSTEM WARRANTY	14
FEDERAL EMISSION REQUIREMENTS.....	15
EMISSION CONTROL SYSTEMS WARRANTY — CALIFORNIA	15
Emissions Control System Warranty	17
SERVICE LITERATURE	21
– MACK Class 8 –Components Service Manual	21
– Class 8 – Custom Collated Service Manual on CD	21
CUSTOMER SERVICE	22
Call 1-800-866-1177 for MACK OneCall™	22
Questions and Complaints	22
Addresses	23
Additional Assistance	23
REPORTING SAFETY DEFECTS	25
United States	25
Canada.....	25
Mexico	25
EVENT DATA RECORDING DEVICES	26
SAFETY INFORMATION	27
SAFETY STATEMENT	27
CERTIFICATION LABELS	29
Safety Certification Label	29
ADVISORY LABELS	31
Advisory Label Locations (On Vehicle)	31
TRUCK-TRACTOR CONSPICUITY.....	39
CAB ENTRY/EXIT	40
Three-Limb Contact.....	40
Driver Side	42
Passenger Side	44
Deck Plate Access.....	46

SAFETY TIPS FOR COLD WEATHER OPERATION	48
Driver Visibility	48
Cab Door Seals and Key Locks	49
Outside Mirror Heater.....	49
Air Horn Snow Shield.....	50
Emergency Reflector Kit.....	50
Fire Extinguisher (Optional).....	50
INSTRUMENTS AND CONTROLS	51
CAB INTERIOR.....	51
INSTRUMENT PANEL	52
Tell-Tales.....	52
Panel Arrangement.....	52
INSTRUMENT PANEL GAUGE LAYOUT	53
Panel A.....	53
Panel B	54
Panel C	55
Panel D	56
Panel E	57
Regeneration	63
Parked Regeneration (If Needed).....	65
DPF INHIBIT ROAD SPEED LIMITING (RSL).....	67
Function of Optional Switches.....	71
CAB CLIMATE CONTROL	74
LIGHT CONTROL PANEL	75
STEERING COLUMN.....	76
Electrical Switch	76
FLOOR PEDALS	77
MISCELLANEOUS CONTROLS	78
Dome Light	78
Air Horn	79
Fresh Air Vent	79
Accessory Power Outlets	79
PRE-TRIP INSPECTION AND DAILY MAINTENANCE.....	81
PRE-TRIP	81
Pre-Trip Inspection Quick List	81
OPERATION.....	94
.....	94
New Vehicle Break-In.....	94
WINDSHIELD WASHER RESERVOIR	96
CAB TILT OPERATION.....	97
Tilting the Cab	98
Lowering the Cab.....	100
Bleeding the Cab Tilt System	101
HOSE TENDERS	102
DOORS	103

Standard Door Panel	103
Opening the Cab Door	104
Locking the Cab Door.....	104
REMOTE KEYLESS ENTRY — (OPTIONAL).....	105
Transmitter Operations	106
Battery Replacement.....	106
SEAT BELTS	110
Seat Belt Operation	110
Fastening Seat Belt	110
Komfort® Latch System.....	113
SEAT ADJUSTMENT AND RECLINE (IF EQUIPPED).....	115
MACK ENGINE INFORMATION	115
Precautions and Warnings	115
Engine Model Designations.....	117
CRUISE CONTROL OPERATION	118
Speed Control Switches	118
Disengaging Cruise Control.....	119
MACK POWERLEASH™ ENGINE BRAKE (IF EQUIPPED).....	120
Engine Brake Switch.....	120
How the Engine Brake is Activated.....	121
Cruise Control with the MACK PowerLeash™ Engine Brake	121
ON THE ROAD WITH THE MACK POWERLEASH™ ENGINE BRAKE	123
Over Flat Terrain	123
Descending a Grade	124
On Slippery Road Surfaces.....	126
BRAKE OPERATION.....	128
Air Brake System.....	128
Automatic Slack Adjusters	129
Parking Brake System.....	129
Parking Brake Operation.....	130
Parking	130
Anti-Lock Brake System (ABS)	130
Automatic Traction Control (ATC) (If Equipped).....	134
GOOD DRIVING HABITS.....	136
Weight Ratings.....	136
Instruments.....	136
Shutting Down the Engine	136
General Observation	136
STARTING THE VEHICLE	137
General Information.....	137
Push Button Starters.....	137
Air Starters	138
Engine Warm-Up	140
Engine Idling.....	141
Shutting Down the Engine.....	141
COLD WEATHER OPERATION	144
Cold Weather Starting Tips.....	144

Engine Block Heaters	145
Winterfronts	146
COUPLING A TRAILER.....	148
UNCOUPLING A TRAILER.....	150
MOVING THE VEHICLE — GENERAL INFORMATION	152
Braking.....	152
Shifting.....	152
Engine Temperature	153
Clutch (If Equipped)	153
POWER TAKE-OFF (PTO) OPERATION	157
PTO Precautions	157
PTO Classification	158
Side-Mounted PTO Locations	158
PTO Operating Procedures	158
TRANSMISSION SHIFTING INSTRUCTIONS.....	159
Shifting Instructions for Allison Automatic Transmissions	159
MACK T306G Shifting Instructions	159
MACK TM308 Shifting Instructions.....	160
MACK TM308M Shifting Instructions	163
MACK TM309 Shifting Instructions.....	165
MACK TM309M Shifting Instructions	167
MACK T309, T309L and T309LR Shifting Instructions	169
MACK T310 Shifting Instructions	173
MACK T310M, T310ME and T310MLR Shifting Instructions	176
MACK T313-T313L-T313LR Shifting Instructions	180
MACK T31321, T313L21 and T313LR21 Shifting Instructions	185
MACK T318, T318L and T318LR Shifting Instructions	189
MACK T31821, T318L21 and T318LR21 Shifting Instructions	195
AXLES.....	201
Rear Axles Other Than MACK	201
MACK Rear Axles.....	201
Engaging the Power Divider Lockout.....	202
Mack, US10 Emissions Solution	204
DIESEL PARTICULATE FILTERS	204
Extended Idling and Aftertreatment System Conditioning	206
Exhaust Aftertreatment System	208
Safety Information	209
Exhaust Aftertreatment System Components and	210
Selective Catalytic Reduction (SCR)	210
Diesel Exhaust Fluid (DEF).....	212
Aftertreatment Diesel Particulate Filter (DPF).....	214
Aftertreatment Control Module (ACM).....	215
Aftertreatment DPF Regeneration	215
Driver Warnings and On Board Diagnostics (OBD)	217
On Board Diagnostics (OBD).....	217
Instrument Cluster.....	218

Malfunction Indicator Lamp (MIL)	219
Aftertreatment DEF Tank Level - Driver Warning & Inducement	220
Aftertreatment DEF Quality - Driver Warning & Inducement	221
Misfilling Diesel or Aftertreatment DEF Tanks.....	222
SCR Tampering - Driver Warning & Inducement	223
Warranty and Maintenance	224
Exhaust Aftertreatment System Maintenance.....	224
Engine Maintenance Intervals.....	224
MAINTENANCE AND LUBRICATION.....	225
MAINTENANCE INTRODUCTION	225
TURBOCHARGER.....	225
CLEANING YOUR VEHICLE.....	226
Exterior Washing	226
Cab and Hood	228
Chassis	228
Cab Interior	229
Waxing	229
Polishing	229
Winter Warnings	229
TOWING	230
ENGINE OIL LEVEL CHECK.....	231
Power Steering Reservoir	232
FUEL TANK.....	234
Fuel Tank Cap	234
FUELING	235
BioDiesel.....	236
B5 Approval For Mack US10 Certified Products.....	236
COOLING SYSTEM.....	238
Coolant Level Check.....	238
Draining the Cooling System.....	239
Refilling the Cooling System	239
Protecting the Cooling System	240
Cooling System Maintenance	241
Accessory Drive Belt Routing	242
Accessory Drive Belt Routing	242
HEADLIGHTS	244
Bulb Replacement	244
WHEELS	244
Wheel Inspection	244
Tires	245
BATTERY.....	248
Jump-Starting Engine.....	248
ELECTRICAL	249
Circuit Breaker and Relay Panels	249
Electrical Grease	253

METRIC CONVERSIONS.....	256
METRIC CONVERSIONS256

Safety Information

IMPORTANT: Before driving this vehicle, be certain that you have read and that you fully understand each and every step of the driving and handling information in this manual. Be certain that you fully understand and follow all safety warnings.

IT IS IMPORTANT THAT THE FOLLOWING INFORMATION BE READ, UNDERSTOOD AND ALWAYS FOLLOWED.

The following types of advisories are used throughout this manual:



DANGER

Danger indicates an unsafe practice that could result in serious personal injury or death. A danger advisory banner is in **white** type on a **black** background with a **black** border.



WARNING

Warning indicates an unsafe practice that could result in personal injury. A warning advisory banner is in **black** type on a **gray** background with a **black** border.



CAUTION

Caution indicates an unsafe practice that could result in damage to the product. A caution advisory is in **black** type on a **white** background with a **black** border.

Note: Note indicates a procedure, practice, or condition that must be followed in order for the vehicle or component to function in the manner intended.

TO THE OWNER

In Appreciation

Thank you for buying a MACK® vehicle. With proper care and maintenance, your new Mack® TerraPro™ MRU model will help you gain a competitive edge with its fuel-efficient drivetrain combinations, low maintenance, extended service intervals and, eventually, good resale value.

The Mack® TerraPro™ MRU model is available for a wide range of applications. Because of this versatility, drivetrains and components vary and operating instructions may differ from one model to another. While every effort has been made to cover all current arrangements, do not hesitate to consult your MACK distributor if a question arises. Honest, personal service is standard with every MACK sale.



CAUTION

Mack Trucks, Inc. would like to point out the important role that the driver plays in the life of the vehicle. Only trained and informed drivers should operate this vehicle.

We, at Mack Trucks, Inc., hope that you will be happy with your new Mack® TerraPro™ model, and that you see many years of trouble-free driving.

This vehicle was built to conform to all federal standards and regulations applicable at the time of manufacture.

2 INTRODUCTION

About This Handbook

This handbook is referred to as the Mack® TerraPro™ Series Operator's Handbook. It covers all Mack® TerraPro™ models. Keep this handbook with the vehicle at all times to ensure that each owner and/or operator will have access to all pertinent information relating to the operation and handling of this vehicle.

This handbook was prepared to provide the driver with all relevant information concerning the daily operation of this vehicle. Please read it thoroughly; pay particular attention to advisory labels that have been included to draw attention to important issues of operator safety and overall performance.

Information and illustrations in this handbook are based on the latest production usage at the time of printing and are subject to change without prior notice.

Note: Basic maintenance and lubrication procedures are found in this manual beginning with "MAINTENANCE INTRODUCTION", page 225. For further information, refer to the Maintenance and Lubrication Manual. Other important information can be found in the Emission Control Systems for MACK Diesel Engine Manual.

THE VEHICLE

Basic Configuration

The Mack® TerraPro™ MRU model has a low-entry, cab-forward-style operators compartment. Low profile and excellent visibility make this model popular throughout the refuse-hauling, construction and firefighting industries.

Vehicle Management and Control System (V-MAC®)

The Vehicle Management and Control System (V-MAC) is an electronic control system that manages engine and vehicle functions. In addition, the DataMax™ portion of V-MAC monitors and stores a variety of information (i.e., maintenance schedules, overspeed logs, fault tables, trip summaries)

For a complete description of the V-MAC IV system, refer to the applicable V-MAC® Operator's Guide, which is supplied with the vehicle.

Additional information concerning service, diagnostics, programming and vendor equipment interface application is available from the Mack Trucks, Inc. Service Publications Department. Contact your local MACK dealer for details.



WARNING

Never cut into the V-MAC system wire harness to power additional equipment. If such equipment is to be installed, contact your MACK dealer for assistance.

4 INTRODUCTION


COMPONENT IDENTIFICATION

Locate the following serial numbers and write them in the boxes provided next to each illustration.

VIN Locations

The Vehicle Identification Number (VIN) is displayed in two locations (a frame rail stamping and a label). The 17-digit VIN must be identical in both locations.

The VIN frame stamping is located on the right outside frame rail and the left inside frame rail.

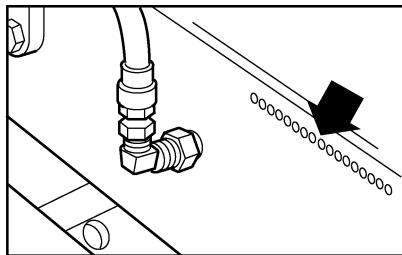


Right Outside Frame Rail Flange

VEHICLE
IDENTIFICATION
NUMBER

C0029554

The VIN label is located on the inside door frame below the driver seat.

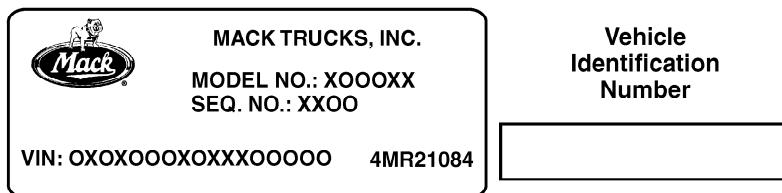

MACK TRUCKS, INC.

MODEL NO.: XOOOXX
SEQ. NO.: XXOO


VIN: OXOXOOOXOXXXOOOOO 4MR21084

Vehicle
Identification
Number

C0028941

Engine Identification

On the MACK MP engines, the engine serial number is stamped on the left side of the engine block, below the inlet manifold.

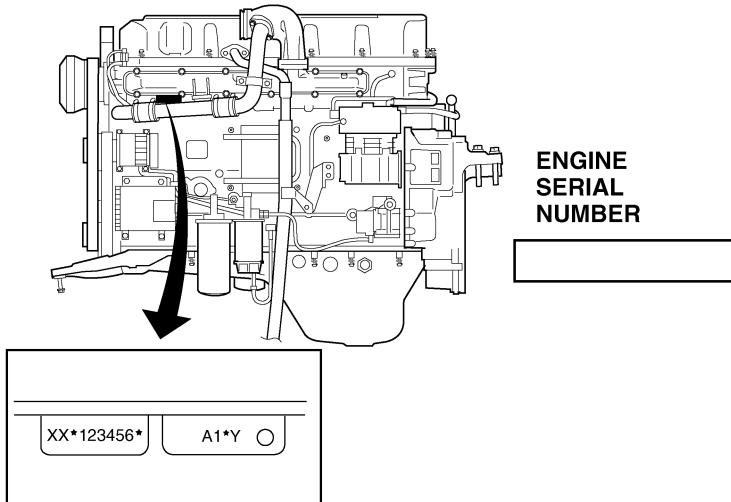

C0028943

6 INTRODUCTION

Engine Information Plate

In compliance with Federal and California emission requirements, an engine information label is affixed to all MACK diesel engines. This label, which is located on the cylinder head cover at the front of the engine, gives basic engine identification information (engine model, serial number, etc.), advertised horsepower at rated speed, emissions regulations to which the engine conforms and inlet and exhaust valve lash settings. Examples of the 49 state EPA approved, and 50 state EPA and California approved engine identification labels are given below.

IMPORTANT ENGINE INFORMATION		MACK TRUCKS, INC.		
RENNSEIGNEMENTS IMPORTANTS MOTEUR				
ENGINE FAMILY: AVPTH12.8S01	ENGINE MODEL: MP8-50C	SERIAL NO.: 123456		
FAMILLE DE MOTEURS:	MODÈLE MOTEUR:	NO. SÉRIE:		
DISPLACEMENT CYLINDRE	ADVERTISED HP @ RPM	FUEL RATE @ ADVERTISED HP	IDLE SPEED	ENGINE BRAKE
12.8 L	505/1500	mm ³ /STROKE	342 mm ³ /COUP	RALENTI FREIN MOTEUR
PISS., SPEC. & TOURS / MIN.	DEBIT DE CARB. @ PISS., SPEC.			
THIS ENGINE CONFORMS TO U.S. EPA REGULATIONS APPLICABLE TO 2010 MODEL YEAR. NEW HEAVY-DUTY ENGINES AND HAS A PRIMARY INTENDED SERVICE APPLICATION AS A HEAVY HEAVY-DUTY DIESEL ENGINE.				
Ce moteur est conforme aux réglementations de l'Agence de Protection de l'Environnement des États-Unis applicables aux nouveaux moteurs diesel Heavy duty (Gamme lourde) modèle 2010. Le principe d'application s'adresse aux usages de type gamme lourde (Heavy-heavy-duty).				
EXHAUST EMISSION CONTROL SYSTEM	THIS ENGINE IS CERTIFIED TO OPERATE ON	DELEGATED ASSEMBLY	LABEL NO	
DISPOSITIF ANTI-POLLUTION	ULTRA LOW SULFUR DIESEL FUEL ONLY.			21338494

W2040455

Engine Identification Label - 49 State EPA Approved Engine without California "Clean Idle"

IMPORTANT ENGINE INFORMATION		MACK TRUCKS, INC.		
RENNSEIGNEMENTS IMPORTANTS MOTEUR				
ENGINE FAMILY: AVPTH12.8S01	ENGINE MODEL: MP8-50C	SERIAL NO.: 123456		
FAMILLE DE MOTEURS:	MODÈLE MOTEUR:	NO. SÉRIE:		
DISPLACEMENT CYLINDRE	ADVERTISED HP @ RPM	FUEL RATE @ ADVERTISED HP	IDLE SPEED	ENGINE BRAKE
12.8 L	505/1500	mm ³ /STROKE	342 mm ³ /COUP	RALENTI FREIN MOTEUR
PISS., SPEC. & TOURS / MIN.	DEBIT DE CARB. @ PISS., SPEC.			
THIS ENGINE CONFORMS TO U.S. EPA AND CALIFORNIA REGULATIONS APPLICABLE TO 2010 MODEL YEAR. NEW HEAVY-DUTY ENGINES AND HAS A PRIMARY INTENDED SERVICE APPLICATION AS A HEAVY HEAVY-DUTY DIESEL ENGINE.				
Ce moteur est conforme aux réglementations de l'Agence de Protection de l'Environnement des États-Unis applicables aux nouveaux moteurs diesel Heavy duty (Gamme lourde) modèle 2010. Le principe d'application s'adresse aux usages de type gamme lourde (Heavy-heavy-duty).				
EXHAUST EMISSION CONTROL SYSTEM	THIS ENGINE IS CERTIFIED TO OPERATE ON	DELEGATED ASSEMBLY	LABEL NO	
DISPOSITIF ANTI-POLLUTION	ULTRA LOW SULFUR DIESEL FUEL ONLY.			21338549

W2040456

Engine Identification Label - 50 State EPA Approved Engine with California "Clean Idle"

Clean Idle Engines

The California Air Resources Board (ARB) requires that 2008 and later model year vehicles be equipped with engines having tamper-resistant software which limits the time at which the engine can idle at speeds above low idle (550–700 rpm). At speeds above low idle, and without a PTO engaged, idle time will be limited to five minutes, after which the engine will revert back to low idle. Vehicles equipped with a Clean Idle engine are identified by a label which is affixed to the lower portion of the driver's side door on cab-over models (MRU).




W2056289

Clean Idle Engine Label

8 INTRODUCTION

Transmission Identification


The **MACK T300 Series transmission** serial number is located on the rear left side of the main case.

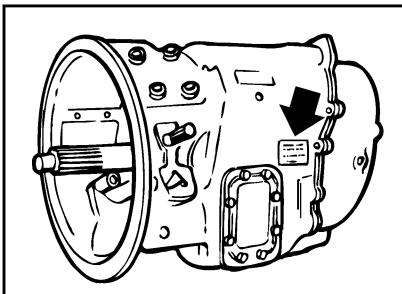

**MACK T300
Transmission
Serial Number**

C0028947


The **Allison RDS and EVS transmission** identification plate is located on the rear right side of the main case, near the lower end.

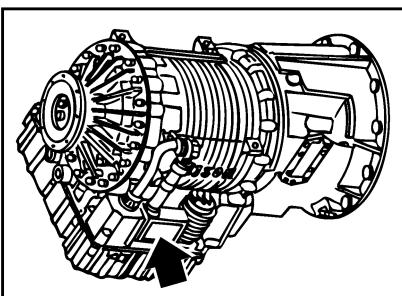

**Allison RDS
Transmission
Serial Number**

C0029555

The **MACK carrier assembly** serial number is located on the front right side of the housing.

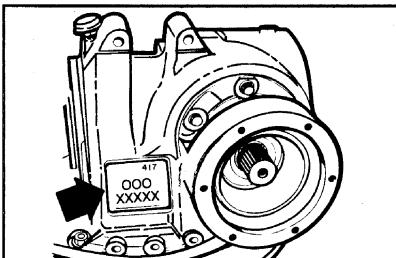

**Carrier Assembly
Serial Number**


C0028950

The **Eaton® Spicer® rear axle** serial number is located on the rear of the axle housing toward the carrier.

Mack Operators Handbook Mack Terrapro Series Manual

Full download: <http://manualplace.com/download/mackoperatorshandbook-mack-terrapro-series>


INTRODUCTION 9

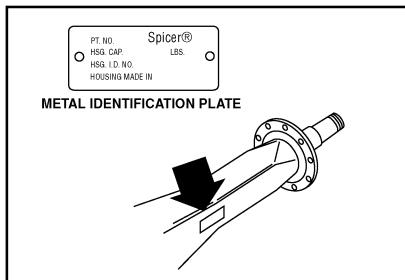

Rear Axle
Serial Number

C0028951


The **Eaton® Spicer® carrier assembly** serial number is located on the left side of the forward carrier, and the top of the rear carrier.

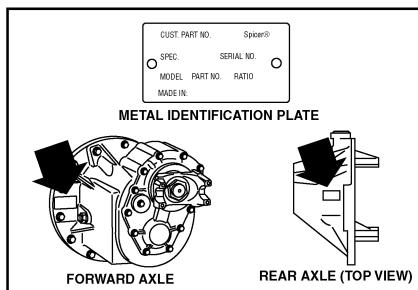

Carrier
Serial Number

C0028952

The **MERITOR rear axle** identification tag is located on the left or right rear of the rear axle housing, next to the carrier.

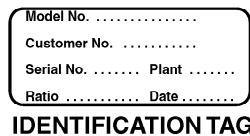

Rear Axle
Serial Number

C0028953

