



REF : 547511 EN (13 / 06 / 1997)

**MC 30**

**M26-2 M26-4**

**M30-2 M30-4**

**M40-4**

**M50-4**

**OPERATOR'S MANUAL**



BP 249 Z. I.  
44 158 ANCENIS CEDEX FRANCE  
TEL : 02 40 09 10 11

*YOUR DEALER*

REF : 547511 EN (13 / 06 / 1997)

**MC 30**  
**M26-2    M26-4**  
**M30-2    M30-4**  
**M40-4**  
**M50-4**

**OPERATOR'S MANUAL**



<b>1st DATE OF ISSUE</b>	<b>13 / 06 / 1997</b>
--------------------------	-----------------------

<b>CATALOGUE INFORMATION</b>	<b>DATE OF ISSUE</b>	<b>OBSERVATIONS</b>
	<b>13 / 06 / 1997</b>	- 1 <sup>st</sup> ISSUE

**THE TEXTS AND PICTURES IN THIS DOCUMENT CANNOT BE REPRODUCED EITHER TOTALLY OR PARTLY.**



# TABLE OF CONTENTS

<b>1 - INSTRUCTIONS</b>	<b>1 - 1</b>
- GENUINE SPARE PARTS	1 - 3
- DRIVER'S OPERATING INSTRUCTIONS	1 - 4
- General instructions	1 - 4
- Driving instructions	1 - 6
- Handling instructions	1 - 8
- MAINTENANCE INSTRUCTIONS OF THE LIFT TRUCK	1 - 10
- IDENTIFICATION OF THE LIFT TRUCK	1 - 12
- BEFORE STARTING UP A NEW LIFT TRUCK	1 - 14
<b>2 - DESCRIPTION</b>	<b>2 - 1</b>
- CHARACTERISTICS	2 - 4
- MAST CHARACTERISTICS	
MC 30	2 - 20
M26-2    M30-2    M26-4    M30-4	2 - 20
M40-4    M50-4	2 - 22
- DIMENSIONS AND LOAD CHART	
MC 30	2 - 24
M26-2    M30-2	2 - 26
M26-4    M30-4	2 - 28
M40-4    M50-4	2 - 30
- INSTRUMENTS AND CONTROLS	
MC 30	2 - 32
M26-2    M30-2    M26-4    M30-4    M40-4    M50-4	2 - 40
- DESCRIPTION AND OPERATION OF ELECTRIC AND HYDRAULIC OPTIONS	2 - 50
- DRIVING THE LIFT TRUCK	2 - 52
- HANDLING OF A LOAD	2 - 54
<b>3 - MAINTENANCE</b>	<b>3 - 1</b>
- FILTERS CARTRIDGES AND BELTS	3 - 3
- LUBRICANTS	3 - 4
- SERVICING SCHEDULE	3 - 6
A - Every day or every 10 working hours service	3 - 10
B - Every 50 working hours service	3 - 12
C - Every 200 working hours service	3 - 20
D - Every 400 working hours service	3 - 24
E - Every 800 working hours service	3 - 28
F - Every 2400 working hours service	3 - 36
G - Every 4800 working hours service	3 - 38
H - Occasional maintenance	3 - 40
<b>4 - ADAPTABLE ATTACHMENTS IN OPTION ON THE RANGE</b>	<b>4 - 1</b>
- INTRODUCTION	4 - 3
- TECHNICAL SPECIFICATIONS OF ATTACHMENTS	4 - 4



# **1 - INSTRUCTIONS**





## **GENUINE SPARE PARTS**

**ALL MAINTENANCE ON OUR LIFT TRUCKS MUST BE CARRIED OUT USING ORIGINAL PARTS.**

**BY ALLOWING NON-ORIGINAL PARTS TO BE USED,**

- YOU RUN THE RISK**
- Legally, of being liable in the event of an accident.
  - Technically, of causing breakdowns to occur or of reducing your lift truck's service life.



*Using counterfeit parts or components not approved by the manufacturer may put an end to contract warranty terms and lead the maker to withdraw the machine's certificate of compliance.*

**BY USING ORIGINAL PARTS DURING MAINTENANCE OPERATIONS,**

- YOU ARE LEGALLY COVERING YOURSELF**
- Any user who procures parts from another quarter does so at his own risk.
  - Any user who modifies his lift truck or has it modified by a service company, must consider that a new item of equipment has been brought onto the market and therefore takes liability for it.
  - Any user who copies original parts or has them copied is taking a risk from the legal viewpoint.
  - The certificate of compliance only binds the maker for parts chosen or produced under the maker's control.
  - The practicalities of maintenance terms are set out by the maker. The maker is in no way liable in the event of the user not complying with such terms.

**YOU GET THE BENEFIT OF THE MANUFACTURER'S KNOW-HOW**

**THE MANUFACTURER BRINGS TO THE USER,**

- His know-how and skill.
- Guaranteed quality work.
- Original replacement parts.
- Help with preventive maintenance.
- Effective help with diagnosing faults.
- Enhancements gained from feedback.
- Training for operating staff.
- Only the manufacturer knows the details of the lift truck design and therefore has the best technological capability to carry out maintenance.

**ORIGINAL REPLACEMENT PARTS ARE DISTRIBUTED EXCLUSIVELY BY MANITOU AND ITS DEALER NETWORK.**

You can obtain the list of dealers by phoning the spare parts department  
on 02 40 09 10 21