Mazda Rx 7 Braking Systems Workshop Repair Manual

Full download: http://manualplace.com/download/mazda-rx-7-braking-systems-workshop-repair-manual/

This file is available for free download at <u>http://www.iluvmyrx7.com</u>

This file was not scanned to deprive Mazda of any money - it was scanned due to the rareness of the original manuals and the overwhelming need of the RX-7 owner to have this information so that they can accurately troubleshoot problems. Perhaps if Mazda's dealerships could support the Rotary Engine it wouldn't be so necessary for the owners to do so.



Many thanks to Anh Diep for scanning this file.

This is the cut pages sample. Download all 63 page(s) at: ManualPlace.com

Before beginning any service procedure, refer to the 1993 RX-7 Body Electrical Troubleshooting Manual; see section S for air bag system precautions and J1 for audio anti-theft system precautions.

)

}

(ئەز ر

-


BRAKING SYSTEM

INDEX			
OUTLINE	Ρ	-	4
SPECIFICATIONS			
CONVENTIONAL BRAKE SYSTEM	Ρ	-	5
PREPARATION	Ρ		5
PREPARATION TROUBLESHOOTING GUIDE	Ρ	-	6
AIR BLEEDING	Ρ	-	7
BRAKE LINE	Ρ		7
BRAKE FLUID	Ρ	-	8
VACUUM LINE	Ρ	-	8
BRAKE PEDAL		-	9
MASTER CYLINDER	Ρ	1	
POWER BRAKE UNIT	P	-1	6
PROPORTIONING BYPASS VALVE	Ρ	-1	9
FRONT BRAKE (DISC)	P	-2	20
DISC PAD (FRONT)	Ρ	-2	23
DISC PLATE (FRONT)			
CALIPER (FRONT)			
REAR BRAKE (DISC)			
DISC PAD (REAR)			
DISC PLATE (REAR)			
CALIPER (REAR)			
PARKING BRAKE SYSTEM			
TROUBLESHOOTING GUIDE	P	-3	12
PARKING BRAKE (LEVER TYPE)	P	-3	12
PARKING CABLE (LEVER TYPE)	Ρ	-3	13
PARKING BRAKE LEVER			
ANTI-LOCK BRAKE SYSTEM (ABS)			
PREPARATION			
TROUBLESHOOTING GUIDE			
SERVICE POINTS			
HYDRAULIC UNIT			
	P		
WHEEL-SPEED SENSOR (FRONT)			
SENSOR ROTOR (FRONT)	P	5	9
WHEEL-SPEED SENSOR (REAR)			
SENSOR ROTOR (REAR)			
RELAY	•	-6	-
37	UOF	•X-0	01

.....

P



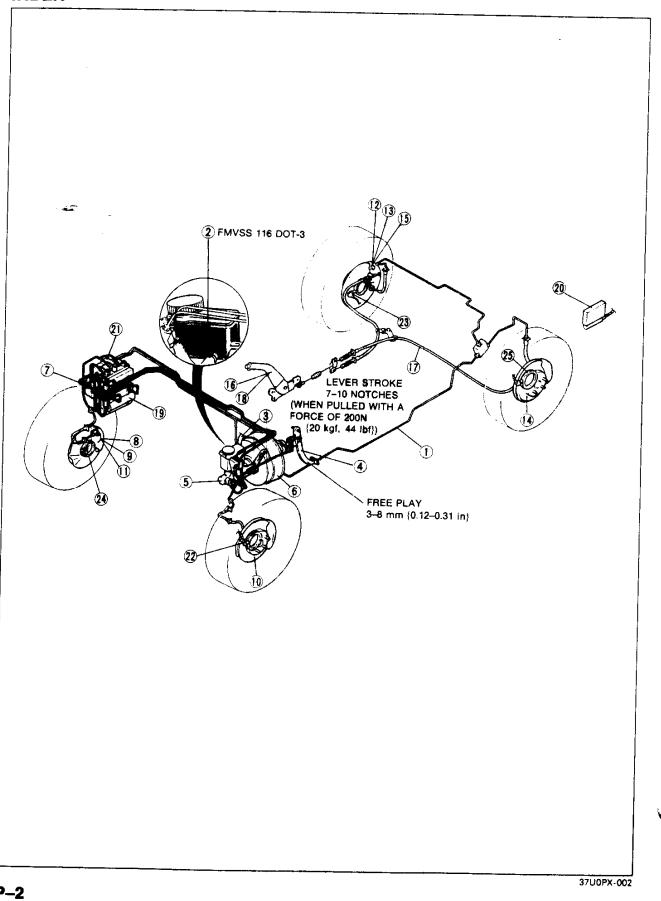

net in energy set and

INDEX

- 1. Brake line Inspection page P- 7 Removal / Installationpage P- 7 2. Brake fluid Inspection page P-- 8 Replacement page P- 8 3. Vacuum line Inspection page P- 8 4. Brake pedal Inspection (on-vehicle) page P- 9 Removal / Inspection / fristallation ... page P-10 5. Master cylinder Removal / Installation page P-11 Disassembly / Inspection / Assembly page P-15 6. Power brake unit Inspection (on-vehicle) page P-16 Removal / Installation .. page P-18 7. Proportioning bypass valve Inspection page P-19 Replacement page P-20
- 8. Front brake (disc) Inspection (on vehicle) page P-20 Removal / Inspection / Installation .. page P-21 9. Disc pad (front) Replacement page P-23 10. Disc plate (front) Inspection page P-23 11. Caliper (front) Disassembly / Inspection / Assembly page P-25 12. Rear brake (disc) Inspection (on-vehicle) page P-26 Removal / Inspection / Installation .. page P-27 13. Disc pad (rear) Replacement . page P-28 14. Disc plate (rear) Inspection page P-29 15. Caliper (rear) Disassembly / Inspection / Assembly page P-30 16. Parking brake (lever type) Inspection page P-32 Adjustment page P-32 17. Parking cable (lever type) Removal / Inspection /
 - Installation .. page P-33
- 18. Parking brake lever Removal / Inspection / Installation ... page P-34 19. Hydraulic unit Removal / Installation page P-55 Disassembly / Inspection / Assembly page P-56 20. ABS control unit Removal / Installation page P-57 21. Relay Removal / Installation page P-62 Inspection page P-62 22. Wheel-speed sensor (front) Removal / Installation page P-58 Inspection page P-58 23. Wheel-speed sensor (rear) Removal / Installation page P-60 Inspection page P-60 24. Sensor rotor (front) Removal / Installationpage P-59 25. Sensor rotor (rear) Removal / Installation page P-61

37U0PX-003

OUTLINE

Ρ

SPECIFICATIONS

ltem			Specifications
Brake pedal		• • • • • • • • • • • • • • • • • • • •	
Туре			Suspended
Lever ratio			4.1 : 1
Maximum stroke		mm {in}	135 {5.31}
Master cylinder			· · · · · · · · · · · · · · · · · · ·
Туре			Tandem (with level sensor)
			Portless, recessed type
Bore	mm {in}		23.8 {0.94}
Front brake			
Туре			Disc (ventilated)
Cylinder bore		mm {in}	36.1 {1.42}
Pad dimension	mm² × mnı	Outer	4500 × 10.3 {6.97 × 0.41}
(area × thickness)	$\{in^2 \times in\}$	Inner	4500 × 9.3 {6.97 × 0.37}
Disc plate dimension	mm × mm		294.0 × 22.0
(outer diameter × thickness)	{	n × in}	{11.57 × 0.87}
Rear brake			
Туре			Disc (ventilated)
Cylinder bore	mm {in}		34.9 {1.37}
Pad dimension (area × thickness)	{ir	× mm ² × in}	3210 × 8.0 {4.98 × 0.31}
Disc plate dimension	mm × mm		294.0 × 20.0
(outer diameter × thickness)	<u>{i</u>	n × in}	{11.57 × 0.79}
Power brake unit			· · · · · · · · · · · · · · · · · · ·
Туре			Vacuum multiplier
Size		mm {in}	209.5 + 215.2 {8 + 8}
Rear wheel hydraulic control systemeters	em		
Туре			Proportioning bypass valve
Switching point (master cylinder pressure)	kPa ;kgi/c	m², psi}	3920 {40.0, 570}
Parking brake			
Туре			Mechanical two-rear-wheel control
Operation system			Hand lever
Brake fluid			
Туре			FMVSS 116 DOT-3

37U0PX-004

......

··· cheria

Mazda Rx 7 Braking Systems Workshop Repair Manual

Full download: http://manualplace.com/download/mazda-rx-7-braking-systems-workshop-repair-manual/

CONVENTIONAL BRAKE SYSTEM

P

CONVENTIONAL BRAKE SYSTEM PREPARATION SST For For 49 0259 770B 49 B043 001 removal / adjustment installation of of push rod Wrench, flare nut Gauge, adjustment brake pipe clearance For For 49 B043 003 49 8043 004 adjustment of adjustment of push rod push rod lock tool, turning Wrench, socket clearance clearance 49 0221 600C 49 0208 701A For For removal of installation of disc Expantion tool, Air out tool, boot pistor: seal pads disc brake For 49 F033 001 49 FA18 602 For removal of removal of disc brake Stopper, disc brake pisto disc brake piston Wrench, disc brake piston piston 49 1285 071 For 49 B043 002 For removal of installation of Puller, bearing bearing Installer. bearing bearing 49 U043 004 49 U043 0A0 For For measurement of measurement of Gauge, oil pressure Gauge set, oil pressure fluid pressure fluid pressure (Part of 49 U043 0A0) 49 U043 005 49 U043 006 For For measurement of measurement of Joint Hose fluid pressure fluid pressure (Part of 49 U043 0A0) (Part of 49 U043 0A0) 37U0PX-005

This is the cut pages sample. Download all 63 page(s) at: ManualPlace.com