

Mazda Rx 7 Engine Electrical Systems

Full download: <http://manualplace.com/download/mazda-rx-7-engine-electrical-systems/>

This file is available for free download at <http://www.iluvmyrx7.com>

This file was not scanned to deprive Mazda of any money – it was scanned due to the rareness of the original manuals and the overwhelming need of the RX-7 owner to have this information so that they can accurately troubleshoot problems. Perhaps if Mazda's dealerships could support the Rotary Engine it wouldn't be so necessary for the owners to do so.



Many thanks to Anh Diep for scanning this file.


This is the cut pages sample. Download all 33 page(s) at: ManualPlace.com

Before beginning any service procedure, refer to the 1993 RX-7 Body Electrical Troubleshooting Manual; see section S for air bag system precautions and J1 for audio anti-theft system precautions.

ENGINE ELECTRICAL SYSTEM

INDEX	G - 2
OUTLINE	G - 3
SPECIFICATIONS	G - 3
TROUBLESHOOTING GUIDE	G - 4
DIAGNOSTIC INDEX	G - 4
SYMPTOM TROUBLESHOOTING	G - 4
CHARGING SYSTEM	G - 7
PREPARATION	G - 7
CIRCUIT DIAGRAM	G - 7
TROUBLESHOOTING	G - 8
BATTERY	G - 9
ALTERNATOR	G -12
DRIVE BELT	G -15
IGNITION SYSTEM	G -16
PREPARATION	G -16
CIRCUIT DIAGRAM	G -16
IGNITION TIMING	G -17
SPARK PLUGS	G -18
IGNITION COIL	G -20
HIGH-TENSION LEAD	G -21
IGNITER	G -22
STARTING SYSTEM	G -24
PREPARATION	G -24
CIRCUIT DIAGRAM	G -24
STARTER	G -24
INTERLOCK SWITCH	G -32

INDEX

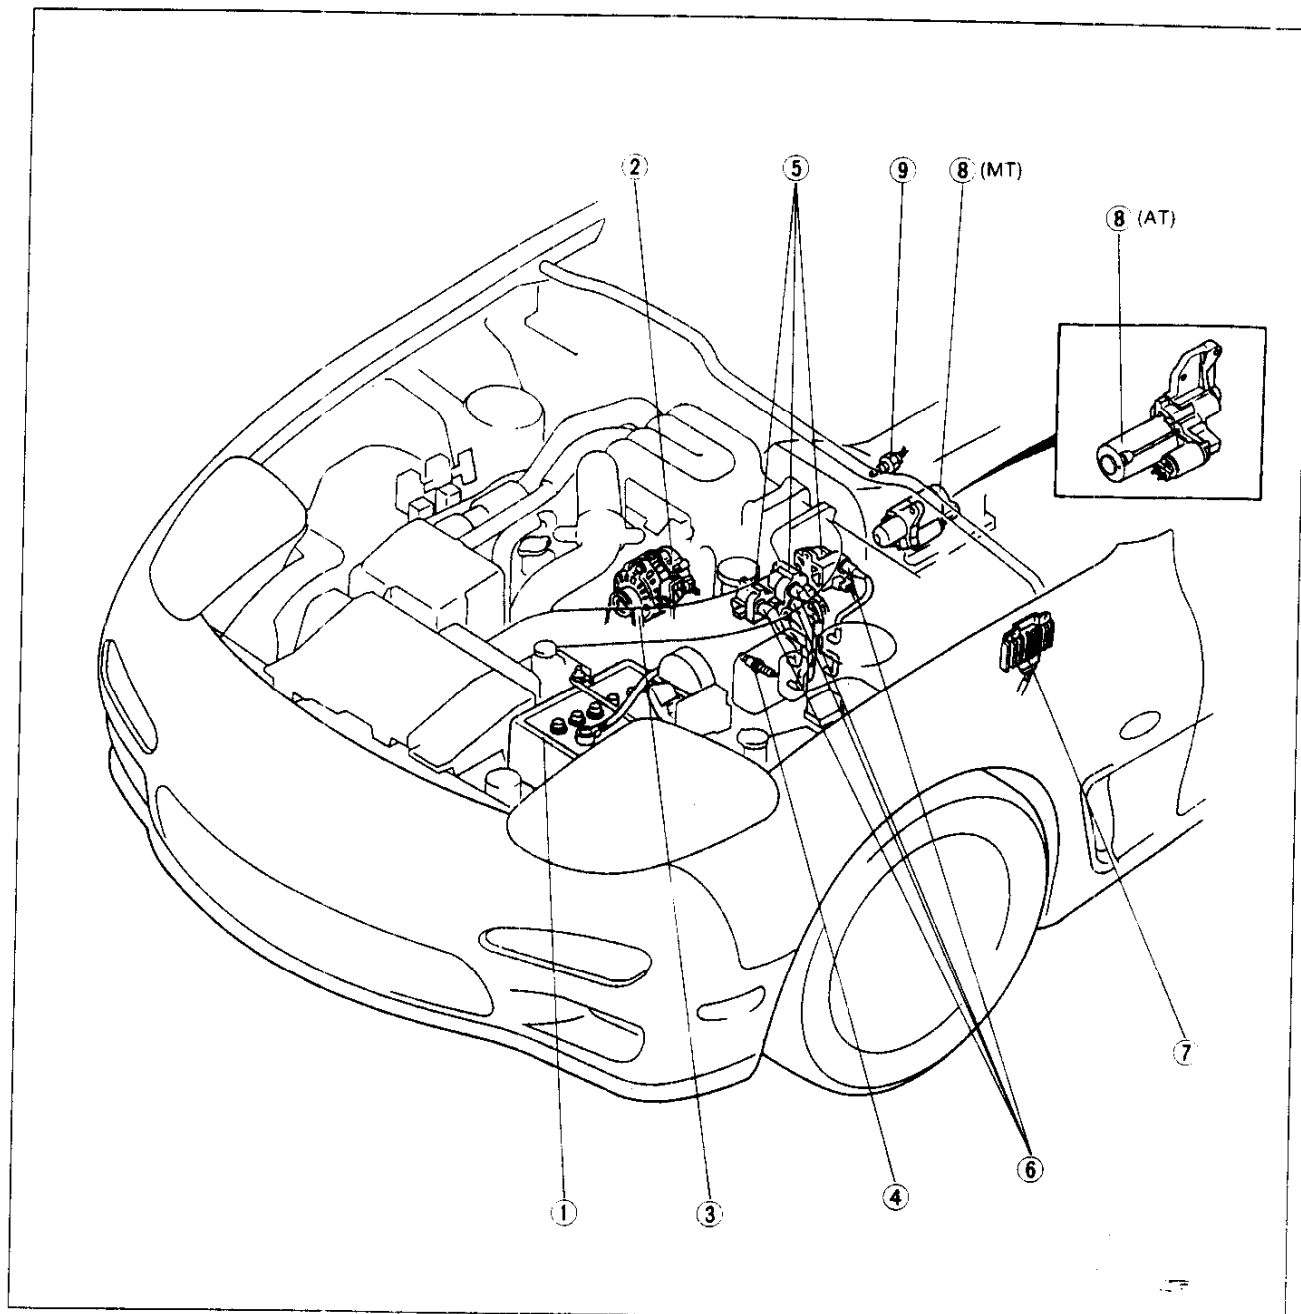

<p>1. Battery Removal / Installation page G- 9 Inspection page G- 9 Recharging page G-10</p> <p>2. Alternator Removal / Installation page G-12 Disassembly / Assembly page G-13 Inspection page G-14</p> <p>3. Drive belt Inspection page G-15 Adjustment page G-15</p>	<p>4. Spark plug Removal / Installation page G-18 Spark test page G-18 Inspection page G-19</p> <p>5. Ignition coil Removal / Installation page G-20 Inspection page G-21</p> <p>6. High-tension leads Inspection page G-21</p> <p>7. Igniter Removal / Installation page G-22 Inspection page G-23</p>	<p>8. Stator Inspection (On-Vehicle) page G-24 Removal / Installation page G-25 Performance inspection page G-27 Disassembly / Assembly page G-28 Inspection page G-30</p> <p>9. Interlock switch Inspection page G-32</p>
---	---	--

37U0GX-01 2