



Mercedes-Benz

# M-Class

## Operator's Manual

## Symbols

Registered trademarks:

- AdBlue® is a registered trademark of the Association of German Automobile Manufacturers (VDA).
- BabySmart™ is a registered trademark of the Siemens Automotive Corp.
- Bluetooth® is a registered trademark of the Bluetooth SIG Inc.
- ESP® and PRE-SAFE® are registered trademarks of Daimler AG.
- HomeLink® is a registered trademark of Prince, a Johnson Controls Company.
- SIRIUS and related brands are registered trademarks of SIRIUS XM Radio Inc.

In this Operator's Manual you will find the following symbols:

### **Warning**

Warning notices draw your attention to hazards that endanger your health or life, or the health or life of others.

**!** Warning notices draw your attention to hazards that could cause damage to your vehicle.

**i** Practical tips or other information that could be helpful to you.

- ▶ This symbol indicates instructions that you must follow.
- ▶ A number of these symbols appearing in succession indicates instructions with several steps.
- ▷ page This symbol tells you where to look for further information on a topic.
- ▷▷ This symbol marks a warning or procedure which is continued on the next page.

Display Text in the multifunction display / COMAND display.

## Welcome to the world of Mercedes-Benz

Before you drive off, please familiarize yourself with your vehicle and read this manual, especially the safety and warning notices. This will help you to obtain the maximum pleasure from your vehicle and to avoid endangering yourself and others.

The equipment or product designation of your vehicle may vary depending on:

- model
- order
- country specification
- availability

Mercedes-Benz is constantly updating its vehicles to the state of the art.

Mercedes-Benz therefore reserves the right to introduce changes in the following areas:

- design
- equipment
- technical features

You cannot therefore base any claims on the data, illustrations or descriptions contained in this manual.

The following are integral parts of the vehicle:

- Operator's Manual
- Brief Instructions<sup>1</sup>
- Service Booklet
- Supplements relating to vehicle equipment

Keep these documents in the vehicle at all times. When you sell the vehicle, always pass the documents on to the new owner.

The technical documentation team at Daimler AG wishes you safe and pleasant motoring.

Mercedes-Benz USA, LLC

Mercedes-Benz Canada, Inc.

A Daimler Company

<sup>1</sup> Canada only.



Index .....	4	At a glance .....	25
Introduction .....	19	Safety .....	35
		Opening and closing .....	71
		Seats, steering wheel and mirrors ....	91
		Lights and windshield wipers .....	105
		Climate control .....	121
		Driving and parking .....	137
		On-board computer and displays ....	203
		Loading, stowing and features .....	255
		Maintenance and care .....	281
		Roadside assistance .....	295
		Tires and wheels .....	323
		Technical data .....	353

**1, 2, 3 ...**

- 115 V socket** ..... 269  
**12 V socket** ..... 268  
**4ETS**  
 see ETS/4ETS  
**4MATIC (permanent four-wheel drive)** ..... 191

**A****ABS (Anti-lock Braking System)**

- Display message ..... 228  
 Function/notes ..... 65  
 Warning lamp ..... 249

**Accident (notes)** ..... 297**Active light function (display message)** ..... 233**Active service system**

see Service interval display

**Adaptive Damping System (ADS)** ..... 184**AdBlue®**

- Adding ..... 156  
 Display message ..... 236

**Additional functions (on-board computer)** ..... 219**ADS (Adaptive Damping System)** ..... 184**Air bags**

- Display message ..... 225  
 Front air bag (driver, front passenger) ..... 39  
 Important safety information ..... 38  
 PASSENGER AIRBAG OFF indicator lamp (only Canada) ..... 48  
 PASSENGER AIRBAG OFF indicator lamp (only USA) ..... 42  
 Safety guidelines ..... 37  
 Side impact air bag ..... 40  
 Window curtain air bag ..... 41

**Air-conditioning system**

see Climate control

**Air dehumidification**

- Activating/deactivating with cooling ..... 129

**Air distribution**

- Setting ..... 132

**Air filter (display message)** ..... 236**Airflow**

- Setting ..... 132

**AIRMATIC package** ..... 183**Air nozzles**  
 see Air vents ..... 135**Air pressure**

see Tire pressure

**Air-recirculation mode**

- Activating/deactivating ..... 133

**Air vents** ..... 135

- Important safety information ..... 134

- Rear ..... 135

- Setting the center air vents ..... 135

- Setting the side air vents ..... 135

**Alarm system**

see ATA

**Ambient lighting (on-board computer)** ..... 216**AMG menu (on-board computer)** ..... 209**Anti-lock Braking System**

see ABS

**Anti-Theft Alarm system**

see ATA

**Anti-theft system**

- ATA (Anti-Theft Alarm system) ..... 69

**Approach/departure angle** ..... 170**Ashtray** ..... 267**ATA (Anti-Theft Alarm system)**

- Activating/deactivating ..... 69

- Function ..... 69

- Switching off the alarm ..... 69

**Audio menu (on-board computer)** ..... 211**AUTO lights**

see Light sensor

**Automatic car wash** ..... 288**Automatic transmission**

- DIRECT SELECT lever ..... 144

- Display message ..... 243

- Driving tips ..... 147

- Emergency running mode ..... 151

- Kickdown ..... 147

- Malfunction ..... 151

- Program selector button ..... 147

- Pulling away ..... 141

- Starting ..... 141

- Trailer towing ..... 147

**B**

<b>BAS (Brake Assist System)</b> .....	66
<b>Battery</b>	
Charging .....	314
Checking (SmartKey) .....	76
Display message .....	235
Important safety guidelines (SmartKey) .....	75
Jump-starting .....	315
Replacing (SmartKey) .....	76
Safety notes .....	312
Voltage (on-board computer) .....	209

**Belt**

see Seat belts

**Blind Spot Assist**

Activating/deactivating (on-board computer) .....	219
Display message .....	239
Function/notes .....	189
Trailer towing .....	191

**BlueTEC**

AdBlue® .....	360
Adding AdBlue® .....	156

**Brake fluid**

Notes .....	362
-------------	-----

**Brake fluid level** .....

Overview .....	112
Parking lamps .....	114
Rear fog lamp .....	115
Replacing .....	114
Standing lamps (front) .....	114
Standing lamps (rear) .....	115
Tail lamps .....	115
Turn signal lamp .....	115
Turn signals (front) .....	114

**Brake lamp (display message)** .....**C****CAC**

(Customer Assistance Center) .....	22
------------------------------------	----

**California**

Important notice for retail customers and lessees .....	20
---	----

**Calling up a malfunction**

see Display messages
----------------------

**Care**

Carpets .....	293
Car wash .....	288
Display .....	292
Gear or selector lever .....	292
Headlamps .....	291
Notes .....	288
Paint .....	290
Plastic trim .....	292
Power washer .....	289
Rear view camera .....	291
Roof lining .....	293
Seat belt .....	293
Seat covers .....	292
Sensors .....	291
Steering wheel .....	292
Tail pipes .....	291
Trim strips .....	292
Washing by hand .....	289
Wheels .....	289
Windows .....	290
Wiper blades .....	290
Wooden trim .....	292

**Cargo compartment cover** .....**Cargo compartment enlargement** .....**Cargo compartment floor** .....**Cargo net**

Attaching .....	262
Important safety information .....	261

**Braking**

Important safety instructions .....	161
-------------------------------------	-----

**Breakdown**

see Accident (notes)
----------------------

see Flat tire
---------------

**Bulbs**

Backup lamp .....	115
Brake lamp .....	115
High-beam headlamps .....	113
License plate lamp .....	116
Low-beam headlamps .....	113

<b>Cargo tie down rings</b> .....	260
<b>CD player/CD changer (on-board computer)</b> .....	212
<b>Center console</b> .....	31
<b>Central locking</b>	
Automatic locking (on-board computer) .....	217
SmartKey .....	72
<b>Changing bulbs</b>	
Headlamps .....	111
<b>Changing gears</b> .....	146
<b>Changing the programming</b>	
SmartKey .....	75
<b>Checklist</b>	
After driving off-road .....	168
Before driving off-road .....	167
<b>Child-proof locks</b>	
Rear doors .....	63
Special seat belt retractor .....	61
<b>Children</b>	
In the vehicle .....	58
Restraint systems .....	59
<b>Child seat</b>	
Automatic recognition .....	48
Automatic recognition/air bag deactivation, self-test .....	50
ISOFIX (LATCH-type child seat anchors) .....	61
Special seat belt retractor .....	61
Top Tether .....	62
Troubleshooting .....	51
<b>Cigarette lighter</b> .....	267
<b>Climate control</b>	
Activating/deactivating .....	128
Activating/deactivating air-recirculation mode .....	133
Controlling automatically .....	130
Cooling with air dehumidification ..	129
Defrosting the windshield .....	132
Demisting the windows .....	133
Dual-zone automatic climate control .....	123
Important safety information .....	122
Indicator lamp .....	130
Multi-zone automatic climate control .....	124
Problems with "cooling with air dehumidification" .....	130
Problems with the rear window heating .....	133
Rear control panel .....	125, 128
Refrigerant .....	362
Setting the air distribution .....	132
Setting the airflow .....	132
Setting the air vents .....	135
Setting the temperature .....	131
Setting the temperature (rear compartment) .....	131
Switching the MONO function on/off .....	132
Switching the rear window heating on/off .....	133
Switching the residual heat function on/off .....	134
<b>Clock (on-board computer)</b> .....	215
<b>Cockpit</b> .....	27
<b>Collapsible spare wheel</b>	
Inflating .....	309
see Emergency spare wheel	
<b>Combination switch</b> .....	109
<b>Compass</b> .....	279
Calling up .....	279
<b>Consumption statistics (on-board computer)</b> .....	219
<b>Convenience closing feature</b> .....	86
<b>Convenience opening feature</b> .....	86
<b>Coolant (engine)</b>	
Checking the level .....	285
Display message .....	233
Notes .....	362
Temperature gauge .....	208
<b>Cooling</b>	
see Climate control	
<b>Cornering light (display message)</b> ...	230
<b>Crash-responsive emergency lighting</b> .....	111
<b>Cruise control</b> .....	171
Cruise control lever .....	172
Display message .....	239
<b>Cup holder</b> .....	265
Center console .....	265
Rear compartment .....	266
<b>Current fuel consumption (on-board computer)</b> .....	220

<b>Customer Assistance Center</b>	
(CAC) .....	22
<b>Customer Relations Department</b>	22
 <b>D</b>	
<b>Dashboard</b>	
see Cockpit	
<b>Date (on-board computer)</b>	215
<b>Daytime driving lights</b>	
Display message .....	233
Switching on/off (on-board computer) .....	215
<b>Delayed switch-off</b>	
Exterior lighting (on-board computer) .....	216
Interior lighting (on-board computer) .....	217
<b>Diesel particle filter</b>	161
<b>Differential locks</b>	196
<b>Differential locks (display message)</b>	238
<b>Digital speedometer</b>	
Displaying .....	208
Setting the unit (on-board computer) .....	214
<b>DIRECT SELECT lever</b>	
see Automatic transmission	
<b>Display (cleaning instructions)</b>	292
<b>Display messages</b>	
Brakes .....	228
Calling up (on-board computer) .....	222
Clearing (on-board computer) .....	222
Engine .....	233
Lamps .....	233
Safety systems .....	223
Service interval display .....	287
Tires .....	241
Vehicle .....	243
<b>Distance recorder</b>	208
<b>Distance warning function (vehicles with DISTRONIC)</b>	69
Activating/deactivating (on-board computer) .....	219
<b>Distance warning lamp</b>	253
<b>DISTRONIC</b>	173
Display message .....	240
<b>Displays in the multifunction display</b>	179
<b>Driving tips</b>	179
<b>Setting the specified minimum distance</b>	177
<b>Warning lamp</b>	253
<b>Door</b>	
Automatic locking .....	79
Automatic locking (on-board computer) .....	217
Display message .....	244
Emergency locking .....	80
Emergency unlocking .....	80
Opening (from inside) .....	79
<b>Door control panel</b>	
Overview .....	33
<b>Doors</b>	
Important safety notes .....	78
<b>Drinking and driving</b>	160
<b>Drinks holder</b>	
see Cup holder	
<b>Drive program</b>	
Automatic .....	148
Manual .....	149
<b>Driving abroad</b>	171
<b>Driving in mountainous terrain</b>	
Approach/departure angle .....	170
<b>Driving on flooded roads</b>	164
<b>Driving safety system</b>	
EBD (Electronic Brake force Distribution) .....	68
ESP® (Electronic Stability Program) .....	66
ETS/4ETS (Electronic Traction System) .....	67
Important safety information .....	65
<b>Driving safety systems</b>	
ABS (Anti-lock Braking System) .....	65
BAS (Brake Assist System) .....	66
Distance warning system (vehicles with DISTRONIC) .....	69
Overview .....	65
<b>Driving systems</b>	
Blind Spot Assist .....	189
Cruise control .....	171
DISTRONIC .....	173
Level control .....	181

PARKTRONIC .....	184
Rear view camera .....	187
<b>Driving tip</b>	
Braking .....	163
<b>Driving tips</b> .....	147
DISTRONIC .....	179
Downhill gradients .....	161
Driving on flooded roads .....	164
Driving on sand .....	168
Driving over obstacles .....	169
Off-road driving .....	167
Off-road fording .....	164
Tire ruts .....	169
Towing a trailer .....	198
Wet road surface .....	162
Winter .....	166
<b>DSR (Downhill Speed Regulation)</b> .....	192
Display message .....	239
Setting (on-board computer) .....	219
<b>DVD audio (on-board computer)</b> .....	212
 <b>E</b>	
<b>EASY-ENTRY feature</b> .....	100
Activating/deactivating (on-board computer) .....	218
<b>EASY-EXIT feature</b> .....	100
Crash-responsive .....	101
<b>EASY-PACK cargo compartment management system</b> .....	263
<b>EASY-PACK load-securing kit</b> .....	263
<b>EBD (Electronic Brake force Distribution)</b>	
Display message .....	229
Function/notes .....	68
<b>Electrical fuses</b>	
see Fuses	
<b>Electronic Brake-force Distribution)</b>	
see EBD	
<b>Electronic Stability Program</b>	
see ESP®	
<b>Electronic Traction System</b>	
see ETS/4ETS	
<b>Emergency call</b>	
see mbrace	
<b>Emergency release</b>	
Fuel filler flap .....	153
Vehicle .....	80
<b>Emergency running mode</b>	
Automatic transmission .....	151
<b>Emergency spare wheel</b>	
Storage location .....	299
Stowing .....	299
<b>Emergency tensioning device</b>	
Function .....	57
Safety guidelines .....	37
<b>Emergency unlocking</b>	
Tailgate .....	84
<b>Emissions purification</b>	
Service and warranty information ....	19
<b>Engine</b>	
Irregular running .....	143
Starting problems .....	143
Starting the engine with the key ....	141
Starting with KEYLESS GO .....	141
Switching off .....	158
Warning lamp (engine diagnostics) .....	252
<b>Engine electronics</b>	
Malfunction .....	143
<b>Engine emergency stop</b> .....	322
<b>Engine number</b> .....	356
<b>Engine oil</b>	
Adding .....	284
Checking the oil level .....	283
Display message .....	235
Lubricant additives .....	361
Notes about oil grades .....	361
Temperature (on-board computer) .	209
Viscosity .....	361
<b>ESP® (Electronic Stability Program)</b>	
Activating/deactivating .....	67
Display message .....	223
ETS/4ETS .....	67
Important safety information .....	66
Trailer stabilization .....	68
Warning lamp .....	250
<b>ETS/4ETS (Electronic Traction System)</b> .....	67
<b>Exhaust check</b> .....	161

<b>Exhaust tail pipe (cleaning instructions)</b> .....	291
<b>Exterior lighting</b>	
see Lights	
<b>Exterior mirrors</b>	
Adjusting .....	101
Dipping (automatic) .....	102
Folding in/out (automatically) .....	102
Folding in/out (electrically) .....	102
Folding in when locking (on-board computer) .....	218
Out of position .....	102
Setting .....	102
Storing settings (memory function) .....	103
Storing the parking position .....	103
<b>Exterior view</b> .....	26
 <b>F</b>	
<b>Filling capacity</b>	
see Technical data	
<b>First-aid kit</b> .....	297
<b>Flat tire</b>	
Changing a wheel/mounting the spare wheel .....	305
MOExtended run-flat system .....	311
Preparing the vehicle .....	300
Raising the vehicle .....	306
TIREFIT kit .....	301
<b>Floormat</b> .....	279
<b>Front fog lamp (display message)</b> .....	232
<b>Fuel</b>	
Additives .....	359
Notes .....	358
Premium-grade unleaded gasoline .....	358
Refueling .....	151
Specifications .....	358
Troubleshooting .....	155
<b>Fuel consumption</b>	
Current (on-board computer) .....	220
Notes .....	160
<b>Fuel filler cap (display message)</b> .....	236
<b>Fuel filler flap</b>	
Emergency release .....	153
Opening/closing .....	153
<b>Fuel filter (display message)</b> .....	236
<b>Fuel level</b>	
Calling up the range (on-board computer) .....	220
<b>Fuses</b>	
Dashboard fuse box .....	321
Engine emergency stop .....	322
Fuse allocation chart .....	321
Fuse box in the cargo compartment .....	321
Fuse box in the engine compartment .....	321
Notes .....	320
 <b>G</b>	
<b>Garage door opener</b>	
Clearing the memory .....	279
Notes .....	276
Opening/closing the garage door .....	278
Programming the remote control ...	276
<b>Gear indicator (on-board computer)</b> .....	209
<b>Gear or selector lever (cleaning guidelines)</b> .....	292
<b>Genuine Mercedes-Benz parts</b> .....	354
<b>Genuine wood trim and trim strips (cleaning instructions)</b> .....	292
<b>Glove box</b> .....	257
<b>GTW (Gross Trailer Weight) (definition)</b> .....	345
 <b>H</b>	
<b>Headlamp cleaning system</b> .....	109
Adding washer fluid .....	286
Notes .....	363
<b>Headlamp delayed switch-off</b>	
see Delayed switch-off, exterior lighting	
<b>Headlamp mode (daytime driving)</b>	
see Daytime running lamps	
<b>Headlamps</b>	
Cleaning .....	291
Misting up .....	110
Setting .....	116
<b>Head restraint</b>	
Adjusting (electrically) .....	95
<b>Head restraints</b>	
Adjusting (manually) .....	95

- Adjusting (rear) ..... 96
- Installing/removing (rear) ..... 96
- Luxury ..... 95
- see NECK-PRO head restraints

**Heating**

see Climate control

**High beam flasher** ..... 109**Hill start assist** ..... 142**Hood**

- Closing ..... 283
- Opening ..... 282

**Hydroplaning** ..... 163**I****Immobilizer** ..... 69**Indicator and warning lamps**

- ABS ..... 249
- Brakes ..... 247
- DISTRONIC ..... 253
- Engine diagnostics ..... 252
- ESP® ..... 250
- Fuel tank ..... 252
- Reserve fuel ..... 252
- Seat belt ..... 248
- SRS ..... 251
- Tire pressure monitor ..... 253

**Insect protection on the radiator** .... 283**Instrument cluster**

- Overview ..... 28
- Selecting the language (on-board computer) ..... 214
- \_submenu (on-board computer) ..... 214
- Warning and indicator lamps ..... 29

**Instrument cluster lighting** ..... 28**Instrument lighting**

- see Instrument cluster lighting
- Interior lighting**
- Automatic control ..... 111
- Delayed switch-off (on-board computer) ..... 217
- Emergency lighting ..... 111
- Manual control ..... 111
- Reading lamp ..... 110
- Setting ambient lighting (on-board computer) ..... 216

**ISOFIX (LATCH-type child seat securing system)** ..... 61**J****Jack**

- Storage location ..... 298
- Using ..... 306

**Jump-starting** ..... 315**K****Key**

- Convenience closing feature ..... 86
- Convenience opening feature ..... 86
- Display message ..... 245
- Starting the engine ..... 141

**KEYLESS-GO**

- Button ..... 139
- Convenience closing feature ..... 86
- Locking ..... 73
- Starting the engine ..... 141
- Unlocking ..... 73

**Key positions**

- KEYLESS-GO ..... 139
- SmartKey ..... 139

**Kickdown** ..... 147, 149**L****Lane-change assistant**

see Blind Spot Assist

**Language (on-board computer)** ..... 214**Level control** ..... 181**Level control (display message)** ..... 237**Level setting**

- Basic settings ..... 182

**License plate lamp (display message)** ..... 232**Light**

- Setting ambient lighting (on-board computer) ..... 216

**Lights**

- Activating/deactivating the interior lighting delayed switch-off (on-board computer) ..... 217
- Automatic headlamp mode ..... 107
- Cornering light function ..... 110
- Daytime running lamps ..... 107
- Driving abroad ..... 106
- Fog lamps ..... 108
- Hazard warning lamps ..... 109

High-beam headlamps .....	109	Self-test .....	271
Light switch .....	106	System .....	271
Low-beam headlamps .....	107	Vehicle remote unlocking .....	275
Rear fog lamp .....	108	<b>Mechanical key</b>	
Switching the daytime driving lights on/off (on-board computer) .	215	Function/notes .....	75
Switching the exterior lighting delayed switch-off on/off (on-board computer) .....	216	<b>Memory card (on-board computer)</b> .	212
Switching the surround lighting on/off (on-board computer) .....	215	<b>Memory function</b> .....	103
<b>Light sensor (display message)</b> .....	233	<b>Menu (on-board computer)</b>	
<b>Loading guidelines</b> .....	256	Additional functions .....	219
<b>Locking</b>		AMG .....	209
Automatic .....	79	Audio .....	211
Emergency locking .....	80	DISTRONIC .....	179
From inside the vehicle (central locking button) .....	79	DVD .....	212
<b>Low-beam headlamp (display message)</b> .....	230	Message memory .....	222
<b>LOW RANGE</b>		Navigation .....	212
Display message .....	238	Off-road .....	213
Off-road gear .....	194	Off-road mode .....	211
<b>LOW RANGE off-road gear</b> .....	194	Overview of menus .....	207
<b>Luggage net</b> .....	258	Resetting to factory settings .....	213
<b>Lumbar support</b>		Settings .....	213
4-way lumbar support .....	97	Standard display .....	208
<b>Luxury head restraints</b> .....	95	Telephone .....	220
<b>M</b>		Trip computer .....	219
<b>Main-beam headlamps (display message)</b> .....	231	<b>Messages</b>	
<b>Malfunction message</b>		see Display messages	
see Display messages		<b>Mirrors</b>	
<b>Malfunctions relevant to safety</b>		Sun visor .....	266
Reporting .....	23	see Exterior mirrors or Rear-view mirror	
<b>Manual drive program</b> .....	149	<b>MOExtended run-flat system</b> .....	311
<b>mbrace</b>		<b>MP3</b>	
Call priority .....	274	Operating (on-board computer) ....	212
Display message .....	224	see separate operating instructions	
Downloading destinations (COMAND) .....	274	<b>Multicontour seat</b> .....	97
Emergency call .....	271	<b>Multifunction display</b> .....	206
Important safety notes .....	270	<b>Multifunction steering wheel</b>	
Locating a stolen vehicle .....	275	Operating the on-board computer .	205
MB info call button .....	273	Overview .....	30
Roadside Assistance button .....	272	<b>N</b>	
		<b>Navigation</b>	
		On-board computer .....	212
		see separate operating instructions	
		<b>NECK-PRO head restraints</b>	
		Operation .....	52
		Resetting triggered .....	53
		<b>Notes on breaking-in a new vehicle</b> .....	138

**O****Occupant Classification System (OCS)**

- Faults ..... 47
- Operation ..... 42
- System self-test ..... 45

**Occupant safety**

- Children in the vehicle ..... 58
- System overview ..... 36

**OCS**

- Faults ..... 47
- Operation ..... 42
- System self-test ..... 45

**Octane number (fuel)** ..... 358**Odometer** ..... 208**Off-road**

- 4MATIC ..... 191
- Differential locks ..... 196
- DSR ..... 192
- LOW RANGE off-road gear ..... 194
- Off-road 4ETS ..... 67
- Off-road ABS ..... 66
- Off-road drive program ..... 193

**Off-road drive program** ..... 193

- On-board computer ..... 211

**Off-road driving** ..... 167

- Important safety instructions ..... 166

**Off-road fording** ..... 164**Off-road terrain**

- Off-road ESP ..... 68

**Oil**

- see Engine oil

**On-board computer**

- Additional functions menu ..... 219

- AMG menu ..... 209

- Audio menu ..... 211

- Convenience submenu ..... 218

- Displaying a service message ..... 287

- Displaying the coolant temperature ..... 208

- Displaying the outside temperature ..... 208

- Display messages ..... 222

- DISTRONIC menu ..... 179

- Factory settings ..... 213

- Important safety notes ..... 204

- Instrument cluster submenu ..... 214

- Lighting submenu ..... 215
- Message memory menu ..... 222
- Navigation menu ..... 212
- Off-road menu ..... 213
- Off-road mode ..... 211
- Operating video DVD ..... 212
- Operation ..... 205
- Overview of menus ..... 207
- Selecting the language ..... 214
- Settings menu ..... 213
- Standard display menu ..... 208
- Telephone menu ..... 220
- Time/Date submenu ..... 215
- Trip computer menu ..... 219
- Vehicle submenu ..... 217

**Opening and closing the side trim panels** ..... 114**Operating system**

- see On-board computer

**Outside temperature**

- Calling up (on-board computer) ..... 208
- Display ..... 204

**Overhead control panel**

- Overview ..... 32

**Override feature**

- Rear side windows ..... 64

**P****Paint code number** ..... 355**Paintwork (cleaning instructions)** ..... 290**Panic alarm** ..... 64**Parking** ..... 158**Parking aid**

- PARKTRONIC ..... 184
- Rear view camera ..... 187

**Parking brake** ..... 159**Parking lamp (display message)** ..... 232**Parking position**

- Exterior mirror on the front-passenger side ..... 103

**PARKTRONIC** ..... 184

- Activating/deactivating ..... 186

- Malfunction ..... 187

- Problem ..... 187

- Range of the sensors ..... 185

- Trailer towing ..... 186

- Warning display ..... 185

<b>PASSENGER AIRBAG OFF indicator lamp (only Canada) .....</b>	48
<b>PASSENGER AIRBAG OFF indicator lamp (only USA) .....</b>	42
<b>Pedals .....</b>	160
<b>Permanent four-wheel drive</b> see 4MATIC	
<b>Plastic trim (cleaning instructions) .</b>	292
<b>Power supply (trailer) .....</b>	201
<b>Power washers .....</b>	289
<b>Power windows</b> see Side windows	
<b>Pre-emptive occupant safety system</b> see PRE-SAFE® system	
<b>PRE-SAFE® system</b>	
Display message .....	224
Operation .....	51
<b>Product information .....</b>	19
<b>Program selector button .....</b>	147
<b>Pulling away</b>	
Automatic transmission .....	141
<b>R</b>	
<b>RACETIMER (on-board computer) ....</b>	209
<b>Radar sensor system (on-board computer) .....</b>	217
<b>Radiator cover .....</b>	283
<b>Radio</b>	
Changing a station (on-board computer) .....	211
see separate operating instructions	
<b>Radio-controlled equipment</b>	
Assembly .....	279
<b>Range (on-board computer) .....</b>	220
<b>Rear bench seat</b>	
Folding forwards/back .....	259
<b>Rear compartment</b>	
Activating/deactivating climate control .....	129
Setting the air vents .....	135
Setting the temperature .....	131
<b>Rear fog lamp (display message) ....</b>	232
<b>Rear view camera</b>	
Function/notes .....	187
<b>Rear view camera (cleaning instructions) .....</b>	291
<b>Rear-view mirror</b>	
Anti-glare (manual) .....	101
Dipping (automatic) .....	102
<b>Rear window heating</b>	
Malfunction .....	133
Switching on/off .....	133
<b>Rear window wiper .....</b>	118
Replacing the wiper blade .....	119
<b>Refueling .....</b>	151
<b>Remote control</b>	
Programming (garage door opener) .....	276
<b>Reporting</b>	
Malfunctions relevant to safety .....	23
<b>Reserve fuel</b>	
Display message .....	236
Warning lamp .....	252
<b>Reset button .....</b>	28
<b>Residual heat</b>	
Switching on/off .....	134
<b>Restraint systems</b> see SRS	
<b>Reversing lamp (display message) ...</b>	232
<b>Roadside Assistance (breakdown) ....</b>	20
<b>Roof carrier .....</b>	265
<b>Roof lining and carpets (Cleaning guidelines) .....</b>	293
<b>Route</b>	
see Route guidance (on-board computer)	
<b>Route guidance (on-board computer) .....</b>	212
<b>S</b>	
<b>Safety</b>	
Children in the vehicle .....	58
Child restraint systems .....	59
Occupant Classification System (OCS) .....	42
Overview of occupant safety systems .....	36
<b>Safety systems</b> see Driving safety systems	
<b>Seat belts</b>	
Adjusting the driver's and front-passenger seat belt .....	56
Adjusting the height .....	56

Belt force limiters .....	57	Refrigerant (air-conditioning system) .....	362
Cleaning .....	293	Washer fluid .....	363
Correct usage .....	54	<b>Settings</b>	
Emergency Tensioning Devices .....	57	Factory (on-board computer) .....	213
Fastening .....	55	On-board computer .....	213
Important safety guidelines .....	53	<b>Shift ranges</b> .....	148
Releasing .....	56	<b>Side impact air bag</b> .....	40
Safety guidelines .....	37	<b>Side marker lamp (display message)</b> .....	232
Switching belt adjustment on/off (on-board computer) .....	218	<b>Side windows</b>	
Warning lamp .....	248	Convenience closing feature .....	86
Warning lamp (function) .....	57	Convenience opening feature .....	86
<b>Seat heating</b>		Important safety information .....	84
Indicator lamp (Malfunction) .....	98	Opening/closing .....	85
<b>Seats</b>		Resetting .....	87
Adjusting (electrically) .....	94	Troubleshooting .....	87
Adjusting the 4-way lumbar support .....	97	<b>Sliding sunroof</b>	
Adjusting the head restraint .....	95	Important safety information .....	88
Cleaning the cover .....	292	Troubleshooting .....	89
Correct driver's seat position .....	92	see Tilt/sliding sunroof	
Important safety instructions .....	93	<b>SmartKey</b>	
Multicontour seat .....	97	Changing the battery .....	76
Storing settings (memory function) .....	103	Changing the programming .....	75
Switching seat heating on/off .....	97	Checking the battery .....	76
Switching the seat ventilation on/off .....	98	Important safety notes .....	72
<b>Seat ventilation</b>		Malfunction .....	77
Indicator lamp (Malfunction) .....	99	<b>Snow chains</b> .....	165
<b>Securing hooks</b> .....	260	<b>Socket</b> .....	268
<b>Sensors (cleaning instructions)</b> .....	291	Dashboard .....	268
<b>Service indicator</b>		Front-passenger footwell .....	268
see Service interval display		Luggage compartment .....	269
<b>Service interval display</b> .....	287	Rear compartment .....	269
Displaying a service message (on-board computer) .....	287	<b>SOS</b>	
<b>Service products</b>		see mbrace	
AdBlue® special additives .....	360	<b>Spare wheel</b>	
Brake fluid .....	362	Notes/data .....	352
Coolant (engine) .....	362	Storage location .....	299
Engine oil .....	361	Stowing .....	299
Filling capacity .....	357	see Emergency spare wheel	
Fuel .....	358	<b>Speedometer</b>	
Important safety notes .....	356	Additional speedometer (on-board computer) .....	208
Notes .....	356	Segments .....	205

<b>SRS (Supplemental Restraint System)</b>	see SRS
Display message .....	224
Introduction .....	36
Warning lamp .....	251
Warning lamp (function) .....	36
<b>Standard display (on-board computer)</b> .....	208
<b>Starting the engine</b>	
Important safety instructions .....	140
<b>Station</b>	
see Radio	
<b>Status line (on-board computer)</b>	
Multifunction display .....	206
Selecting the display .....	214
<b>Steering (display message)</b> .....	244
<b>Steering wheel</b>	
Adjusting (electrically) .....	100
Adjusting (manually) .....	99
Buttons (on-board computer) .....	205
Cleaning .....	292
Important safety instructions .....	99
Memory function (storing settings) .....	100
Steering wheel heating .....	100
Storing settings (memory function) .....	103
<b>Steering wheel heating</b>	
Indicator lamp (Malfunction) .....	100
<b>Steering wheel paddle shifters</b> .....	148
<b>Stowage compartments</b>	
Armrest (under) .....	257
Glove box .....	257
<b>Stowage space</b>	
Center console .....	257
Center console (rear) .....	258
Cup holders .....	265
Important safety information .....	256
<b>Submenu (on-board computer)</b>	
Convenience .....	218
Instrument cluster .....	214
Lighting .....	215
Time/Date .....	215
Vehicle .....	217
<b>Summer opening</b>	
see Convenience opening feature	
<b>Sun visor</b> .....	266
<b>Supplemental Restraint System</b>	
see SRS	
<b>Surround lighting (on-board computer)</b> .....	215
<b>SUV</b>	
(Sport Utility Vehicle) .....	21
<b>Switching off the alarm (ATA)</b> .....	69
<b>T</b>	
<b>Tachometer</b> .....	204
<b>Tailgate</b>	
Display message .....	244
Emergency unlocking .....	84
Important safety guidelines .....	80
Limiting the opening angle .....	83
<b>Taillight</b>	
see Tail lamps	
<b>Tank contents</b>	
Gauge .....	28
<b>Technical data</b> .....	354
ML 350 .....	364
ML 350 4MATIC .....	364
ML 350 BlueTEC 4MATIC .....	363
ML 550 4MATIC .....	364
ML 63 AMG .....	365
Tires/wheels .....	347
<b>TELEAID</b>	
Call priority .....	274
Display message .....	224
Downloading destinations (COMAND) .....	274
Emergency call .....	271
Important safety notes .....	270
Locating a stolen vehicle .....	275
MB info call button .....	273
Roadside Assistance button .....	272
Self-test .....	271
System .....	271
Vehicle remote unlocking .....	275
<b>Telephone</b>	
Accepting a call .....	220
Display message .....	245
Menu (on-board computer) .....	220
Number from the phone book .....	221
Redialing .....	221
Rejecting/ending a call .....	221
<b>Telephone compartment</b> .....	257

<b>Telescopic rod (EASY-PACK load-securing kit)</b> .....	264
<b>Temperature</b>	
Coolant (on-board computer) .....	208
Displaying the outside temperature .....	208
Engine oil (on-board computer) .....	209
Outside temperature .....	204
Setting .....	131
<b>Theft deterrent locking system</b>	
Immobilizer .....	69
<b>Tilt/sliding sunroof</b>	
Opening/closing .....	89
Resetting .....	89
<b>Time (on-board computer)</b> .....	215
<b>Timer (on-board computer)</b> .....	209
<b>TIREFIT kit</b> .....	301
<b>Tire pressure</b>	
Calling up (on-board computer) .....	331
Checking manually .....	329
Display message .....	241
Maximum .....	334
Notes .....	327
Not reached (TIREFIT) .....	303
Pressure loss warning .....	329
Reached (TIREFIT) .....	304
Recommended .....	326
<b>Tire pressure monitor</b>	
Warning lamp .....	253
<b>Tire pressure monitoring system</b>	
Function/notes .....	331
Restarting .....	333
<b>Tires</b>	
Aspect ratio (definition) .....	346
Average weight of the vehicle occupants (definition) .....	344
Bar (definition) .....	344
Characteristics .....	344
Checking .....	325
Cleaning .....	326
Definition of terms .....	344
Direction of rotation .....	338
Distribution of the vehicle occupants (definition) .....	347
DOT, Tire Identification Number (TIN) .....	343
DOT (Department of Transportation) (definition) .....	344
Flat tire .....	300
GAWR (Gross Axle Weight Rating) (definition) .....	345
GTW (Gross Trailer Weight) (definition) .....	345
Guidelines to be observed .....	325
GVW (Gross Vehicle Weight) (definition) .....	345
GVWR (Gross Vehicle Weight Rating) (definition) .....	345
Increased vehicle weight due to optional equipment (definition) .....	345
Kilopascal (kPa) (definition) .....	345
Labeling (overview) .....	340
Load bearing index (definition) .....	346
Load index .....	343
Load index (definition) .....	345
Maximum loaded vehicle weight (definition) .....	345
Maximum load on a tire (definition) .....	346
Maximum permissible tire pressure (definition) .....	346
Maximum tire load .....	338
Maximum tire loading (definition) .....	346
Optional equipment weight (definition) .....	346
PSI (pounds per square inch) (definition) .....	346
Replacing .....	340
Service life .....	325
Sidewall (definition) .....	346
Speed index (definition) .....	345
Storing .....	326
Structure and characteristics (definition) .....	344
Temperature .....	339
TIN (Tire Identification Number) (definition) .....	346
Tire bead (definition) .....	346
Tire pressure (definition) .....	346
Tire pressures (recommended) .....	344
Tire quality classes .....	338
Tire size (data) .....	347
Tire size designation, load-bearing capacity, speed index .....	341
Tire tread .....	325
Tire tread (definition) .....	346

Total load limit (definition) .....	347
Traction .....	339
Traction (definition) .....	346
Tread wear .....	339
TWR (permissible trailer drawbar noseweight) (definition) .....	347
Uniform tire quality classification standards (definition) .....	344
Unladen weight (definition) .....	345
Wear indicator (definition) .....	347
Wheel rim (definition) .....	345
<b>Tires and wheels (important safety information)</b> .....	324
<b>Top Tether</b> .....	62
<b>Towing</b>	
Important safety guidelines .....	317
<b>Towing a trailer</b>	
Driving tips .....	198
<b>Towing away</b>	
Installing the towing eye .....	318
Removing the towing eye .....	319
<b>Trailer</b>	
Coupling up .....	198
Decoupling .....	200
Display message .....	230
Power supply .....	201
Towing .....	199
<b>Trailer loads and drawbar noseweights</b> .....	200
<b>Trailer towing</b> .....	147
Blind Spot Assist .....	191
ESP® .....	68
PARKTRONIC .....	186
<b>Transfer case</b> .....	151
<b>Transmission position display</b> .....	145
<b>Transmission positions</b> .....	146
<b>Traveling uphill</b>	
Brow of hill .....	171
Driving downhill .....	171
Maximum gradient-climbing capability .....	170
<b>Trip computer (on-board computer)</b> .....	219
<b>Trip odometer</b>	
Calling up .....	208
Resetting (on-board computer) .....	220
<b>Trunk</b>	
Automatic opening .....	82, 83
<b>Turn signal (display message)</b> .....	230
<b>Turn signals</b> .....	109
<b>TWR (permissible trailer drawbar noseweight) (definition)</b> .....	347
<b>Type plate</b>	
see Vehicle identification plate	
<b>U</b>	
<b>Unlocking</b>	
Emergency unlocking .....	80
From inside the vehicle (central unlocking button) .....	79
<b>V</b>	
<b>Vanity mirror</b>	
Sun visor .....	266
<b>Vehicle</b>	
Data acquisition .....	23
Emergency release .....	80
Equipment .....	19
Exterior view .....	26
Individual settings (on-board computer) .....	213
Loading .....	334
Lowering .....	310
Maintenance .....	20
Parking up .....	159
Raising .....	306
Reporting problems .....	22
Towing away .....	317
Tow-starting .....	317
Transporting .....	319
<b>Vehicle data</b>	
see Technical data	
<b>Vehicle identification number</b>	
see VIN	
<b>Vehicle identification plate</b> .....	355
<b>Vehicle tool kit</b> .....	298
<b>Video (DVD)</b> .....	212
<b>Video DVD (on-board computer)</b> .....	212
<b>VIN</b> .....	355

**W****Warning and indicator lamps**

Overview ..... 29

PASSENGER AIRBAG OFF

indicator lamp (only Canada) ..... 48

PASSENGER AIRBAG OFF

indicator lamp (only USA) ..... 42

**Warranty** ..... 354**Wheel bolt tightening torque** ..... 310**Wheel chock** ..... 306**Wheels**

Changing/replacing ..... 340

Changing a wheel ..... 305

Checking ..... 325

Cleaning ..... 289

Guidelines to be observed ..... 325

Mounting a wheel ..... 308

Removing a wheel ..... 308

Tightening torque ..... 310

Wheel size/tire size ..... 347

**Window curtain air bag** ..... 41**Windows**

see Side windows

**Windows (cleaning instructions)** ..... 290**Windshield**

Defrosting ..... 132

Infrared reflective ..... 279

**Windshield washer fluid (display message)** ..... 245**Windshield washer system**

Adding washer fluid ..... 286

Notes ..... 363

**Windshield wipers**

Important safety notes ..... 117

Replacing the wiper blades .... 118, 119

Switching on/off ..... 117

Troubleshooting ..... 120

**Winter operation** ..... 166

Radiator cover ..... 283

**Winter tires** ..... 165**Wiper blades**

Cleaning ..... 290