

Mercedes-Benz



Operator's Manual

S 350 TURBODIESEL

Product information

Kindly observe the following in your own best interest:

We recommend using Mercedes-Benz original parts as well as conversion parts and accessories explicitly approved by us for your vehicle model. We have tested these parts to determine their reliability, safety and their special suitability for Mercedes-Benz vehicles.

We are unable to make an assessment for other products and therefore cannot be held responsible for them, even if in individual cases an official approval or authorization by governmental or other agencies should exist. Use of such parts and accessories could adversely affect the safety, performance or reliability of your vehicle. Please do not use them. Mercedes-Benz original parts as well as conversion parts and accessories approved by us are available at your authorized Mercedes-Benz Center where you will receive comprehensive information, also on permissible technical modifications, and where proper installation will be performed.

Our company and staff congratulate you on the purchase of your new Mercedes-Benz.

Your selection of our product is a demonstration of your trust in our company name. Further, it exemplifies your desire to own an automobile that will be as easy as possible to operate and provide years of service.

Your Mercedes-Benz represents the efforts of many skilled engineers and craftsmen. To ensure your pleasure of ownership, and for your safety and that of your passengers, we ask you to make a small investment of your time:

- Please read this manual carefully before putting it aside. Then return it to your vehicle where it will be handy for your reference.
- Please abide by the recommendations contained in this manual. They are designed to acquaint you with the operation of your Mercedes-Benz.
- Please abide by the warnings and cautions contained in this manual. They are designed to help improve the safety of the vehicle operator and occupants.

We extend our best wishes for many miles of safe, pleasurable driving.

DaimlerChrysler AG

Operator's manual

This Operator's Manual contains a great deal of useful information. We urge you to read it carefully and familiarize yourself with the vehicle before driving.

For your own safety and longer service life of the vehicle, we urge you to follow the instructions and warnings contained in this manual. Ignoring them could result in damage to the vehicle or personal injury to you or others. Vehicle damage caused by failure to follow instructions is not covered by the Mercedes-Benz Limited Warranty.

Your vehicle may have some or all of the equipment described in this manual. Therefore, you may find explanations for optional equipment not installed in your vehicle. If you have any questions about the operation of any equipment, your authorized Mercedes-Benz Center will be glad to demonstrate the proper procedures.

Owner's Service and Warranty Policy

The Owner's Service and Warranty Information Booklet contains detailed information about the warranties covering your Mercedes-Benz, including:

- New Car Limited Warranty,
- Emission System Warranty,
- Emission Performance Warranty,
- State Warranty Enforcement Laws (Lemon Laws).

Important notice for California retail buyers of Mercedes-Benz automobiles

Under California law you may be entitled to a replacement of your vehicle or a refund of the purchase price, if Mercedes-Benz USA,LLC or its authorized Mercedes-Benz Center fails to conform the vehicle to its express warranties after a reasonable number of repair attempts during the period of one year or 12 000 miles from original delivery of the vehicle. A reasonable number of repair attempts is presumed for a retail buyer (1) if the vehicle is out of service by reason of repair of substantial nonconformities for a cumulative total of more than 30 calendar days or (2) the same substantial non-conformity has been subject to repair four or more times and you have at least once directly notified us in writing of the need to repair the non-conformity and have given us an opportunity to perform the repair ourselves. Notifications should be sent to the nearest Mercedes-Benz Regional Office listed in the Service and Warranty Information Booklet.

Maintenance

The Service Booklet describes all the necessary maintenance work which should be performed at regular intervals.

Always have the Service Booklet with you when you take the vehicle to your authorized Mercedes-Benz Center for service. The service advisor will record each service in the booklet for you.

Roadside assistance

The Mercedes-Benz Roadside Assistance Program provides factory trained technical help in the event of a breakdown. Calls to the toll-free Roadside Assistance number:

1-800-222-0100 (in the USA) only

will be answered by Mercedes-Benz Client Assistance Representatives 24 hours a day, 365 days a year.

For additional information refer to the Mercedes-Benz Roadside Assistance Program brochure in your glove box.

Change of address or ownership

If you change your address, be sure to send in the "Change of Address Notice" found in the Owner's Service and Warranty Policy Booklet. It is in your own interest that we can contact you should the need arise.

If you sell your Mercedes, please leave all owner's literature with the vehicle to make it available to the next owner.

If you bought this vehicle used, be sure to send in the "Notice of Purchase of Used Car" found in the Owner's Service and Warranty Policy Booklet.

Operating your vehicle outside the USA or Canada

If you plan to operate your vehicle in foreign countries, please be aware that service facilities or replacement parts may not be readily available.

Certain Mercedes-Benz models are available for delivery in Europe under our European Delivery Program. For details, consult your authorized Mercedes-Benz dealer or write to:

In the USA: Mercedes-Benz USA, LLC European Delivery Department One Mercedes Drive Montvale, NJ 07645 In Canada: Mercedes-Benz Canada, Inc. European Delivery Department 849 Eglinton Avenue East Toronto, Ontario M4G 2L5 We continuously strive to improve our product, and ask for your understanding that we reserve the right to make changes in design and equipment. Therefore, information, illustrations and descriptions in this Operator's Manual might differ from your vehicle.

Optional equipment is also described in this manual, including operating instructions wherever necessary. Since they are special-order items, the descriptions and illustrations herein may vary slightly from the actual equipment of your vehicle.

6

If there are any equipment details that are not shown or described in this Operator's Manual, your authorized Mercedes-Benz Center will be glad to inform you of correct care and operating procedures.

The Operator's Manual and Service Booklet are important documents and should be kept with the vehicle.

Check Regularly and Before a Long Trip

See Index

The First 1000 Miles (1500 km)

The more cautiously you treat your vehicle during the break-in period, the more satisfied you will be with its performance later on. Therefore, drive your vehicle during the first 1500 km (1000 miles) at moderate vehicle and engine-speeds.

During this period, avoid heavy loads (full throttle driving) and high RPM (no more than 2/3 of maximum permissible speed in each gear as indicated on the speedometer).

Avoid accelerating by kickdown. It is not recommended to brake the vehicle by manually shifting to a lower gear. We recommend to select positions "3" or "2" only at moderate speeds (for hill driving).

After 1000 miles (1500 km) speeds may be gradually increased to the permissible maximum

Maintenance

We strongly recommend that you have your vehicle serviced by your authorized Mercedes-Benz dealer, in accordance with the Maintenance Booklet.

Failure to have the vehicle maintained in accordance with the Maintenance Booklet may result in vehicle damage not covered by the Mercedes-Benz Limited Warranty.

Introduction

Product information Operator's manual <u>Consumer Information</u> <u>Problems with your vehicle</u> <u>Reporting Safety Defects</u> Index

Instruments and Controls

Instruments and Controls
Instrument Cluster
Indicator Lamp Symbols
Catalytic Converter
Starting and Turning Off the Engine
Driving Instructions

Operation

<u>Air Outlets</u>
Automatic Climate Control
Rear Passenger Compartment:
Adjustable Air Outlet
Active Charcoal Filter
Car Keys
Infrared Remote Control
Central Locking System, Doors
Trunk

	Power Windows and
	Sliding/Pop-Up Roof
2	Power Closing Assist for
3	Doors and trunk Lid
130	Anti-Theft Alarm System
131	Power Seats, Front
132	Lumbar Support
134	Multicontour Backrest
	Heated Seats
	Armrest, Front
	Armrest, Rear
10	Power head Restrains, Rear
12	Adjustable Steering Wheel
13	Seat Belts and Supplemental
14	Restrain System (SRS)
15	Seat Belts
16	Emergency Tensioning
	Retractor (ETR)
	Airbags
	Steering Lock
20	Combination Switch
21	Exterior Lamp Switch
	Inside and Exterior
24	Rear View Mirrors
25	Sun Visors
26	Vanity Mirrors
27	Interior Lighting
30	Storage Compartments
31	

	<u>Ashtrays</u>	64
32	Lighter	64
	Sliding Roof with Rear	
33	Pop-Up Feature	65
34	Power Windows	66
35	Rear Window Sunshade	67
38	Rear Window Defroster	68
38	Shelf below Rear Window	68
39	Antenna	69
40	Setting Clock	69
42	Cellular Telephone	69
43	Instrument Lamps	70
44	Display Illumination	70
	Trip Odometer	70
45		
45 45	Driving	
	-	
	Driving Drinking and Driving	72
45	Driving	72 72
45 48	Driving Drinking and Driving	
45 48 49	Driving Drinking and Driving Parking Brake Driving Off Automatic Transmissions	72
45 48 49 54	Driving Drinking and Driving Parking Brake Driving Off Automatic Transmissions Rear Fender Indicators	72 72
45 48 49 54 55	Driving Drinking and Driving Parking Brake Driving Off Automatic Transmissions Rear Fender Indicators Cruise Control	72 72 73
45 48 49 54 55	Driving Drinking and Driving Parking Brake Driving Off Automatic Transmissions Rear Fender Indicators Cruise Control Charge Indicator Lamp	72 72 73 76
45 48 49 54 55 57	Driving Drinking and Driving Parking Brake Driving Off Automatic Transmissions Rear Fender Indicators Cruise Control Charge Indicator Lamp Parking Brake	72 72 73 76 76
45 48 49 54 55 57 58	Driving Drinking and Driving Parking Brake Driving Off Automatic Transmissions Rear Fender Indicators Cruise Control Charge Indicator Lamp Parking Brake Tachometer	72 72 73 76 76 78
45 48 49 54 55 57 58 61	Driving Drinking and Driving Parking Brake Driving Off Automatic Transmissions Rear Fender Indicators Cruise Control Charge Indicator Lamp Parking Brake	72 72 73 76 76 76 78 78

Pressure Warning LampLow Engine Oil LevelWarning LampEngine Oil ConsumptionFuel Consumption GaugeFuel Reserve Warning LampOutside TemperatureIndicatorCoolant Temperature GaugeLow Engine Coolant LevelWarning LampLow Windshield and HeadlampWasher System Fluid LevelWarning LampExterior Lamp FailureIndicator LampSeat Belt Warning LampBrake Pad Wear Indicator lampBrake Warning LampAutomatic LockingDifferential (ASD)Adaptive Damping System (ADS)Emission ControlTraveling AbroadWinter Driving	
Low Engine Oil Level Warning Lamp Engine Oil Consumption Fuel Consumption Gauge Fuel Reserve Warning Lamp Outside Temperature Indicator Coolant Temperature Gauge Low Engine Coolant Level Warning Lamp Low Windshield and Headlamp Washer System Fluid Level Warning Lamp Exterior Lamp Failure Indicator Lamp Seat Belt Warning Lamp Brake Pad Wear Indicator lamp Brake Warning Lamp Antilock Brake System (ABS) Automatic Locking Differential (ASD) Adaptive Damping System (ADS) Emission Control Traveling Abroad Winter Driving	Engine Oil Pressure Gauge with Oil
Warning LampEngine Oil ConsumptionFuel Consumption GaugeFuel Reserve Warning LampOutside TemperatureIndicatorCoolant Temperature GaugeLow Engine Coolant LevelWarning LampLow Windshield and HeadlampWasher System Fluid LevelWarning LampExterior Lamp FailureIndicator LampSeat Belt Warning LampBrake Pad Wear Indicator lampBrake Warning LampAntilock Brake System (ABS)Automatic LockingDifferential (ASD)Adaptive Damping System (ADS)Emission ControlTraveling AbroadWinter Driving	Pressure Warning Lamp
Engine Oil Consumption Fuel Consumption Gauge Fuel Reserve Warning Lamp Outside Temperature Indicator Coolant Temperature Gauge Low Engine Coolant Level Warning Lamp Low Windshield and Headlamp Washer System Fluid Level Warning Lamp Exterior Lamp Failure Indicator Lamp Seat Belt Warning Lamp Brake Pad Wear Indicator lamp Brake Warning Lamp Antilock Brake System (ABS) Automatic Locking Differential (ASD) Adaptive Damping System (ADS) Emission Control Traveling Abroad Winter Driving	Low Engine Oil Level
Fuel Consumption GaugeFuel Reserve Warning LampOutside TemperatureIndicatorCoolant Temperature GaugeLow Engine Coolant LevelWarning LampLow Windshield and HeadlampWasher System Fluid LevelWarning LampExterior Lamp FailureIndicator LampSeat Belt Warning LampBrake Pad Wear Indicator lampBrake Warning LampAntilock Brake System (ABS)Automatic LockingDifferential (ASD)Adaptive Damping System (ADS)Emission ControlTraveling AbroadWinter Driving	Warning Lamp
Fuel Consumption GaugeFuel Reserve Warning LampOutside TemperatureIndicatorCoolant Temperature GaugeLow Engine Coolant LevelWarning LampLow Windshield and HeadlampWasher System Fluid LevelWarning LampExterior Lamp FailureIndicator LampSeat Belt Warning LampBrake Pad Wear Indicator lampBrake Warning LampAntilock Brake System (ABS)Automatic LockingDifferential (ASD)Adaptive Damping System (ADS)Emission ControlTraveling AbroadWinter Driving	Engine Oil Consumption
Fuel Reserve Warning LampOutside TemperatureIndicatorCoolant Temperature GaugeLow Engine Coolant LevelWarning LampLow Windshield and HeadlampWasher System Fluid LevelWarning LampExterior Lamp FailureIndicator LampSeat Belt Warning LampBrake Pad Wear Indicator lampBrake Warning LampAntilock Brake System (ABS)Automatic LockingDifferential (ASD)Adaptive Damping System (ADS)Emission ControlTraveling AbroadWinter Driving	
Outside TemperatureIndicatorCoolant Temperature GaugeLow Engine Coolant LevelWarning LampLow Windshield and HeadlampWasher System Fluid LevelWarning LampExterior Lamp FailureIndicator LampSeat Belt Warning LampBrake Pad Wear Indicator lampBrake Warning LampAntilock Brake System (ABS)Automatic LockingDifferential (ASD)Adaptive Damping System (ADS)Emission ControlTraveling AbroadWinter Driving	
<u>Indicator</u> <u>Coolant Temperature Gauge</u> <u>Low Engine Coolant Level</u> <u>Warning Lamp</u> <u>Low Windshield and Headlamp</u> <u>Washer System Fluid Level</u> <u>Warning Lamp</u> <u>Exterior Lamp Failure</u> <u>Indicator Lamp</u> <u>Seat Belt Warning Lamp</u> <u>Brake Pad Wear Indicator lamp</u> <u>Brake Warning Lamp</u> <u>Brake Warning Lamp</u> <u>Antilock Brake System (ABS)</u> <u>Automatic Locking</u> <u>Differential (ASD)</u> <u>Adaptive Damping System (ADS)</u> <u>Emission Control</u> <u>Traveling Abroad</u> <u>Winter Driving</u>	
Low Engine Coolant Level Warning Lamp Low Windshield and Headlamp Washer System Fluid Level Warning Lamp Exterior Lamp Failure Indicator Lamp Seat Belt Warning Lamp Brake Pad Wear Indicator lamp Brake Warning Lamp Antilock Brake System (ABS) Automatic Locking Differential (ASD) Adaptive Damping System (ADS) Emission Control Traveling Abroad Winter Driving	
Warning Lamp Low Windshield and Headlamp Washer System Fluid Level Warning Lamp Exterior Lamp Failure Indicator Lamp Seat Belt Warning Lamp Brake Pad Wear Indicator lamp Brake Warning Lamp Antilock Brake System (ABS) Automatic Locking Differential (ASD) Adaptive Damping System (ADS) Emission Control Traveling Abroad Winter Driving	Coolant Temperature Gauge
Low Windshield and Headlamp Washer System Fluid Level _Warning Lamp Exterior Lamp Failure _Indicator Lamp Seat Belt Warning Lamp Brake Pad Wear Indicator lamp Brake Warning Lamp Antilock Brake System (ABS) Automatic Locking Differential (ASD) Adaptive Damping System (ADS) Emission Control Traveling Abroad Winter Driving	Low Engine Coolant Level
Washer System Fluid LevelWarning LampExterior Lamp FailureIndicator LampSeat Belt Warning LampBrake Pad Wear Indicator lampBrake Warning LampAntilock Brake System (ABS)Automatic LockingDifferential (ASD)Adaptive Damping System (ADS)Emission ControlTraveling AbroadWinter Driving	Warning Lamp
Washer System Fluid LevelWarning LampExterior Lamp FailureIndicator LampSeat Belt Warning LampBrake Pad Wear Indicator lampBrake Warning LampAntilock Brake System (ABS)Automatic LockingDifferential (ASD)Adaptive Damping System (ADS)Emission ControlTraveling AbroadWinter Driving	Low Windshield and Headlamp
Exterior Lamp Failure Indicator Lamp Seat Belt Warning Lamp Brake Pad Wear Indicator lamp Brake Warning Lamp Antilock Brake System (ABS) Automatic Locking Differential (ASD) Adaptive Damping System (ADS) Emission Control Traveling Abroad Winter Driving	
Indicator Lamp Seat Belt Warning Lamp Brake Pad Wear Indicator lamp Brake Warning Lamp Antilock Brake System (ABS) Automatic Locking Differential (ASD) Adaptive Damping System (ADS) Emission Control Traveling Abroad Winter Driving	Warning Lamp
Seat Belt Warning Lamp Brake Pad Wear Indicator lamp Brake Warning Lamp Antilock Brake System (ABS) Automatic Locking Differential (ASD) Adaptive Damping System (ADS) Emission Control Traveling Abroad Winter Driving	Exterior Lamp Failure
Brake Pad Wear Indicator lampBrake Warning LampAntilock Brake System (ABS)Automatic LockingDifferential (ASD)Adaptive Damping System (ADS)Emission ControlTraveling AbroadWinter Driving	Indicator Lamp
Brake Warning Lamp Antilock Brake System (ABS) Automatic Locking Differential (ASD) Adaptive Damping System (ADS) Emission Control Traveling Abroad Winter Driving	Seat Belt Warning Lamp
Brake Warning Lamp Antilock Brake System (ABS) Automatic Locking Differential (ASD) Adaptive Damping System (ADS) Emission Control Traveling Abroad Winter Driving	Brake Pad Wear Indicator lamp
Automatic Locking Differential (ASD) Adaptive Damping System (ADS) Emission Control Traveling Abroad Winter Driving	
Differential (ASD)Adaptive Damping System (ADS)Emission ControlTraveling AbroadWinter Driving	Antilock Brake System (ABS)
Adaptive Damping System (ADS) Emission Control Traveling Abroad Winter Driving	Automatic Locking
Emission Control Traveling Abroad Winter Driving	Differential (ASD)
<u>Traveling Abroad</u> <u>Winter Driving</u>	Adaptive Damping System (ADS)
Winter Driving	Emission Control
Winter Driving	Traveling Abroad
Snow Chains	
	Snow Chains

Practical Hints

78 Hood

79	Checking Coolant Level
79	Adding Coolant
79	Checking Engine Oil Level
80	Checking Automatic
	Transmission Fluid Level
80	Trunk Lamp
80	Spare Wheel, Lug Wrench
	First Aid Kit
81	Stowing Things in the Vehicle
	Vehicle Jack
	Vehicle Tools
81	Storage Compartment below
	Vehicle Tool Box
82	Wheels
82	Changing Wheels
82	Tire Inflation Pressure
83	Battery
84	Exterior Lamps
	Fuses
85	Jump Starting
86	Towing the Vehicle
87	Cleaning and Care of the Vehicle
87	Testing Infrared Remote Control
88	Front Head Restrains
88	Rear Seat Cushion
	Manual Closing of Trunk Lid
	Manual Retraction of

	Trunk Lid Handle	117
90	Replacing Wiper Blades	118
91	Manual Release of Fuel	
91	Filler Flap	119
92	Roof Rack	119
	Emergency Operation	
93	of Sliding Roof	120
95	Layout of Poly-V-Belt drive	120
95		
95	Technical Data. Fuels,	
95	Coolants, Lubricants etc.	
96	Consumer Information	
96		
	Identification Plates	122
96	Vehicle Data Card	123
97	Warranty Coverage	124
98	Technical Data	124
101	Fuels, Coolants, Lubricants etc.	125
102	Capacities	125
103	Engine Oils	127
107	Engine Oils Additives	127
108	Brake Fluid	127
111	Air Conditioner Refrigerant	127
111	Diesel Fuels	128
115	Coolants	129
116	Check Regularly and Before a Long	
117	trip	138
117		

Instruments and Controls

For more detailed descriptions see Index.

- 1 Adjustable air outlet
- 2 Exterior lamp switch
- 3 Parking brake release
- 4 Hood lock release
- 5 Parking brake pedal
- 6 Steering wheel adjustment switch
- 7 Combination switch
- 8 Cruise control switch
- 9 Horn, airbag
- 10 Instrument cluster
- 11 Steering lock with preglow / starter switch
- 12 Adjustable air outlet
- 13 Heated air supply button center air outlet
- 14 Non heated /coolant air supply button center air outlet
- 15 Air volume control for left air outlet
- 16 Air volume control for left center air outlet
- 17 Air volume control for right center air outlet

Air volume control for right air outlet
Lock for telephone control unit compartment and glove box
Glove box (illuminated with key in steering lock position 2)
Rear window defroster switch
Switch for rear seat head restrains
Active charcoal filter switch
Central locking switch, Indicator lamp for anti-theft alarm system
Hazard warning flasher switch
Automatic climate control
Radio
Snow chain switch
Adaptive damping system adjustment switch
Seat heater switch
Switch for rear window sunshade
Power window switch 18 20 21 22 23 24 25 26 27 28 29 30 31 32 33 **34** Power window switch