

700J Crawler Dozer Operation and Test

(Serial No. - 139435)

TECHNICAL MANUAL 700J Crawler Dozer Operation and Test (S.N. —139435) TM2290 26OCT12 (ENGLISH)

For complete service information also see:

700J Crawler Dozer Repair (S.N. —139435)	TM2291
700J Crawler Dozer Operator's Manual.....	OMT211725
Alternators and Starting Motors	CTM77
<i>POWERTECH</i> [™] 4.5 L and 6.8 L Diesel Engines—Base Engine	CTM104
<i>POWERTECH</i> [™] 4.5L and 6.8L Diesel Engines Level 12 Electronic Fuel System with DE10 Pump.....	CTM331
4000S Winches	CTM166
Super Caddy Oil Cleanup Procedure.....	CTM310
120 Series Hydraulic Cylinders	CTM114319
Undercarriage Appraisal Manual	SP326
Specifications Manual.....	SP458


Worldwide Construction
And Forestry Division
LITHO IN U.S.A.

Introduction

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX, TMIFC -19-29SEP98-1/1

Contents

Section 9000—General Information

Group 01—Safety

Section 9005—Operational Checkout Procedure

Group 10—Operational Checkout Procedure

Section 9010—Engine

Group 05—Theory Of Operation

Group 15—System Diagnostic Information

Group 25—Tests

Section 9015—Electrical System

Group 05—System Information

Group 10—System Diagrams

Group 15—Sub-System Diagnostics

Group 20—References

Section 9025—Hydraulic System

Group 05—Theory of Operation

Group 15—Diagnostic Information

Group 20—Adjustments

Group 25—Tests

Section 9026—Hydrostatic System

Group 05—Theory of Operation

Group 15—Diagnostic Information

Group 25—Test

Section 9031—Heating and Air Conditioning

Group 05—Theory of Operation

Group 15—Diagnostic Information

Group 25—Test

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2012
DEERE & COMPANY
Moline, Illinois
All rights reserved.
A John Deere ILLUSTRATION © Manual
Previous Editions
Copyright © 2005, 2006, 2007, 2008, 2010, 2011

**Section 9000
General Information**

Contents

	Page
Group 01—Safety	
Recognize Safety Information	9000-01-1
Follow Safety Instructions.....	9000-01-1
Operate Only If Qualified	9000-01-1
Wear Protective Equipment.....	9000-01-2
Avoid Unauthorized Machine	
Modifications.....	9000-01-2
Inspect Machine	9000-01-2
Stay Clear of Moving Parts.....	9000-01-2
Avoid High-Pressure Fluids	9000-01-3
Beware of Exhaust Fumes	9000-01-3
Prevent Fires	9000-01-4
Prevent Battery Explosions	9000-01-4
Handle Chemical Products Safely.....	9000-01-4
Dispose of Waste Properly	9000-01-5
Prepare for Emergencies.....	9000-01-5
Add Cab Guarding For Special	
Uses	9000-01-5
Start Only From Operator's Seat.....	9000-01-5
Prevent Unintended Machine	
Movement.....	9000-01-6
Avoid Work Site Hazards.....	9000-01-6
Keep Riders Off Machine	9000-01-6
Avoid Backover Accidents	9000-01-7
Avoid Machine Tip Over	9000-01-7
Park And Prepare For Service	
Safely.....	9000-01-8
Service Cooling System Safely	9000-01-8
Remove Paint Before Welding or	
Heating	9000-01-9
Make Welding Repairs Safely	9000-01-9
Drive Metal Pins Safely	9000-01-9

Recognize Safety Information

This is the safety alert symbol. When you see this symbol on your machine or in this manual, be alert for the potential of personal injury.

Follow the precautions and safe operating practices highlighted by this symbol.

A signal word — DANGER, WARNING, or CAUTION — is used with the safety alert symbol. DANGER identifies the most serious hazards.

On your machine, DANGER signs are red in color, WARNING signs are orange, and CAUTION signs are yellow. DANGER and WARNING signs are located near specific hazards. General precautions are on CAUTION labels.



T133555—UN—28AUG00

T133588—19—28AUG00

TX03679,00016CC -19-05FEB10-1/1

Follow Safety Instructions

Read the safety messages in this manual and on the machine. Follow these warnings and instructions carefully. Review them frequently. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Be sure all operators of this machine understand every safety message. Replace operator's manual and safety labels immediately if missing or damaged.



T133556—UN—24AUG00

TX03679,00016F9 -19-14JAN08-1/1

Operate Only If Qualified

Do not operate this machine unless the operator's manual has been read carefully, and you have been qualified by supervised training and instruction.

Operator should be familiar with the job site and surroundings before operating. Try all controls and

machine functions with the machine in an open area before starting to work.

Know and observe all safety rules that may apply to every work situation and work site.

 
TX03679,00016FA -19-03JAN07-1/1

Wear Protective Equipment

Guard against injury from flying pieces of metal or debris; wear goggles or safety glasses.

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing. Wear suitable hearing protection such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

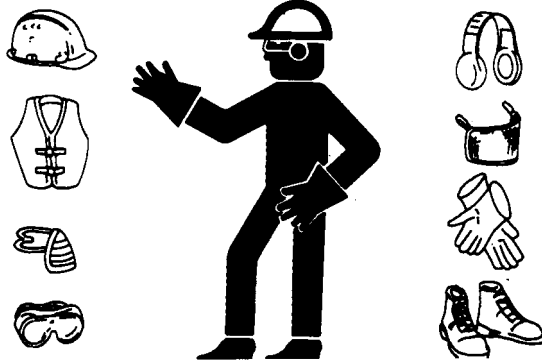

TS206—UN—23AUG88

TX03679,00016D0 -19-05MAY10-1/1

Avoid Unauthorized Machine Modifications

Modifications of this machine, or addition of unapproved products or attachments, may affect machine stability or reliability, and may create a hazard for the operator or others near the machine. The installer of any modification which may affect the electronic controls of this machine is

responsible for establishing that the modification does not adversely affect the machine or its performance.

Always contact an authorized dealer before making machine modifications that change the intended use, weight or balance of the machine, or that alter machine controls, performance or reliability.

TX03679,00016B7 -19-12AUG03-1/1

Inspect Machine

Inspect machine carefully each day by walking around it before starting.

Keep all guards and shields in good condition and properly installed. Fix damage and replace worn or broken parts immediately. Pay special attention to hydraulic hoses and electrical wiring.



T6607AQ—UN—18OCT88

 
TX03679,0001734 -19-08JAN08-1/1

Stay Clear of Moving Parts

Entanglements in moving parts can cause serious injury.

Stop engine before examining, adjusting or maintaining any part of machine with moving parts.

Keep guards and shields in place. Replace any guard or shield that has been removed for access as soon as service or repair is complete.

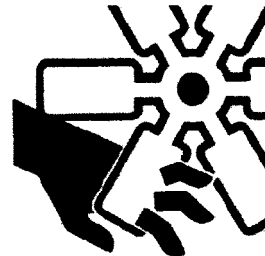

T133592—UN—12SEP01

 
TX03679,00016D2 -19-08JAN08-1/1

Avoid High-Pressure Fluids

This machine uses a high-pressure hydraulic system. Escaping fluid under pressure can penetrate the skin causing serious injury.

Never search for leaks with your hands. Protect hands. Use a piece of cardboard to find location of escaping fluid. Stop engine and relieve pressure before disconnecting lines or working on hydraulic system.

If hydraulic fluid penetrates your skin, see a doctor immediately. Injected fluid must be removed surgically within hours or gangrene may result. Contact a knowledgeable medical source or the Deere & Company Medical Department in Moline, Illinois, U.S.A.

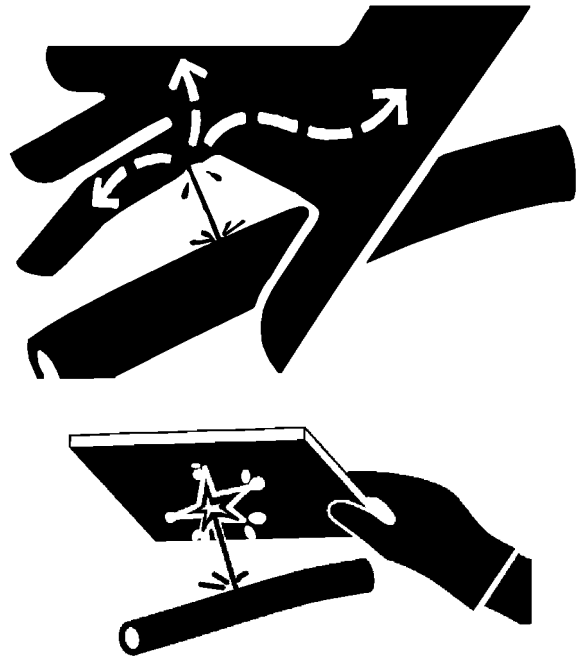

T133509 —UN—17MAR06

 
T133840 —UN—20SEP00

TX03679,00016D3 -19-07SEP06-1/1

Beware of Exhaust Fumes

Prevent asphyxiation. Engine exhaust fumes can cause sickness or death.

If you must operate in an enclosed space, provide adequate ventilation. Use an exhaust pipe extension to remove the exhaust fumes or open doors and windows to bring outside air into the area.

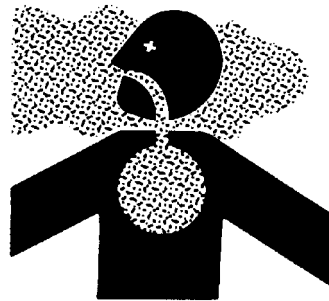

T133546 —UN—24AUG00

TX03679,00016D4 -19-23JUN08-1/1

Prevent Fires

Handle Fuel Safely: Store flammable fluids away from fire hazards. Never refuel machine while smoking or when near sparks or flame.

Clean Machine Regularly: Keep trash, debris, grease and oil from accumulating in engine compartment, around fuel lines, hydraulic lines and electrical wiring. Never store oily rags or flammable materials inside a machine compartment.

Maintain Hoses and Wiring: Replace hydraulic hoses immediately if they begin to leak, and clean up any oil spills. Examine electrical wiring and connectors frequently for damage.

Keep A Fire Extinguisher Available: Always keep a multipurpose fire extinguisher on or near the machine. Know how to use extinguisher properly.



T133553 —UN—07SEP00



T133554 —UN—07SEP00



TX03679,00016F5 -19-25SEP00-1/1

T133552 —UN—14SEP00

Prevent Battery Explosions

Battery gas can explode. Keep sparks, lighted matches, and open flame away from the top of battery.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).



TX03679,000174A -19-08JAN08-1/1

TS204 —UN—23AUG88

Handle Chemical Products Safely

Exposure to hazardous chemicals can cause serious injury. Under certain conditions, lubricants, coolants, paints and adhesives used with this machine may be hazardous.

If uncertain about safe handling or use of these chemical products, contact your authorized dealer for a Material Safety Data Sheet (MSDS) or go to internet website <http://www.jdmsds.com>. The MSDS describes physical and health hazards, safe use procedures, and emergency response techniques for chemical substances. Follow



MSDS recommendations to handle chemical products safely.

TX03679,00016D7 -19-03JAN07-1/1

T133580 —UN—25AUG00

 
Dispose of Waste Properly

Improper disposal of waste can threaten the environment. Fuel, oils, coolants, filters and batteries used with this machine may be harmful if not disposed of properly.

Never pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants can damage the atmosphere. Government regulations may require using a certified service center to recover and recycle used refrigerants.

If uncertain about the safe disposal of waste, contact your local environmental or recycling center or your authorized dealer for more information.

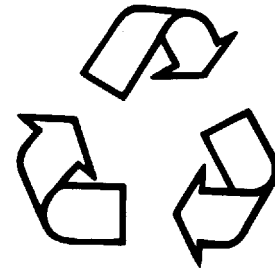

T133567 —UN—25AUG00

 
TX03679,0001733 -19-08JAN08-1/1

Prepare for Emergencies

Be prepared if an emergency occurs or a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

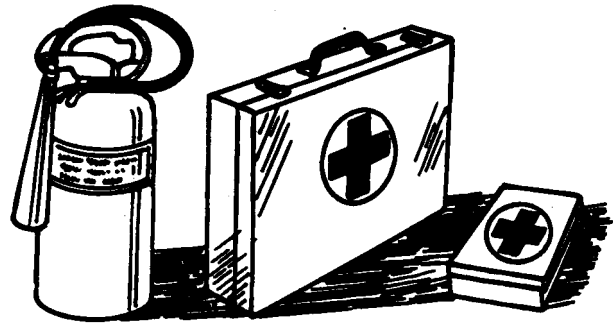


TS291 —UN—23AUG88

TX03679,000174B -19-08JAN08-1/1

Add Cab Guarding For Special Uses

Special work situations or machine attachments may expose the operator to intruding or flying objects. Using this machine in a forestry application or woods environment, or with attachments such as a winch, requires added guarding to protect the operator.

 Forestry protection packages or special screens should be installed when working in areas where logs or branches may strike the operator. A rear screen should always be used with a winch to protect against a snapping cable. Contact your authorized dealer for information on protective guarding before operating in any hazardous environment.

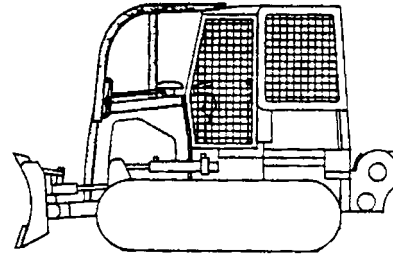

T139005 —UN—05MAR01

TX03768,0000B77 -19-14JAN08-1/1

Start Only From Operator's Seat

Avoid unexpected machine movement. Before starting engine, sit in operator's seat. Ensure park lock lever is in "lock" position.

Never attempt to start engine from the ground or tracks. Do not attempt to start engine by shorting across the starter solenoid terminals.



 
T133715 —UN—07SEP00

TX03768,0000B71 -19-23FEB01-1/1

Prevent Unintended Machine Movement

Always move the park lock lever to the “lock” position before leaving the operator’s seat for any reason.

Be careful not to accidentally actuate controls when co-workers are present. Engage park lock and lower work equipment to the ground during work interruptions. Stop the engine before allowing anyone to approach the machine. Follow these same precautions before standing up, leaving the operator’s seat, or exiting the machine.

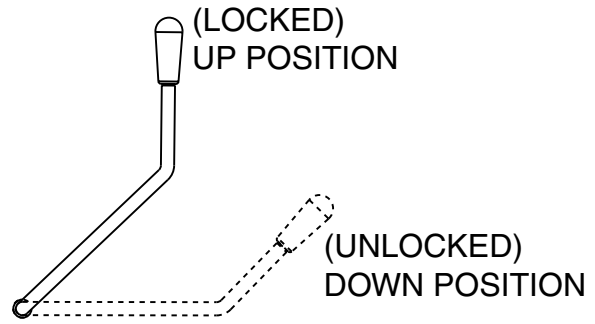

T159027—19—30AUG02

TX03768,0000B72 -19-14JAN08-1/1

Avoid Work Site Hazards

 
Avoid contact with gas lines, buried cables and water lines. Call utility line location services to identify all underground utilities before working below ground level.

Avoid or correct hazardous work situations. Avoid operating near structures or objects that could fall onto the machine. Clear away debris that could move unexpectedly if run over.

Keep bystanders clear at all times. Use barricades or a signal person to keep vehicles and pedestrians away. Always keep signal person in view. Instruct co-workers and bystanders not to approach the machine while it is operating.

Operate only on solid footing Use extra care when operating on stockpiles or near banks or excavations that may cave in and cause machine to tip or fall. Never allow the machine on a floor or structure until you are sure it will support the weight.

Avoid contact with overhead electrical wires. Stay clear of electrical lines. Never move any part of machine or load closer than 3 m (10 ft.) plus twice the line insulator length to overhead wires.

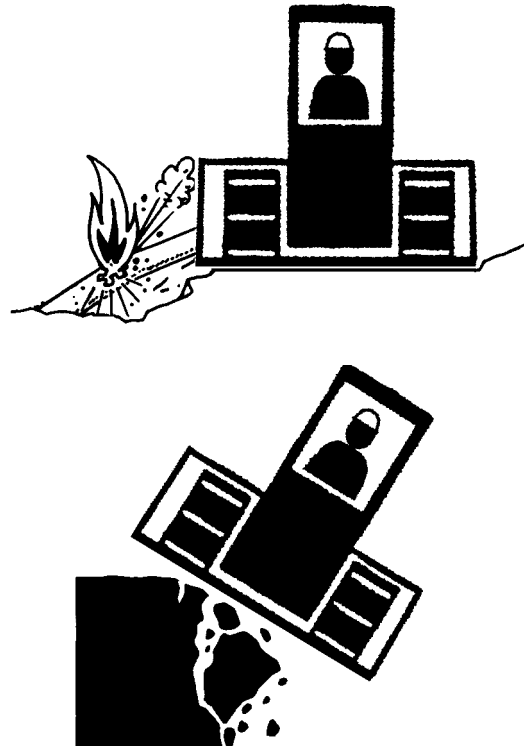

T139002—UN—05MAR01

T139003—UN—05MAR01

 
TX03768,0000B76 -19-06MAR01-1/1

Keep Riders Off Machine

Only allow operator on machine.

Riders are subject to injury. They may fall from machine, be caught between machine parts, or be struck by foreign objects.

Riders may obstruct operator’s view or impair his ability to operate machine safely.

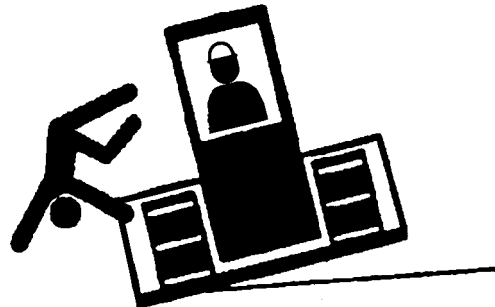

T137580—UN—22FEB01

TX03768,0000B73 -19-03NOV08-1/1

Avoid Backover Accidents

Before moving machine, be sure all persons are clear of the machine path. Turn around and look directly for best visibility. Use mirror to assist in checking behind the machine. Keep windows and mirror clean and in good repair.

Be certain backup warning alarm is working properly.

Use a signal person when backing if view is obstructed or when in close quarters. Keep signal person in view at all times. Use prearranged hand signals to communicate.



T138441 —UN—22FEB01

TX03768,0000B69 -19-14JUN11-1/1

Avoid Machine Tip Over

Use seat belt at all times.

Do not jump if the machine tips. You will be unlikely to jump clear and the machine may crush you.

 
Load and unload from trucks or trailers carefully. Be sure truck is wide enough and secured on a firm level surface. Use loading ramps and attach them properly to truck bed. Avoid trucks with steel beds because tracks slip more easily on steel.

Be careful on slopes. Use extra care on soft, rocky or frozen ground because machine may slip sideways in these conditions. When traveling up or down steep slopes, keep the bucket or blade on uphill side and just above ground level.

Ensure solid footing. Use extra care when operating on stockpile materials, or near banks or excavations that may cave-in and cause machine to tip or fall.



**USE
SEAT
BELT**

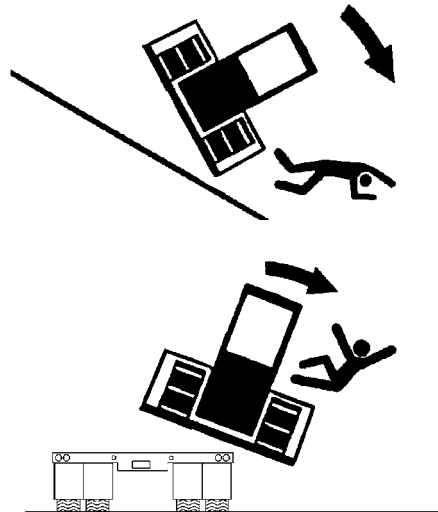

T133716 —19—14SEP00

T138416 —UN—22FEB01

T138415 —UN—22FEB01

TX03768,0000B6B -19-03NOV08-1/1

Park And Prepare For Service Safely

 
Warn others of service work. Always park and prepare your machine for service or repair properly.

- Park machine on a level surface and lower blade/bucket and attachments to the ground.
- Place park lock lever in “lock” position. Stop engine and remove key.
- Attach a “Do Not Operate” tag in an obvious place in the operator’s station.

Securely support machine or attachment before working under it.

- Do not support machine with blade/bucket or attachments.
- Do not support machine with cinder blocks or wooden pieces that may crumble or crush.
- Do not support machine with a single jack or other devices that may slip out of place.

Understand service procedures before beginning repairs. Keep service area clean and dry. Use two people whenever the engine must be running for service work.

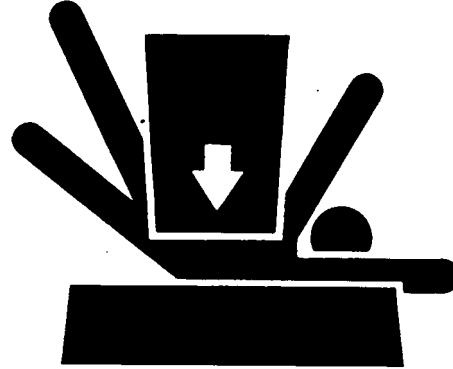

T133332 —19—14DEC01


TS229 —UN—23AUG88

TX03768,0000B6A -19-19OCT09-1/1

Service Cooling System Safely

Explosive release of fluids from pressurized cooling system can cause serious burns.

 Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.

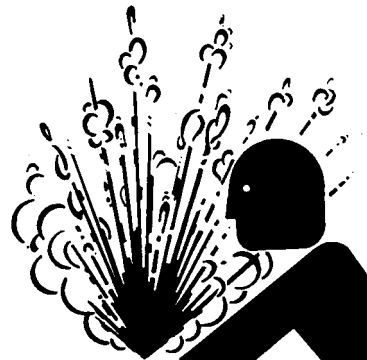

TS281 —UN—23AUG88

DX,RCAP -19-04JUN90-1/1

Remove Paint Before Welding or Heating

Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Remove paint before heating:

- Remove paint a minimum of 100 mm (4 in.) from area to be affected by heating. If paint cannot be removed, wear an approved respirator before heating or welding.
- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

Do not use a chlorinated solvent in areas where welding will take place.



Do all work in an area that is well ventilated to carry toxic fumes and dust away.

Dispose of paint and solvent properly.

DX,PAINT -19-24JUL02-1/1

TS220—UN—23AUG88

Make Welding Repairs Safely

IMPORTANT: Disable electrical power before welding. Turn off main battery switch or disconnect positive battery cable. Separate harness connectors to engine and vehicle microprocessors.

Avoid welding or heating near pressurized fluid lines. Flammable spray may result and cause severe burns if pressurized lines fail as a result of heating. Do not let heat go beyond work area to nearby pressurized lines.

Remove paint properly. Do not inhale paint dust or fumes. Use a qualified welding technician for structural repairs.



Make sure there is good ventilation. Wear eye protection and protective equipment when welding.

 
TX03679,00016D5 -19-11SEP09-1/1

T133547—UN—31AUG00

Drive Metal Pins Safely

Always wear protective goggles or safety glasses and other protective equipment before striking hardened parts. Hammering hardened metal parts such as pins and bucket teeth may dislodge chips at high velocity.

Use a soft hammer or a brass bar between hammer and object to prevent chipping.

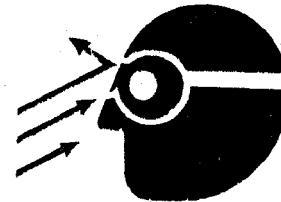

OUO1065,0000090 -19-03NOV08-1/1

T133738—UN—14SEP00

Section 9005
Operational Checkout Procedure
Contents

Page

Group 10—Operational Checkout Procedure

Operational Checkout.....	9005-10-1
Engine Off Checks.....	9005-10-1
Engine On Checks.....	9005-10-9

