

ASSEMBLING AND OPERATING INSTRUCTIONS MODEL 77



NEW HOLLAND AUTOMATIC PICK-UP BALER



CONTENTS

About Improvements	2	Knotters	21
Specifications	3	Formation Correct Knot	21
A Note to You, Mr. Owner	5	Twine Holder	22
The Responsibility of the Dealer	6	Bill Hook	23
Shipping Information	6	Installation of Knotters (H555) on Shaft	25
Assembling Instructions		Installation of Knotter Assembly (11790) on the Baler	26
Jack	7	Knotter Drive Shear Bolts	27
Feeder	7	Twine Fingers	27
Pick-up	8	Continuous Movements of Clutch Pawl	28
Sheaves, Sprockets, Belts, Chains	8	Needle Adjustment	28
Guards	8	Needle Yoke	28
Lubrication	9	Trouble Shooting	
Tires	9	Summary of Knotter Difficulties and Correc- tive Measures	29
Breaking-In Instructions		Plunger Rubbing Side of Bale Chamber and Heating	31
Engine	11	Shearing Fly Wheel Safety Bolts	32
Baler	11	Failure to Pick Up Material Cleanly	32
Operating Instructions		Mis-shaped Bales	32
Starting to Bale	12	Shearing Knotter Drive Bolts	32
Feeding the Baler	12	Excessive Noise In Connecting Rod Latch	33
Ground Travel or Tractor Speed	12	Bales Too Tight With the Tension Screws Open	33
Threading Needles	13	Plunger Missing More Than One Stroke	33
Twine and Bale Tension	13	Pick-up Raises and Remains Up	33
Adjustments		Pick-up Riding on Ground At All Times	33
Belt Information	14	Excessive Needle Breackage	33
Care of Roller Chains	14	Baler Care	
Pick-up Assembly	15	Daily Care of the Baler	34
Pick-up Fingers	15	Duties of the Operator	34
The Feed Roll Assembly	16	Storage	34
The Fly Wheel Safety Bolt	16	Ordering Parts	
Main Drive Shaft Bearings	17	Check List for Ordering Repair Parts	35
The Connecting Rod	17	Safety Precautions	36
The Wadboard	17	Warranty	37
The Plunger Slide	18		
Slicing Knives	18		
Over-Center Assembly	19		

ABOUT IMPROVEMENTS

The New Holland Machine Company is continually striving to improve its products.

We must, therefore, reserve the right to make improvements or changes when it becomes practical and possible to do so, without incurring any obligation to make changes or additions to equipment sold previously.

SPECIFICATIONS

BALER

Length overall	21' 8"
Width overall	8' 6"
Height with feeder head down	5' 7"
Width of the pick-up	57½"
Wheel tread width	75"
Size of the feed opening	16" by 24¾"
Size of the bale chamber	16" by 18"
Length of bale (standard)	36"
Plunger stroke	30"
Plunger and main working parts	steel
Fly wheel (diameter)	26"
Fly wheel shaft (diameter)	2½"
Main bearings	self-aligning ball bearings
Feeder	steel
Knotter Drive sprocket	steel
Knotter drive chain	steel roller with extended pitch
Gears	Pinions and sprockets
Plunger speed (maximum)	50 strokes per min.
Capacity.....	up to ten tons per hour
Tires—pneumatic	4:00 x 8, 7:50 x 16, 7:50 x 24

