


WORKSHOP MANUAL

FB-DC70 SERIES

FB 10P, 15P, 18P
20P, 25P, 30P

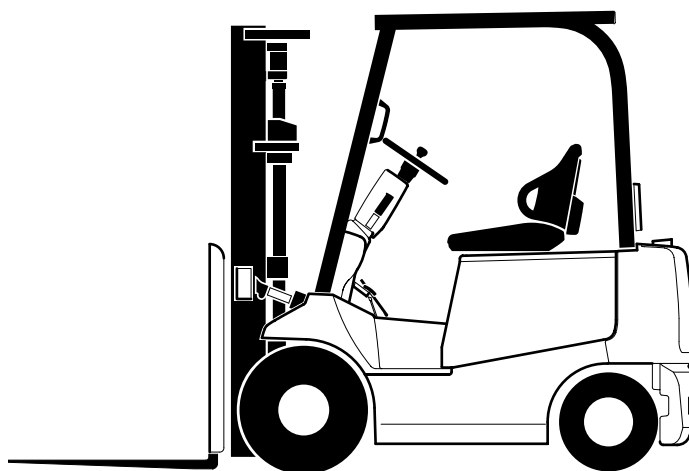

NICHIYU
NIPPON YUSOKI CO.,LTD.
KYOTO, JAPAN

INTRODUCTION

- ▶ Most accident happens due to the disregard of basic safety rules or precautions. In order to prevent accidents from happening, the factors responsible for accidents must be avoided beforehand.

For this reason, please read this manual and fully understand the precautions for safety and the proper procedures and directions for inspection and maintenance before starting operation.



Performing maintenance and repair without adequate knowledge may cause inadvertent accidents.



- ▶ It is not possible to cover all the possible cases of accidents in this "WORKSHOP MANUAL". Therefore, attention should be given to precautions other than the ones mentioned in this "WORKSHOP MANUAL". Especially, when repair and maintenance work which are not covered in this "WORKSHOP MANUAL" are carried out, always work under the direction of an instructor who understands the matter.

■ Using this "WORKSHOP MANUAL"

This manual has information about the layout and names of main components, procedures for disassembly, assembly, inspection, adjustment, maintenance, and pinpointing faults which are in effect mainly for the model FB-DC70.

Since the parts used in this machine are subject to change for the sake of better quality, performance enhancement, and safety, some portions of the contents and illustrations of the "WORKSHOP MANUAL" may not be identified.

Directions with  and  marks are very important, and must be followed.

	DANGER	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury. You shall observe this instruction.
	WARNING	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury. You shall observe this instruction.
	CAUTION	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. You shall observe this instruction.
	NOTE	Indicates suggestions, tips and hints related to the safety of a operator and maintain of truck.

① Personnel this "WORKSHOP MANUAL" is aimed at:

This "WORKSHOP MANUAL" is directed at personnel who possess sufficient knowledge and technical expertise. If you do not understand any of the contents of this "WORKSHOP MANUAL", perform operation under the guidance of personnel who does.

② Conditions of a facility

The work conditions described in the "WORKSHOP MANUAL" are written on the assumption that the work is performed at a shop where standard facilities and tools for the maintenance of NICHYU ELECTRIC LIFT TRUCKS are available.

For safe and reliable maintenance, the work should be performed at a shop where the facilities are equivalent to these described in the "WORKSHOP MANUAL" or better, and the instructions described should be strictly followed.

CONTENTS

SAFETY WORK 1

- 1. Precautions for safe inspection and maintenance work1
- 2. Safety labels5
- 3. Model name and serial numbers9
- 4. Cautions for maintenance11
- 5. Tightening torque for bolts14

1 .GENERAL 16

- 1-1. Appearance16
- 1-2. Specifications17

2 .FRONT AXLE (DRIVE) 19

- 2-1. Location and name19
- 2-2. Disassembly and reassembly20
 - 2-2-1. Front axle - removal and installation20
 - 2-2-2. Front axle - disassembly and reassembly ..26
- 2-3. Inspection and adjustment30
 - 2-3-1. Gears - Inspection and replacement30
 - 2-3-2. Wheel hub and hub bolt - Inspection30
- 2-4. Troubleshooting31
 - 2-4-1. Front axle - troubleshooting31

3 .REAR AXLE (STEERING) 32

- 3-1. Location and name32
- 3-2. Disassembly and reassembly33
 - 3-2-1. Rear axle - removal and installation33
 - 3-2-2. Rear axle - disassembly and reassembly ..35
 - 3-2-3. Rear axle assembly - methods and precautions37
- 3-3. Inspection and adjustment40
 - 3-3-1. Bushing - inspection40
 - 3-3-2. Center arm - inspection40
 - 3-3-3. Tie rod comp. - inspection40
 - 3-3-4. Knuckle - inspection40
 - 3-3-5. King pin - inspection41
 - 3-3-6. Hub and hub bolt - inspection41
 - 3-3-7. Rear axle comp. - inspection41
- 3-4. Troubleshooting42
 - 3-4-1. Rear axle - troubleshooting42

4 .TYRE 43

- 4-1. Location, name and tyre size43
 - 4-1-1. Tyre - location and name43
 - 4-1-2. Tyre size43
- 4-2. Inspection and adjustment44
 - 4-2-1. Hub nut - inspection44
 - 4-2-2. Rim and rim bolt - inspection44
 - 4-2-3. Air pressure - inspection45
 - 4-2-4. Tyre - visual inspection and replacement ..45
- 4-3. Troubleshooting46
 - 4-3-1. Tyre - troubleshooting46

5. STEERING 47

- 5-1. Location and name47
- 5-2. Disassembly and reassembly48
 - 5-2-1. Steering - removal and installation48
 - 5-2-2. Steering linkage - disassembly and reassembly50
- 5-3. Inspection and adjustment52
 - 5-3-1. Joint - inspection and replacement52
 - 5-3-2. Knob - inspection and replacement52
 - 5-3-3. Steering wheel - inspection and replacement52
 - 5-3-4. Torque sensor neutral - check and adjustment53
 - 5-3-5. Checking by voltage55
- 5-4. Troubleshooting56
 - 5-4-1. Steering linkage - troubleshooting56

6. BRAKE 57

- 6-1. Location and name57
 - 6-1-1. Foot brake linkage - main part names57
 - 6-1-2. Parking brake linkage - main part names ..58
- 6-2. Disassembly and reassembly59
 - 6-2-1. Wheel brake - removal and installation59
 - 6-2-2. Wheel brake - disassembly and reassembly61
- 6-3. Inspection and adjustment62
 - 6-3-1. Brake drum - inspection, repair and replacement62
 - 6-3-2. Shoe & lining - inspection and replacement ..62
 - 6-3-3. Adjustor ass'y - inspection and replacement63

6-3-4. Wheel cylinder ass'y - inspection and replacement	63
6-3-5. Master cylinder ass'y - inspection and replacement	64
6-3-6. Brake pedal - inspection	64
6-3-7. Parking lever - inspection and adjustment	65
6-3-8. Brake linkage - adjustment	65
6-3-9. Discharge air from the brakes.....	66
6-4. Troubleshooting.....	67
6-4-1. Brake - troubleshooting.....	67

7. HYDRAULIC SYSTEM 68

7-1. Oil piping circuit	68
-------------------------------	----

7a. HYDRAULIC PUMP 69

7a-1. Location and name	69
7a-2. Disassembly and reassembly.....	70
7a-2-1. Hydraulic pump - removal and installation	70
7a-3. Inspection and adjustment	71
7a-3-1. Coupling, pump - inspection	71
7a-3-2. Hydraulic pump - inspection.....	71
7a-4. Troubleshooting.....	72
7a-4-1. Hydraulic pump - troubleshooting	72

7b. OIL TANK AND OIL PIPING 73

7b-1. Location and name	73
7b-1-1. Iron oil tank - main part names.....	73
7b-2. Disassembly and reassembly.....	74
7b-2-1. Oil tank - precautions.....	74
7b-2-2. Oil piping replacement - precautions	74
7b-3. Inspection and adjustment	75
7b-3-1. Oil - inspection	75
7b-3-2. Recommended oil and oil quantity.....	75
7b-3-3. Oil tank and filters - cleaning and check ..	76
7b-4. Troubleshooting.....	76
7b-4-1. Oil tank - troubleshooting	76

7c. CONTROL VALVE 77

7c-1. Location and name	77
7c-2. Disassembly and reassembly.....	79
7c-2-1. Control valve - removal and installation.....	79
7c-2-2. Inner kit of control valve - replacement.....	81
7c-3. Inspection and adjustment.....	82
7c-3-1. Relief pressure - measurement	82
7c-3-2. Microswitch - adjustment.....	82
7c-4. Troubleshooting.....	83
7c-4-1. Control valve - troubleshooting.....	83

7d. CYLINDER 84

7d-1. Location and name	84
7d-1-1. Lift cylinder - main part names.....	84
7d-1-2. Tilt cylinder - main part names.....	85
7d-2. Disassembly and reassembly.....	86
7d-2-1. Lift cylinder (STD mast) - removal	86
7d-2-2. Lift cylinder 2nd (M/PFL mast) - removal	88
7d-2-3. Tilt cylinder - removal.....	90
7d-2-4. Lift cylinder (STD mast) - installation	91
7d-2-5. Lift cylinder 2nd (M/PFL mast) - installation.....	91
7d-2-6. Tilt cylinder - installation.....	92
7d-2-7. Lift cylinder - disassembly and reassembly ..	92
7d-2-8. Tilt cylinder - disassembly and reassembly ..	94
7d-3. Inspection and adjustment	95
7d-3-1. Cylinder comp - inspection.....	95
7d-3-2. Piston rod - inspection	95
7d-3-3. Drift of lift lowering and tilt - inspection.....	95
7d-4. Troubleshooting.....	97
7d-4-1. Cylinder - troubleshooting.....	97

8. MAST 98

8-1. Location and name	98
8-2. Disassembly and reassembly	100
8-2-1. Lift bracket - removal	100
8-2-2. Mast ass'y - removal	100
8-2-3. Mast - disassembly and reassembly	102
8-3. Inspection and adjustment	105
8-3-1. Mast, lift bracket and roller shaft - inspection	105
8-3-2. Back shoe - inspection	106
8-3-3. Lift chain - inspection and replacement	106
8-3-4. Chain bolt - inspection	106
8-3-5. Chain wheel - inspection	107
8-3-6. Hose pulley - inspection	107
8-3-7. Roller - inspection and replacement	107
8-3-8. Fork - inspection and replacement	108
8-3-9. Lift chain - inspection and adjustment	109
8-3-10. Mast inclination - inspection and adjustment	109
8-4. Troubleshooting	110
8-4-1. Mast - troubleshooting	110

9. MOTOR 111

9-1. Location and name	111
9-1-1. Traction motor - main part names	111
9-1-2. Hydraulic motor - main part names	111
9-1-3. EPS motor - main part names	112
9-1-4. Motors - specifications	112
9-2. Disassembly and reassembly	113
9-2-1. Traction motor - removal and installation	113
9-2-2. Hydraulic motor - removal and installation	114
9-2-3. EPS motor - removal and installation	116
9-2-4. Traction motor - disassembly and reassembly	117
9-2-5. Hydraulic motor - disassembly and reassembly	118
9-2-6. EPS motor - disassembly and reassembly	118
9-3. Inspection and adjustment	119
9-3-1. Armature comp. - inspection and replacement	119
9-3-2. Brush, brush holder and spring - inspection and replacement	121
9-3-3. Field coil - inspection	123
9-3-4. Motor ass'y - inspection	123

9-3-5. Oil seal and permanent magnet (EPS motor) - inspection and replacement	125
9-4. Troubleshooting	125
9-4-1. Motor - troubleshooting	125

10. ELECTRIC PARTS 126

10-1. Location and name	126
-------------------------------	-----

10a. CONTROL UNIT 127

10a-1. Location and name	127
10a-2. Disassembly and reassembly	128
10a-2-1. Control unit - removal and installation	128
10a-2-2. Control unit - disassembly and reassembly	129
10a-2-3. Contactor - removal and installation	131
10a-2-4. Contactor - disassembly and reassembly	132
10a-3. Check and replacement	134
10a-3-1. Capacitor - discharging procedure	134
10a-3-2. Diode - inspection	134
10a-3-3. FET - inspection	135
10a-3-4. Capacitor - check and replacement	136
10a-3-5. MPU board - inspection	136
10a-3-6. EPS controller - specifications	136

10b. DISPLAY PANEL AND DIRECTIONAL SWITCH 137

10b-1. Disassembly and reassembly	137
10b-1-1. Display panel - disassembly and reassembly	137
10b-1-2. Directional switch - disassembly and reassembly	138

10c. ACCELERATOR 140

10c-1. Disassembly and reassembly	140
10c-1-1. Accelerator linkage - removal and installation	140

10d. CHARGER (BUILT-IN TYPE) 141

10d-1. Disassembly and reassembly.....	141
10d-1-1. Charger ass'y - disassembly and reassembly.....	141
10d-1-2. Transformer - disassembly and reassembly.....	142
10d-1-3. Built-in charger - specifications	142
10d-2. Inspection and replacement	143
10d-2-1. Magnetic contactor - inspection	143
10d-2-2. Plug comp. and receptacle - inspection and replacement.....	143
10d-2-3. Link fuse and fuse base - inspection....	143
10d-2-4. Transformer - inspection	144
10d-2-5. Diode - inspection	144
10d-3. Inspection After Assembly	145
10d-3-1. Timer - inspection	145
10d-4. Charging procedure.....	146
10d-4-1. Normal (Daily charge).....	146
10d-4-2. Balancing charge	149
10d-5. Voltage tap	151
10d-5-1. Power voltage - check.....	151
10d-5-2. Voltage tap - selection	151
10d-5-3. Voltage tap - switching.....	152
10d-5-4. Link fuse (three-phase voltage) - replacement	152

10e. BATTERY 153

10e-1. Disassembly and reassembly.....	153
10e-1-1. Battery - removal and installation.....	153
10e-2. Inspection and adjustment	154
10e-2-1. Battery - inspection	154
10e-2-2. Battery - Cleaning	155

10f. MPU BOARD 156

10f-1. Location and name	156
--------------------------------	-----

11. LASER POINTER (OPTIONAL) 157

11-1. Adjustment.....	157
11-1-1. Fork level - adjustment.....	157
11-1-2. Laser optical axis - adjustment	157

12. SERVICE DATA 158

12-1. Annual Inspection Service Data	158
12-2. Standard work hours	158

SAFETY WORK

1. Precautions for safe inspection and maintenance work

Maintenance shops



Facilities with adequate space and level surfaces:

- The floor area of the shop (location) where inspection and maintenance are performed must have adequate floor space, and have level surfaces without holes.
- ➔ If these conditions are not met, unexpected accidents, such as a roll-over of the forklift truck, may result.



WELL-VENTILATED AREA

- Work such as welding painted components or sanding down coated parts should be carried out in well-ventilated areas.
- ➔ If this is not observed, harmful toxic gas or dust may be inhaled.



LOCATION EQUIPPED WITH FIRE EXTINGUISHING EQUIPMENT

- Equipment such as first-aid boxes and fire extinguishers should be nearby when work is performed.



SAFE AND WELL-LIGHTED AREA

- The work area should be safe and well lighted. When working inside the machine or underneath of it, always use a safety lamp with a shielded light bulb.
- ➔ If this is not observed, leaked oil may catch fire when a light bulb pops.



PROPER ARRANGEMENT

- Arrange and clean always at a working place to work safety.
- Especially, arrange disassembled parts well.

Work clothing

CAUTION

- The worker should wear a hat, work clothes, and safety shoes that are suitable for safe work. The work clothes should be close-fitting.
- ➔ If this is not observed, loose clothing may become caught in a machine, resulting in serious injury.

Tools and gauges

CAUTION

- Always use tools that are suitable for the work being performed. Use proper size tools when tightening and loosening the parts of the forklift truck.
- ➔ Failure to observe the above could result in serious injury or damage to machines.

CAUTION

Prepare tools and gauges before starting to work.

Safety work

WARNING

- When hoisting a forklift truck or a heavy component, use ropes or cable with correct capacity.
- Do not use ropes or cables which are kinked.

WARNING

After lifting or jacking up a forklift truck, support it with safety blocks or rigid stands.

WARNING

Apply wheel chocks to tyres to prevent the truck from moving.

WARNING

When working under a forklift truck, use a pit or proper safety precautions.

Parts



When replacing any parts, be sure to use NICHYU genuine parts.



When replenishing battery electrolyte, be sure to use refined or distilled water.

Repair of electrical components



Be sure to disconnect the battery plug when replacing electrical component.



Be sure to jack up the drive wheel when trouble shooting electrical operations.



Record the places of lead wire connection when disassembling.



CHARGING BATTERY

- Batteries produce flammable gas during charging. Do not allow batteries in the vicinity of fire or flames.
- ➔ Failure to observe the above could result in an explosion.



- Diluted sulfuric acid is used as the battery's electrolyte . Keep clothing and skin away from contact with battery fluid.
- ➔ If this is not observed, the fluid may corrode clothing or cause burns.