

Perkins 2300 Series

Model 2306C-E14

WORKSHOP MANUAL

6 cylinder turbocharged diesel engines for industrial applications

Publication TSD3455E, Issue 1

© Proprietary information of Perkins Engines Company Limited, all rights reserved.

The information is correct at the time of print.

Published in September 2002 by Technical Publications,

Perkins Engines Company Limited, Shrewsbury SY1 3NX, England

Chapters

- 1 General information**
- 2 Specifications**
- 3 Cylinder head assembly**
- 4 Piston and connecting rod assemblies**
- 5 Crankshaft assembly**
- 6 Gear case and drive assembly**
- 7 Crankcase and cylinder liners**
- 8 Engine timing and electronic controls**
- 9 Aspiration system**
- 10 Lubrication system**
- 11 Fuel system**
- 12 Cooling system**
- 13 Flywheel and housing**
- 14 Electrical equipment**
- 15 Auxiliary equipment**
- 16 Special tools**

The pages which follow contain a detailed table of contents

Contents

1 General information

| | |
|---------------------------------------|---|
| Introduction | 1 |
| Safety precautions | 2 |
| Viton seals | 4 |
| Welding | 4 |
| Environmental protection | 4 |
| Engine views | 5 |
| Engine identification | 6 |
| Engine lift equipment | 6 |

2 Specifications

| | |
|--|----|
| Basic engine data - 2306 engine | 7 |
| Basic engine data - 2806 engine | 7 |
| Rocker assemblies | 8 |
| Valves | 9 |
| Valve guides | 10 |
| Valve springs | 10 |
| Valve seat inserts | 11 |

| | |
|--|----|
| Cylinder head | 12 |
| Camshaft and bearings | 12 |
| Pistons and connecting rods - 2306 engine | 13 |
| Pistons and connecting rods - 2806 engine | 14 |
| Crankshaft, main bearings and flywheel | 15 |
| Crankshaft damper | 15 |
| Crankcase and cylinder liners | 16 |
| Lubricating oil pump | 18 |
| Coolant pump | 19 |
| Recommended torque figures | 20 |

3 Cylinder head assembly

| | |
|---|----|
| General information | 27 |
| Rocker cover | |
| Operation 3-1 To remove and to fit | 28 |
| Rocker lever and rocker shaft assemblies | |
| Operation 3-2 To remove and to fit | 29 |
| Operation 3-3 To dismantle and to assemble | 30 |
| Operation 3-4 How to check/adjust the tappet clearances | 32 |
| Cylinder head assembly | |
| Operation 3-5 To remove and to fit | 35 |
| Valve springs | |
| Operation 3-6 To remove and to fit | 39 |
| Valves | |
| Operation 3-7 To remove and to fit | 41 |
| Valve seals | |
| Operation 3-8 To renew | 42 |
| Valve guides | |
| Operation 3-9 To remove and to fit | 43 |
| Camshaft | |

| | |
|--|----|
| Operation 3-10 To remove and to fit | 45 |
| Operation 3-11 How to set the backlash for the camshaft gear | 50 |

Electronic injector units

| | |
|---|----|
| Operation 3-12 To remove and to fit | 51 |
| Operation 3-13 To check and to adjust | 53 |

Injector sleeves

| | |
|---|----|
| Operation 3-14 To remove and to fit | 54 |
|---|----|

4 Pistons and connecting rod assemblies

| | |
|--------------------------------------|----|
| General information | 57 |
|--------------------------------------|----|

Pistons and connecting rod assemblies

| | |
|---|----|
| Operation 4-1 To remove and to fit | 58 |
| Operation 4-2 To dismantle and assemble | 60 |

Piston cooling jets

| | |
|--|----|
| Operation 4-3 To remove and to fit | 62 |
|--|----|

5 Crankshaft assembly

| | |
|--------------------------------------|----|
| General information | 63 |
|--------------------------------------|----|

Crankshaft

| | |
|--|----|
| Operation 5-1 To remove and to fit | 64 |
|--|----|

Crankshaft front seal and wear sleeve

| | |
|----------------------------------|----|
| Operation 5-2 To renew | 66 |
|----------------------------------|----|

Crankshaft rear seal and wear sleeve

| | |
|----------------------------------|----|
| Operation 5-3 To renew | 68 |
|----------------------------------|----|

Crankshaft vibration damper

| | |
|--|----|
| Operation 5-4 To remove and to fit | 70 |
|--|----|

6 Gear case and drive assembly

| | |
|--------------------------------------|----|
| General information | 73 |
|--------------------------------------|----|

Gear case cover

| | |
|--|----|
| Operation 6-1 To remove and to fit | 74 |
|--|----|

Timing gears

| | |
|---|----|
| Operation 6-2 To remove and to fit | 75 |
| Operation 6-3 How to check the position of the timing gears | 78 |

Gear case

| | |
|------------------------------------|----|
| Operation 6-4 To remove and to fit | 79 |
|------------------------------------|----|

7 Crankcase and cylinder liners

| | |
|----------------------------|----|
| General information | 81 |
|----------------------------|----|

Front engine support

| | |
|------------------------------------|----|
| Operation 7-1 To remove and to fit | 82 |
|------------------------------------|----|

Cylinder liners

| | |
|--|----|
| Operation 7-2 To remove and to fit | 83 |
| Operation 7-3 To check and to adjust the protrusion of the cylinder liners | 84 |

8 Engine timing and electronic controls

| | |
|----------------------------|----|
| General information | 87 |
|----------------------------|----|

Electronic control module

| | |
|------------------------------------|----|
| Operation 8-1 To remove and to fit | 88 |
|------------------------------------|----|

Engine timing

| | |
|------------------------|----|
| Operation 8-2 To check | 89 |
|------------------------|----|

9 Aspiration system

| | |
|----------------------------|----|
| General information | 91 |
|----------------------------|----|

Exhaust manifold

| | |
|------------------------------------|----|
| Operation 9-1 To remove and to fit | 92 |
|------------------------------------|----|

Turbocharger

| | |
|--|----|
| Operation 9-2 To remove and to fit | 93 |
| Operation 9-3 To dismantle and to assemble | 94 |

10 Lubrication system

| | |
|---|-----|
| General information | 95 |
| Oil filter and oil filter header | |
| Operation 10-1 To remove and to fit | 96 |
| Oil filter header | |
| Operation 10-2 To dismantle and to assemble | 98 |
| Sump | |
| Operation 10-3 To remove and to fit | 99 |
| Oil pump | |
| Operation 10-4 To remove and to fit | 101 |
| Operation 10-5 To dismantle and to assemble | 102 |

11 Fuel system

| | |
|--|-----|
| General information | 103 |
| Fuel priming pump | |
| Operation 11-1 To remove and to fit | 104 |
| Fuel transfer pump | |
| Operation 11-2 To remove and to fit | 105 |
| Operation 11-3 To test | 106 |
| Drive for the fuel transfer pump | |
| Operation 11-4 To remove and to fit | 107 |
| Fuel filter header | |
| Operation 11-5 To remove and to fit | 108 |
| Low pressure fuel system | |
| Operation 11-6 How to eliminate air from the fuel system | 109 |

12 Cooling system

| | |
|-----------------------------------|-----|
| General information | 111 |
| Cooling system | |
| Operation 12-1 To inspect | 112 |
| Operation 12-2 Leakage test | 113 |

Coolant filler cap

Operation 12-3 To test 114

Radiator

Operation 12-4 To remove and to fit 115

Fan

Operation 12-5 To remove and to fit 116

Fan drive assembly

Operation 12-6 To remove and to fit 117

Fan drive belts

Operation 12-7 To check and to adjust the tension 118

Operation 12-8 To renew 119

Engine oil cooler

Operation 12-9 To remove and to fit 120

Thermostats and thermostat housing

Operation 12-10 To remove and to fit 121

Operation 12-11 To test the thermostats 123

Coolant temperature sensor

Operation 12-12 To test 124

Coolant pump

Operation 12-13 To remove and to fit 125

Operation 12-14 To dismantle and to assemble 126

Operation 12-15 To test the pressure of the coolant pump 128

13 Flywheel and housing

General information 129

Flywheel

Operation 13-1 To remove and to fit 130

Flywheel housing

Operation 13-2 To remove and to fit 131

14 Electrical equipment

General information 133

Starter motor

Operation 14-1 To remove and to fit 134

Alternator

Operation 14-2 To remove and to fit 135

Operation 14-3 To check and to adjust the tension of the alternator belt 136

Operation 14-4 To renew the alternator belt 137

15 Auxiliary equipment

General information 139

Oil sample valve 139

16 Special tools

List of special tools 141

