

# **Perkins 400 Series**

**Models 403C-11, 403C-15, 404C-22 and 404C-22T**

## **WORKSHOP MANUAL**

- |                 |   |
|-----------------|---|
| <b>403C-11</b>  | <b>Three cylinder naturally aspirated diesel engine</b> |
| <b>403C-15</b>  | <b>Three cylinder naturally aspirated diesel engine</b> |
| <b>404C-22</b>  | <b>Four cylinder naturally aspirated diesel engine</b>  |
| <b>404C-22T</b> | <b>Four cylinder turbo charged diesel engine</b>        |

**Perkins Confidential: Green**

Publication TPD 1458E, Issue 3.

© Proprietary information of Perkins Engines Company Limited, all rights reserved.

The information is correct at the time of print.

Published in September 2002 by Technical Publications.



## **Chapters**

- 1 General information**
- 2 Specifications**
- 3 Cylinder head assembly**
- 4 Piston and connecting rod assemblies**
- 5 Crankshaft assembly**
- 6 Timing case and drive assembly**
- 7 Cylinder block assembly**
- 8 Engine timing**
- 9 Aspiration system**
- 10 Lubrication system**
- 11 Fuel system**
- 12 Cooling system**
- 13 Flywheel and housing**
- 14 Electrical equipment**
- 15 Auxiliary equipment**
- 16 Special tools**

The following pages contain a detailed table of contents

# Contents

## 1 General information

<b>Introduction</b> .....	1
<b>Safety precautions</b> .....	2
<b>POWERPART recommended consumable products</b> .....	4
<b>Engine views</b> .....	6
<b>Engine identification</b> .....	7
<b>Engine lift equipment</b> .....	8

## 2 Specifications

<b>Basic engine data</b> .....	9
<b>Standard torques</b> .....	10
<b>Special torques</b> .....	11
<b>Compression test data</b> .....	12

## 3 Cylinder head assembly

### **Rocker cover and inlet manifold**

Operation 3-1 To remove and to fit .....	13
--	----

### **Rocker assembly**

Operation 3-2 To remove and to fit .....	14
--	----

Operation 3-3 To dismantle and to assemble .....	15
Operation 3-4 To inspect .....	16
<b>Exhaust manifold and gasket</b>	
Operation 3-5 To remove and to fit .....	17
<b>Fuel injection pipes / fuel return pipes</b>	
Operation 3-6 To remove and to fit .....	18
<b>Cylinder head setscrews</b>	
Operation 3-7 To remove and to fit .....	19
<b>Cylinder head</b>	
Operation 3-8 Tightening sequence 403C-11 and 403C-15 .....	20
Operation 3-9 Tightening sequence 404C-22 and 404C-22T .....	21
<b>Cylinder head gasket</b>	
Operation 3-10 To remove and to fit .....	22
Operation 3-11 To select the correct thickness of cylinder head gasket .....	23
<b>Valve and valve spring</b>	
Operation 3-12 To remove and to fit .....	24
Operation 3-13 To inspect - valve spring .....	25
Operation 3-14 To inspect - valve stem and thickness of valve head .....	26
<b>Cylinder head to valve stem clearance</b>	
Operation 3-15 To inspect .....	27
<b>Cylinder head</b>	
Operation 3-16 To inspect .....	28
<b>Valve seat width</b>	
Operation 3-17 To inspect and to correct .....	29
<b>Valve depth</b>	
Operation 3-18 To check .....	30
Operation 3-19 To lap the contact face of the valve seat .....	31
<b>Valve tip clearance</b>	
Operation 3-20 To check and to adjust .....	32

## 4 Piston and connecting rod assemblies

### Big end bearing and cap

Operation 4-1 To remove and to fit .....	33
--	----

### Piston and connecting rod

Operation 4-2 To remove and to fit .....	34
Operation 4-3 To dismantle and to assemble .....	35

### Piston rings

Operation 4-4 To fit .....	36
Operation 4-5 To measure the piston ring clearance .....	37
Operation 4-6 To measure the piston ring gap .....	38

### Piston and connecting rod assemblies

Operation 4-7 To dismantle and to assemble .....	39
--	----

### Piston and piston ring

Operation 4-8 To inspect .....	40
--------------------------------	----

### Connecting rod

Operation 4-9 To inspect .....	41
--------------------------------	----

### Connecting rod bearing clearance

Operation 4-10 To check .....	42
-------------------------------	----

### Small end bush

Operation 4-11 To remove and to fit .....	43
---	----

## 5 Crankshaft assembly

### Crankshaft pulley

Operation 5-1 To remove and to fit .....	45
--	----

### Crankshaft retaining bolts and crankshaft

Operation 5-2 To remove and to fit .....	46
--	----

### Crankshaft

Operation 5-3 To inspect for deflection .....	47
---	----

**Main bearings**

Operation 5-4 To dismantle and to assemble ..... 49

**Bearing holder** ..... 50

**6 Timing case and drive assembly****Timing cover**

Operation 6-1 To remove ..... 51

Operation 6-2 To fit ..... 52

**Angleich**

Operation 6-3 To remove and to fit ..... 53

**Slider**

Operation 6-4 To remove and to fit ..... 54

**Camshaft retaining plate**

Operation 6-5 To remove and to fit ..... 55

**Camshaft and tappets**

Operation 6-6 To remove and to fit ..... 56

**Camshaft assembly**

Operation 6-7 To inspect ..... 57

**Maximum fuel screw and maximum speed screw**

Operation 6-8 Location ..... 58

**Front oil seal and PTO cover**

Operation 6-9 To remove and to fit ..... 59

**Idler gear and oil pump**

Operation 6-10 To remove and to fit ..... 60

**Idler hub**

Operation 6-11 To remove and to fit ..... 61

**Gear teeth backlash**

Operation 6-12 To check ..... 62

**Oil pump end float**

Operation 6-13 To check and adjust .....	63
--	----

**Governor springs**

Operation 6-14 To inspect .....	64
---------------------------------	----

**7 Cylinder block assembly****Front crankshaft bush**

Operation 7-1 To remove and to fit .....	65
Operation 7-2 To inspect .....	66

**Cylinder block top face**

Operation 7-3 To inspect .....	67
--------------------------------	----

**Cylinder bore**

Operation 7-4 To inspect .....	68
--------------------------------	----

**8 Engine timing**

Operation 8-1 Injection timing .....	69
Operation 8-2 To check the timing of the fuel injection pump .....	70

**9 Aspiration system****Breather system**

Operation 9-1 Closed circuit, naturally aspirated - to clean and to renew .....	73
Operation 9-2 Closed circuit turbo charged - to clean and to renew .....	74

**Turbocharger**

Operation 9-3 To remove and to fit .....	75
--	----

**10 Lubrication system****Lubricating oil canister**

Operation 10-1 To fit .....	77
-----------------------------	----

**Pressure relief valve**

Operation 10-2 To remove and to fit .....	78
---	----

<b>Lubricating oil sump</b>	
Operation 10-3 To remove and to fit .....	79
<b>Lubricating oil strainer and suction pipe</b>	
Operation 10-4 To remove and to fit .....	80
<b>Lubricating oil pump</b>	
Operation 10-5 To remove and to fit .....	81
<b>Rotor tip clearance</b>	
Operation 10-6 To inspect .....	82
<b>Oil pressure switch</b>	
Operation 10-7 To remove and to fit .....	83
<b>Lubricating oil pipes</b>	
Operation 10-8 To remove and to fit .....	84
<b>11 Fuel system</b>	
<b>Atomisers</b>	
Operation 11-1 To remove and to fit .....	85
<b>Fuel lift pump</b>	
Operation 11-2 To remove and to fit .....	87
<b>Fuel injection pump</b>	
Operation 11-3 To remove and to fit .....	88
Operation 11-4 To eliminate air from the fuel system .....	89
<b>12 Cooling system</b>	
<b>Coolant pump</b>	
Operation 12-1 To remove and to fit .....	91
Operation 12-2 To inspect .....	92
<b>Fan and mounting</b>	
Operation 12-3 To remove and to fit .....	93



**Thermostat**

Operation 12-4 To remove and to fit .....	94
Operation 12-5 To drain the cylinder block .....	95
Operation 12-6 To test and to inspect .....	96

**13 Flywheel and housing****Flywheel**

Operation 13-1 To remove and to fit .....	97
Operation 13-2 To check for concentricity and alignment of the flywheel housing .....	98
Operation 13-3 To check for run-out of the flywheel and alignment of the flywheel face .....	99

**Starter ring gear**

Operation 13-4 To remove and to fit .....	100
---	-----

**Backplate and rear oil seal**

Operation 13-5 To remove and to fit .....	101
---	-----

**14 Electrical equipment****Electrical shut off solenoid**

Operation 14-1 To remove and to fit .....	103
---	-----

**Bus-bar / glowplugs**

Operation 14-2 To remove and to fit .....	104
---	-----

**Drive belt**

Operation 14-3 To inspect and to adjust .....	105
---	-----

**Alternator**

Operation 14-4 To remove and to fit .....	106
---	-----

**Starter motor**

Operation 14-5 To remove and to fit .....	107
---	-----

<b>Wiring diagram 15 amp alternator - 403C-11 .....</b>	<b>108</b>
---	------------

<b>Wiring diagram 40 amp alternator - 403C-11 .....</b>	<b>109</b>
---	------------

<b>Wiring diagram 55 amp alternator 403C-15, 404C-22 and 404C-22T .....</b>	<b>110</b>
---	------------

<b>Automatic shutdown connector .....</b>	<b>111</b>
---	------------

<b>Wiring diagram - automatic shutdown 15 amp alternator - 403C-11 .....</b>	<b>112</b>
--	------------

**Wiring diagram - automatic shutdown 40 amp alternator - 403C-11** .....113

**Wiring diagram - automatic shutdown 55 amp alternator 403C-15, 404C-22 and 404C-22T** .....114

## 15 Auxiliary equipment

Operation 15-1 None fitted .....115

## 16 Special tools

**Special tools list** .....117