



SH NO.	TITLE
1)	INDEX
2)	HARNASS ARCHITECTURE
3)	LOCATION OF MAJOR COMPONENTS
4)	LOCATION OF MAJOR COMPONENTS
5)	SYMBOLS INDEX
6)	SYMBOLS INDEX ( CONTINUED )
7)	SYMBOLS INDEX ( CONTINUED )
8)	SYMBOLS INDEX ( CONTINUED )
9)	CHARGE AND START
10)	POWER DISTRIBUTION - UNSWITCHED CIRCUITS
11)	POWER DISTRIBUTION - IGNITION SWITCHED CIRCUITS
12)	POWER DISTRIBUTION - ACCESSORY SWITCHED CIRCUITS
13)	POWER DISTRIBUTION - CIRCUIT BREAKER - ENGINE
14)	TURN SIGNALS / HAZARD LIGHTS
15)	STOP LAMPS
16)	MARKER / CLEARANCE LAMPS / LEFT POLE / RIGHT POLE
17)	HEADLAMPS
18)	BACK - UP LIGHT SWITCH
19)	DAYCAB AD / LOADLIGHTS
20)	SLEEPER AD / LOADLIGHTS - 48" / 63" HIGH ROOF
21)	FOG LIGHTS
22)	CAB DOOR LOCKS
23)	REMOTE KEYLESS ENTRY RELAY - OPTIONAL
24)	CAB DOME LIGHT / DOOR LAMPS / DOOR JAMB / ALARM
25)	CAB FOOTLIGHTS / CIGAR LIGHTER / POWER POINT / B - PANEL POWER POINT
26)	48" / 63" HIGH ROOF SLEEPER LIGHTS / DOOR LOCK / DOOR JAMB
27)	48" / 63" HIGH ROOF SLEEPER POWER ACCESS OUTLETS
28)	48" / 63" LOW ROOF SLEEPER
29)	70" SLEEPER
30)	36" SLEEPER
31)	LH DOOR ELECTRIC WINDOW LIFT
32)	RH DOOR ELECTRIC WINDOW LIFT
33)	MIRRORS - STANDARD / MOTORIZED / HEATED AND MIRROR CONTROL
34)	CB RADIO
35)	DASH RADIO
36)	CAB ROOF SPEAKERS - CONCERT CLASS / CONCERT CLASS PREMIUM
37)	CAB ROOF SPEAKERS - CONCERT CLASS EHD
38)	RADIO - 48" / 63" / 70" SLEEPER
39)	CLOCK
40)	WIPER / WASHER
41)	ELECTRIC HORN
42)	CAB HVAC
43)	SLEEPER HVAC - ALL SLEEPERS
44)	SLEEPER LOAD CENTER
45)	SLEEPER POWER SUPPLY HARNESS
46)	NAMUX
47)	BACK - LIGHTING (+12 VOLTS) AND PANEL LAMPS DIMMER
48)	BACK - LIGHTING NEGATIVE LINKS ( GROUND )
49)	OUTSIDE AIR TEMPERATURE
50)	FIFTH WHEEL / DIFF LOCK / SUSPENSION DUMP VALVE / SPARE ROCKER SWITCHES
51)	FUEL LEVEL
52)	FUEL FILTER - ACCESSORY POWER
53)	PARK BRAKE
54)	FORWARD AND REAR DRIVER AXLE TEMP
55)	VORAD
56)	AIR DRYER
57)	FUEL FILTER RESTRICTION
58)	TIRE PRESSURE CONTROL SYSTEM ( TPCS ) CAB & CHASSIS
59)	AUX TRANSMISSION OIL TEMP
60)	EATON ULTRASHIFT TRANSMISSION
61)	EATON AUTOSHIFT TRANSMISSION
62)	EATON AUTOSHIFT AND ULTRASHIFT TRANSMISSION ( CONTINUED )
63)	MERITOR FREEDOMLINE TRANSMISSION
64)	WTEC TRANSMISSION ( ALLISON )
65)	WTEC TRANSMISSION ( ALLISON ) ( CONTINUED )
66)	EATON LIGHTNING TRANSMISSION POWER
67)	MAIN CAB ABS CONNECTIONS
68)	BENDIX ABS SYSTEM
69)	BENDIX ABS SYSTEM ( CONTINUED )
70)	BENDIX ABS ( CHASSIS )
71)	WABCO ABS SYSTEM ( E-BASIC )
72)	WABCO ABS SYSTEM ( E-UNIVERSAL )
73)	TRAILER ABS
74)	MAIN CAB ENGINE FIREWALL BULKHEAD
75)	ENGINE - CAT C11 / C13 AND C15
76)	ENGINE - CAT C11 / C13 AND C15 ( CONTINUED )
77)	ENGINE - CUM ISM
78)	ENGINE - CUM ISC / ISL
79)	ENGINE - CUM ISX
80)	ENGINE - CUM ISM ( BJ SERVICES )
81)	ENGINE - CUM ISM ( BJ SERVICES ) ( CONTINUED )
82)	ENGINE - CUM ISM ( BJ SERVICES )
83)	ENGINE - CUM ISM ( BJ SERVICES ) ( CONTINUED )
84)	ENGINE - CUM ISX ( BJ SERVICES )
85)	ENGINE - CUM ISX ( BJ SERVICES ) ( CONTINUED )
86)	ENGINE ECU POWER
87)	CHASSIS SPARE GROUNDS
88)	MAIN CAB SPARE RELAY
89)	CHASSIS SENSOR ADD-ON - TRANSFER CASE OIL TEMP / BRAKESAVER OIL TEMP / GENERAL OIL TEMP / AUX XSMN OIL TEMP #3 / PTO OIL TEMP
90)	CUMMINS ICON2 IDLE CONTROL
91)	J1939 ARCHITECTURE
92)	TELEMATICS
93)	SLEEPER LVD / LVD ADAPTER
94)	CUMMINS DUAL STATION CONTROLS ( BJ SERVICES )
95)	ENGINE BRAKE CONTROLS
96)	ENGINE FAN CONTROLS
97)	LIFT AXLE CONTROL ( W/O AUTO-REVERSE )
98)	LIFT AXLE CONTROL ( W/ AUTO-REVERSE )


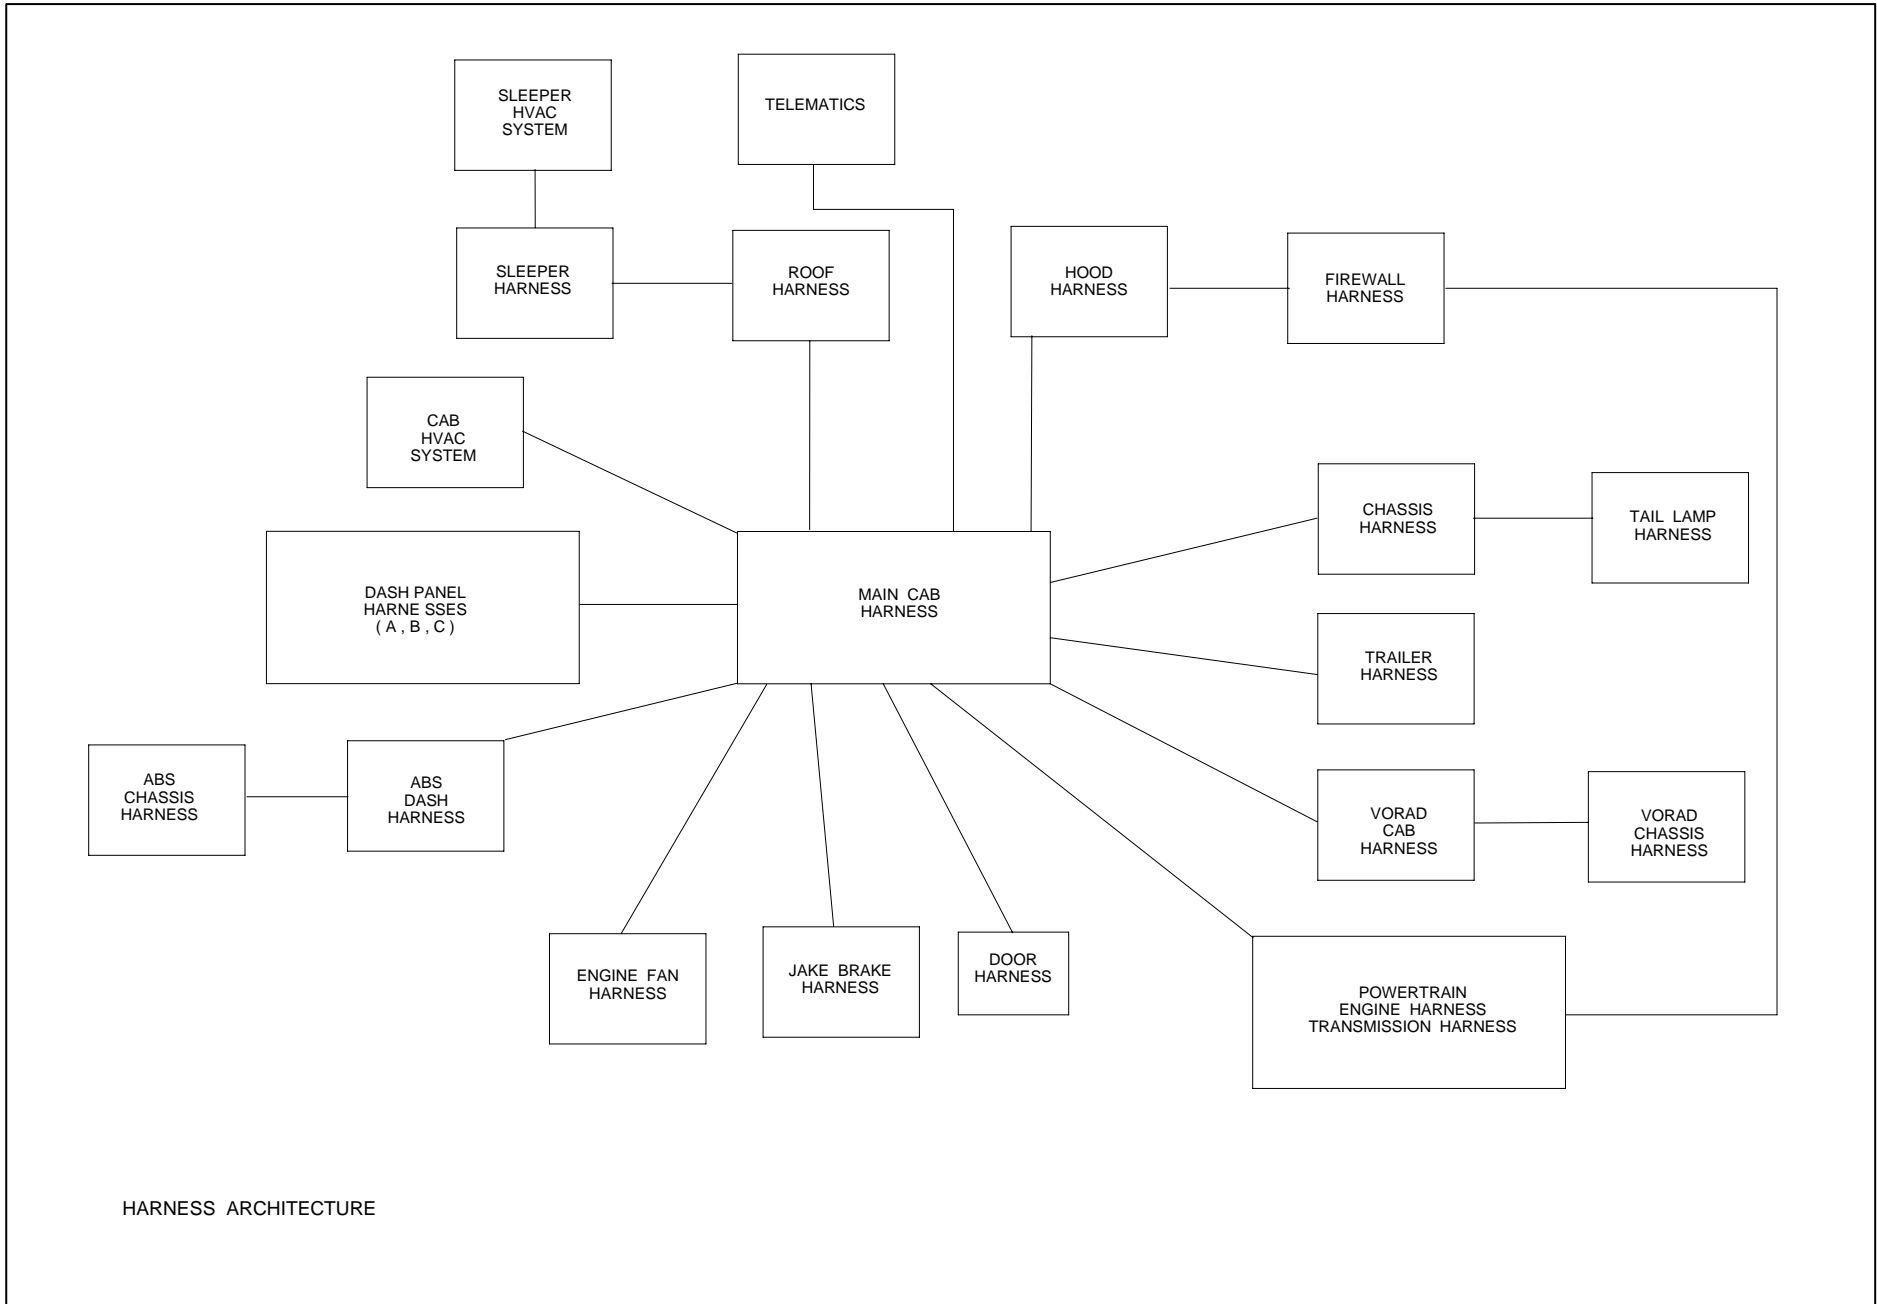


LOCATIONS OF MAJOR ELECTRICAL MODULES IN 379E CAB AND SLEEPER

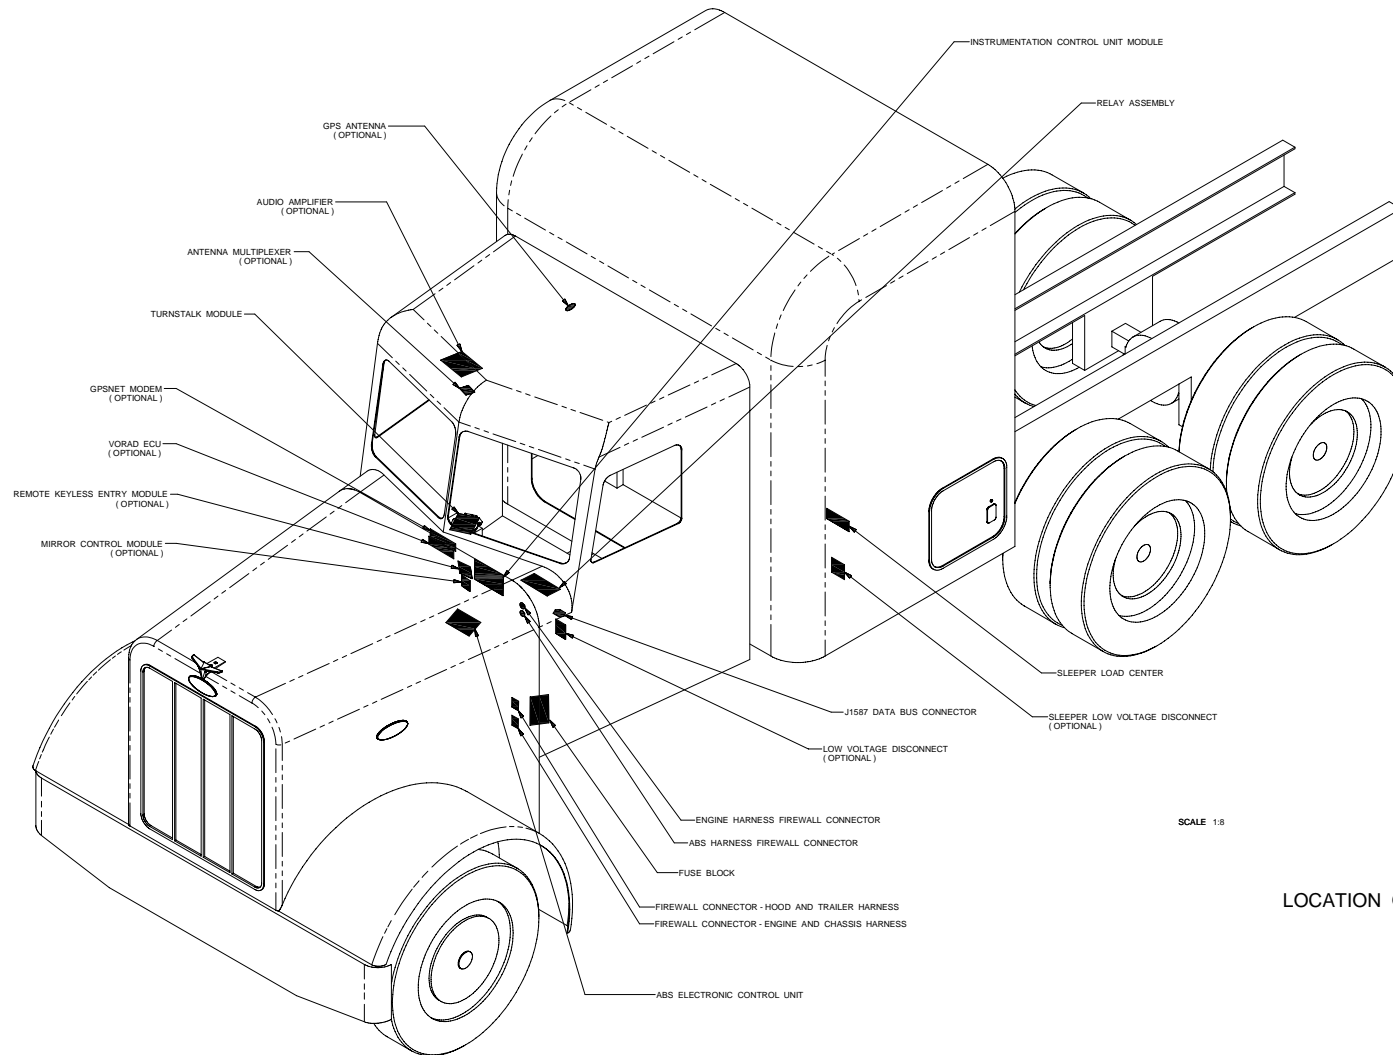


 
 
 
 
 
 

LOCATION OF MAJOR COMPONENTS

LOCATIONS OF ELECTRICAL MODULES IN 379E CAB AND SLEEPER

 
 
 

 
 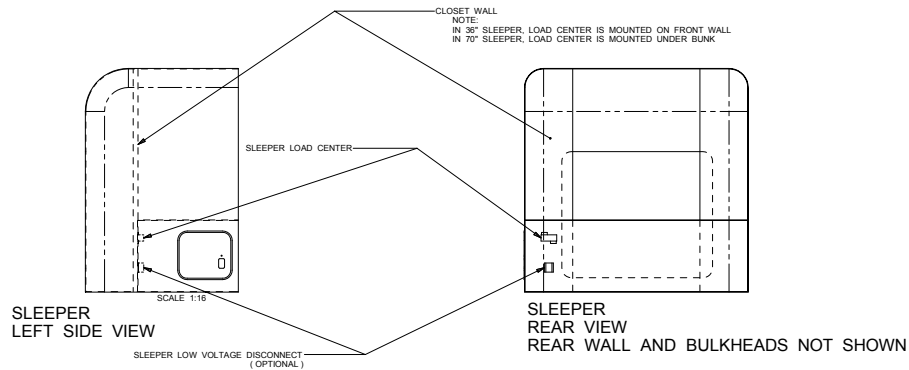
 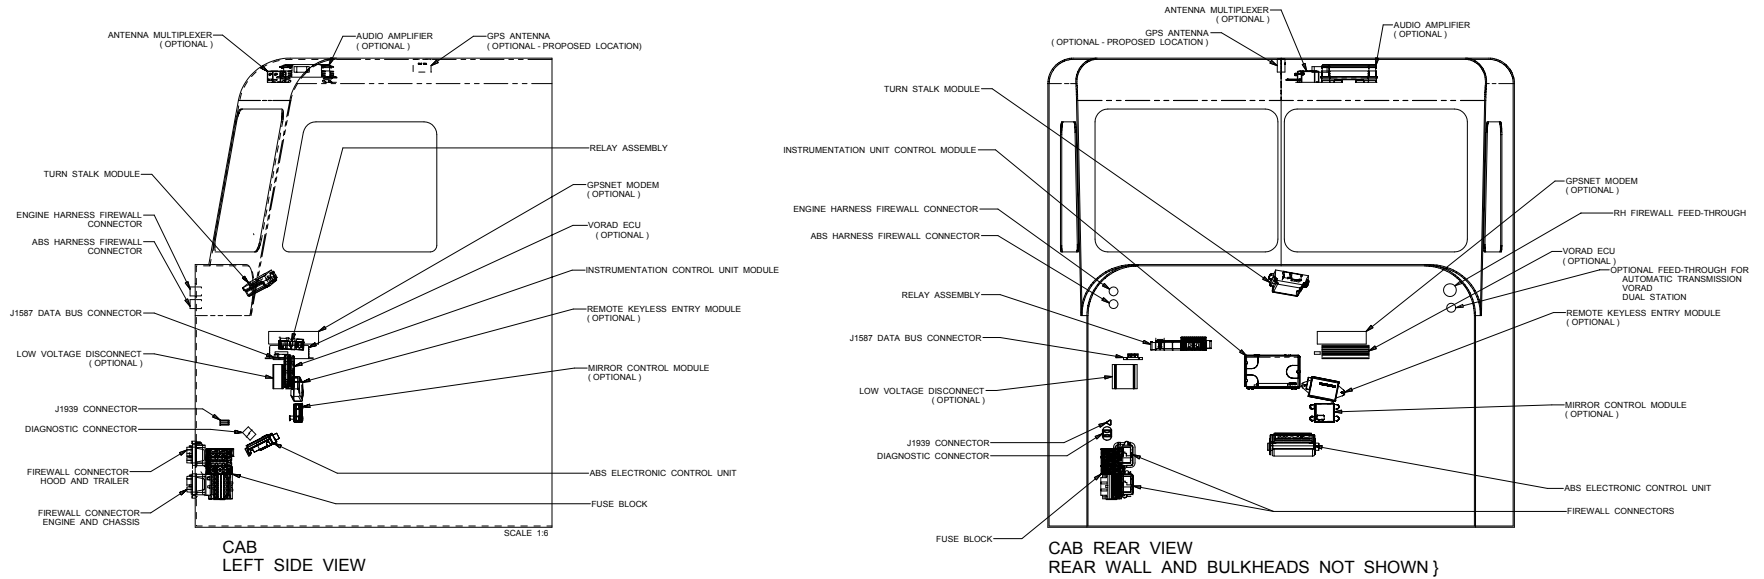


LOCATION OF MAJOR COMPONENTS


SYMBOL / ABBREVIATION KEY


- 1) ⊗ STUD
  - 2) • SPLICE
  - 3) ○ RING TERMINAL CONNECTORS
  - 4) NUMBERS EX CIRCUIT DESCRIPTION SUFFIX ALPHA
  - 5)  286 BUSS BAR
  - 6) CB CIRCUIT BREAKER
  - 7) CLC CHASSIS LOAD CENTER
  - 8) SLPR SLEEPER
  - 9) TRLR TRAILER
  - 10) MFTS MULTI-FUNCTION TURN STALK
  - 11) ✕ CONTINUED TO OTHER SH XX
  - 12) ▲ MOMENTARY CONTACT
  - CONTACT
  - 13)  BULB
  - 14)  GROUND
  - 15)  DIODE
  - 16)  RESISTOR
  - 17)  CAPACITOR
  - 18)  POLYFUSE
  - 19)  LIGHT-EMITTING DIODE
- SWITCH

— SHEET NUMBER

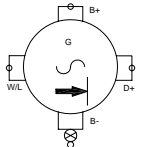- 20)  SW20-2, d0 STARTER THERMAL OVERLOAD SWITCH
- 21)  SW20-2, d0 NEUTRAL START SWITCH
- 22)  BATTERIES BATTERY
- 23)  ALTERNATOR
- 24)  CB2-2 150 AMP CIRCUIT BREAKER
- 25)  STARTER
- 26)  WINDOW SWITCH

 SYMBOLS INDEX


27)  J1939 CABLE SHIELD


28)  TWISTED PAIR


29)  PRESSURE SWITCH

30)  LAMP

 31)  LIGHT





 

32)  IGNITION SWITCH

33)  WINDOW LIFT MOTOR


34)  TWISTED TRIPLET

SYMBOLS INDEX ( CONTINUED )

   FUSES







- 1)  25 A FUSE
- 2)  XX AMP
- 3)  F1,0 AMP XX
- 4)  XX AMP
- 5)  FUSE 10 AMP
- 6)  XX AMP

ROCKER SWITCH ICONS

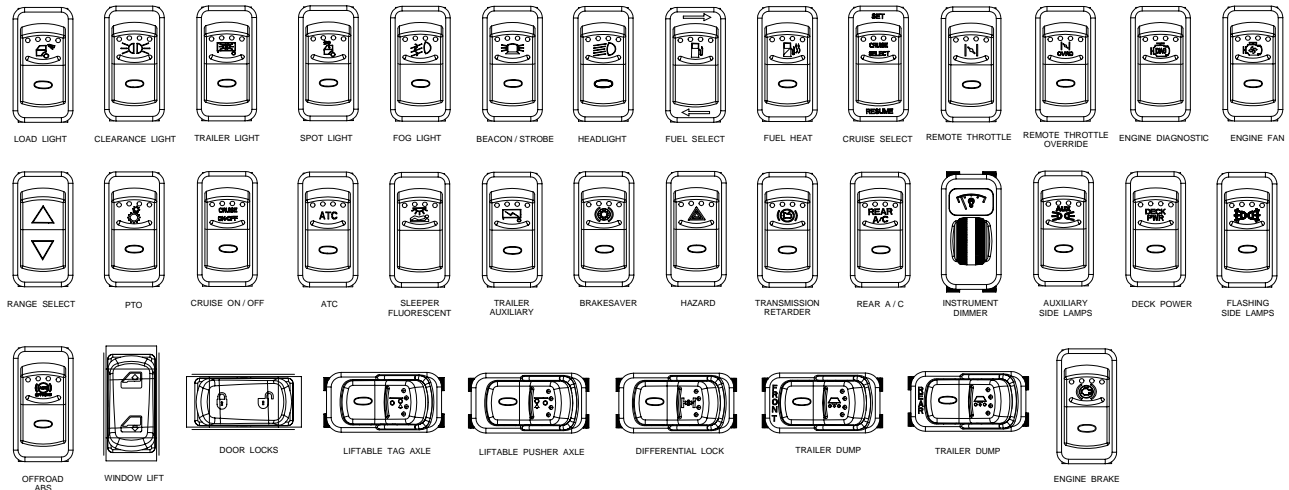


SYMBOLS INDEX ( CONTINUED )

    
RELAYS

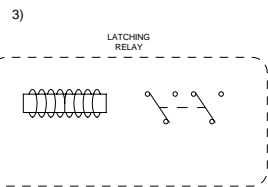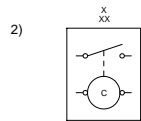


STARTER RELAY

 


ENGINE INTERRUPT RELAY

 

START ENABLE RELAY

 


BACK-UP LAMP RELAY

 

RELAY

SYMBOLS INDEX ( CONTINUED )



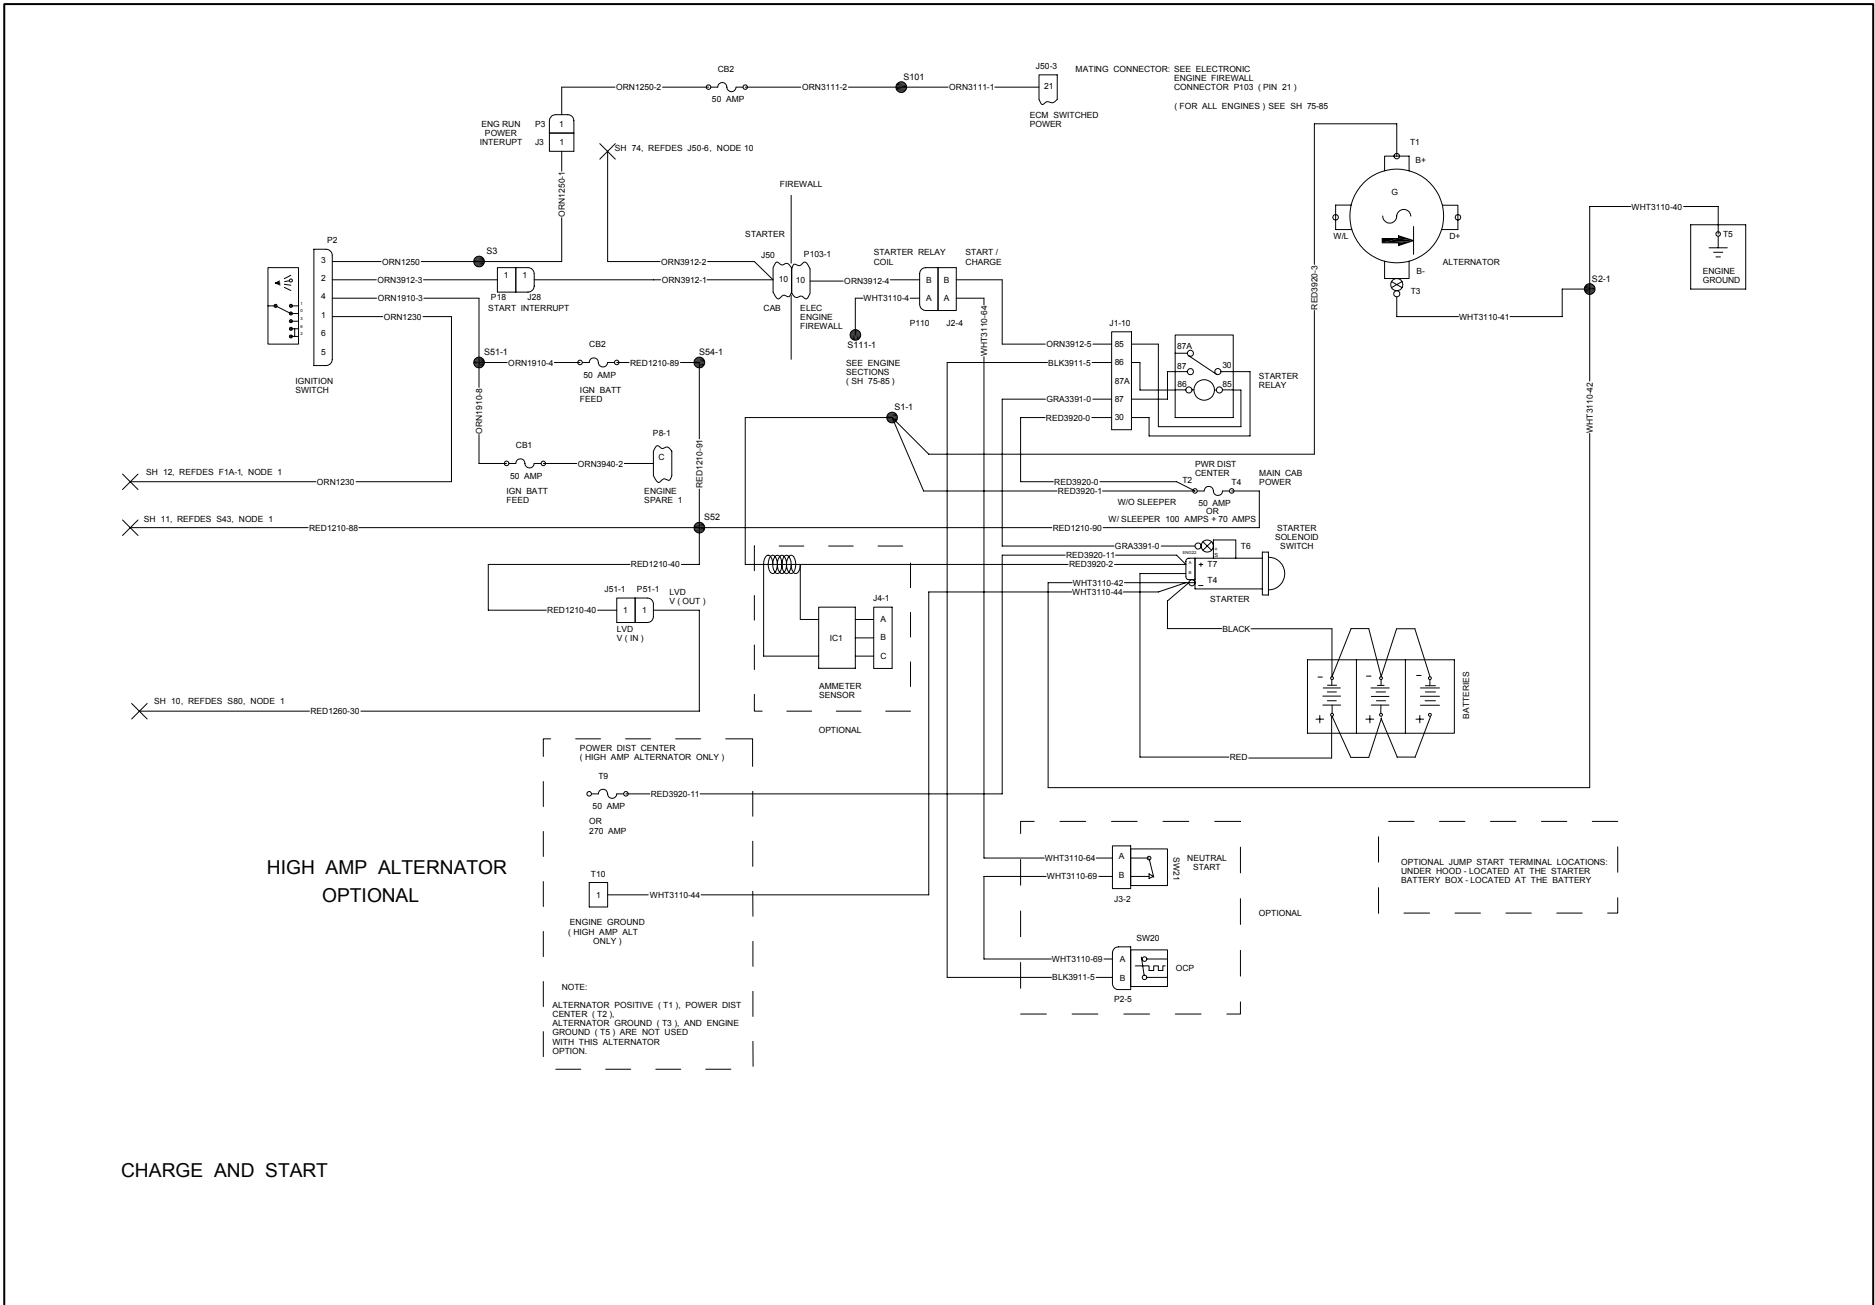

This is the cut pages sample. Download all 98 page(s) at: ManualPlace.com

