

## **SECTION 01**

# **HOW TO USE ELECTRICAL WIRING DIAGRAM**

## **SECTION 02**

# POSITION OF CONNECTORS AND GROUNDS

## **SECTION 03**

# **USAGE AND CAPACITY OF FUSES IN FUSE BOX**

## **SECTION 04**

# **WIRING DIAGRAM FOR POWER SUPPLIES**

**SECTION 05**

**ELECTRICAL WIRING  
DIAGRAMS**

**EDITION HISTORY**

No.	CODE NO.	PRINTING DATE	MODEL YEAR	REMARKS
1	RX II-6EWD5E-6D-200A	Apr. 2006	2006	Y250

---

---

**REXTON II (LHD)  
ELECTRICAL WIRING DIAGRAM**

---

---

ISSUED BY  
INTERNATIONAL A/S TEAM  
SSANGYONG MOTOR CO., LTD.

150-3, CHILGOI-DONG, PYUNGTAEK-SI  
GYEONGGI-DO, 459-711 KOREA

TELEPHONE : 82-31-610-2740  
FACSIMILE : 82-31-610-3762

---

---

**NOTE:**All rights reserved. Printed in SSANGYONG Motor Co., Ltd.  
No part of this book may be used or reproduced without the  
written permission of International A/S Team.





**REXTON II**  
**(LHD)**  
**ELECTRICAL WIRING  
DIAGRAM**

## **SECTION INDEX**

<b>HOW TO USE ELECTRICAL WIRING DIAGRAM</b>	<b>1</b>
<b>POSITION OF CONNECTORS AND GROUNDS</b>	<b>2</b>
<b>USAGE AND CAPACITY OF FUSES IN FUSE BOX</b>	<b>3</b>
<b>WIRING DIAGRAM FOR POWER SUPPLIES</b>	<b>4</b>
<b>ELECTRICAL WIRING DIAGRAMS</b>	<b>5</b>



---

# **SECTION 1**


# **HOW TO USE ELECTRICAL WIRING DIAGRAM**

## **TABLE OF CONTENTS**

1. HOW TO READ ELECTRICAL WIRING DIAGRAM .....	1-2
2. CIRCUIT IDENTIFICATION SYMBOL .....	1-3
3. FUNCTION OF POWER SUPPLY LINE (NUMBER) .....	1-4
4. WIRING HARNESS COLOR IDENTIFICATION .....	1-4
5. HOW TO CHECK TERMINAL NUMBER OF CONNECTOR .....	1-4
6. PART LOCATION ACCORDING TO PART NUMBER .....	1-5
7. ELECTRIC SYMBOLS .....	1-6



## 1. HOW TO READ ELECTRICAL WIRING DIAGRAM

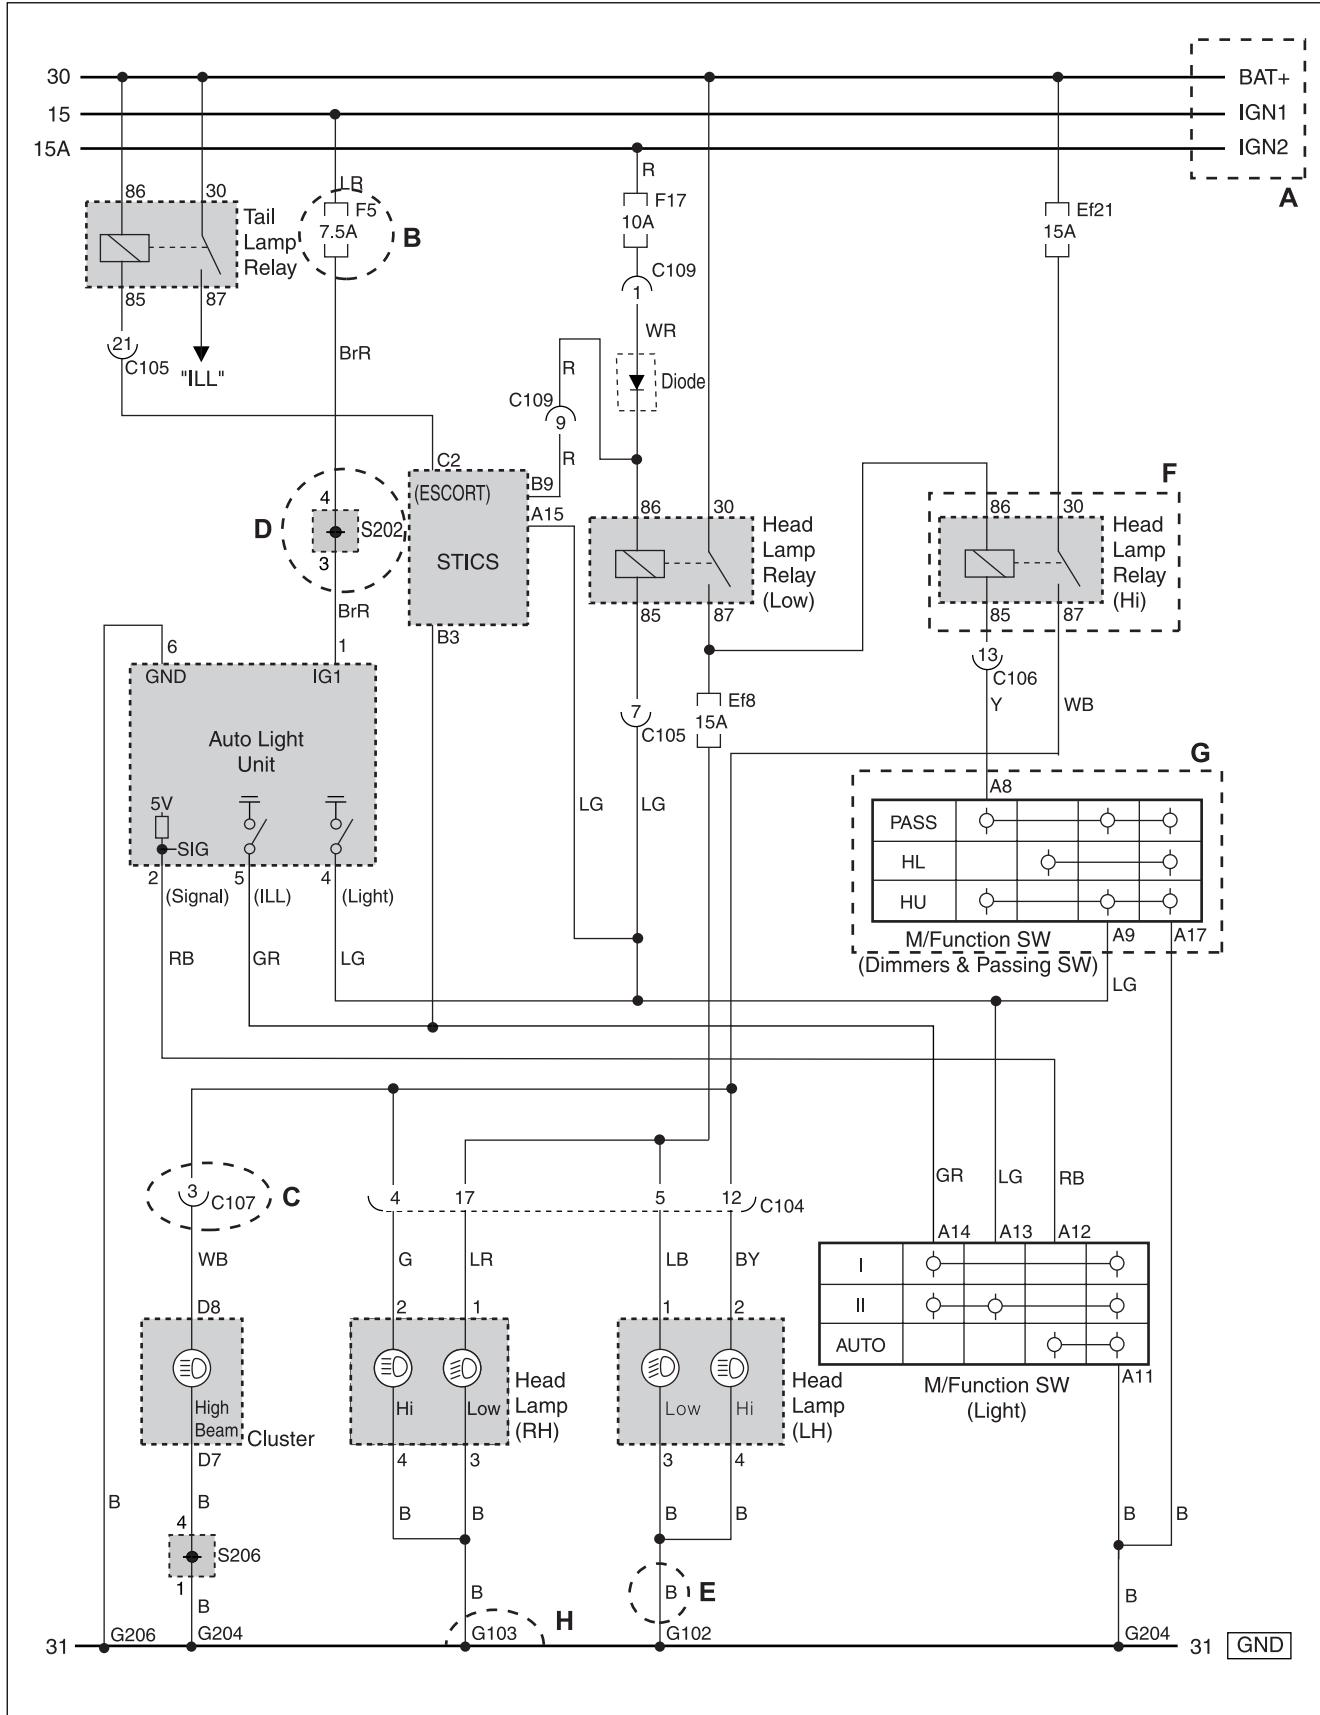



## 1) CONTENTS OF ELECTRICAL WIRING DIAGRAM (CIRCUIT)

Position	Explanation
A	<ul style="list-style-type: none"> <li>- Upper horizontal lines : Power supply lines</li> <li>- Power supply lines : 30, 15, 15A, 15C, 58</li> </ul>
B	<ul style="list-style-type: none"> <li>- Ef20 or F2 : Fuse Number           <ul style="list-style-type: none"> <li>• Ef20 : Fuse No #20 in engine room compartment</li> <li>• F2 : Fuse No #2 in passenger room compartment</li> </ul> </li> </ul>
C	<ul style="list-style-type: none"> <li>- Connector (C101 ~ C903)           <ul style="list-style-type: none"> <li>• Connector No C203 terminal No1</li> <li>* Refer to Major Connector Position (Section 2)</li> </ul> </li> </ul>
D	<ul style="list-style-type: none"> <li>- S201 : Splice pack (S201 ~ S207)           <ul style="list-style-type: none"> <li>* Refer to Major Splice Pack Position (Section2)</li> </ul> </li> </ul>
E	<ul style="list-style-type: none"> <li>- Wiring Harness Color           <ul style="list-style-type: none"> <li>* Refer to Wiring Harness Color Abbreviation</li> </ul> </li> </ul>
F	<ul style="list-style-type: none"> <li>- Internal circuit of component (Relay) (Component Name and Terminal Number)</li> </ul>
G	<ul style="list-style-type: none"> <li>- Internal circuit of component (Switch) (Component Name, Terminal Number and Connecting Wiring Circuit)</li> </ul>
H	<ul style="list-style-type: none"> <li>- Lower horizontal line : Ground line           <ul style="list-style-type: none"> <li>• Ground position (G101 ~ G402)</li> <li>• B : Body Ground</li> </ul> </li> <li>* Refer to Major Ground Position (Section2)</li> </ul>

## 2. CIRCUIT IDENTIFICATION SYMBOL

Identification Symbol	Meaning
C	Connector
D	Diode
Ef	Fuse in engine room fuse & relay box
F	Fuse in passenger room fuse box
G	Ground
S	Splice pack (Junction connector)

01

02

03

04

05



### 3. FUNCTION OF POWER SUPPLY LINE (NUMBER)


Power supply No.	Power supply condition
15	Battery Voltage (B+) supply in Ignition Switch "ON" and "ST" (IGN 1)
15A	Battery Voltage (B+) supply in Ignition Switch "ON" (IGN 2)
15C	Battery Voltage (B+) supply in Ignition Switch "ON" and "ACC"
30	Battery Voltage (B+) supply directly regardless of Ignition Switch
31	Ground connected to battery (-)
58	Battery Voltage (B+) supply in Head Lamp Switch 1st and 2nd step (Illumination circuit)

### 4. WIRING HARNESS COLOR IDENTIFICATION

Abbreviation	Color	Abbreviation	Color
Br	Brown	Sb	Sky Blue
G	Green	R	Red
V	Violet	L	Blue
P	Pink	Y	Yellow
W	White	Gr	Gray
Or	Orange	B	Black
Lg	Light Green		

### 5. HOW TO CHECK TERMINAL NUMBER OF CONNECTOR

- Terminal number is given based on Female Terminal Male Connector  
ex) Terminal Number 4 of C901 connection

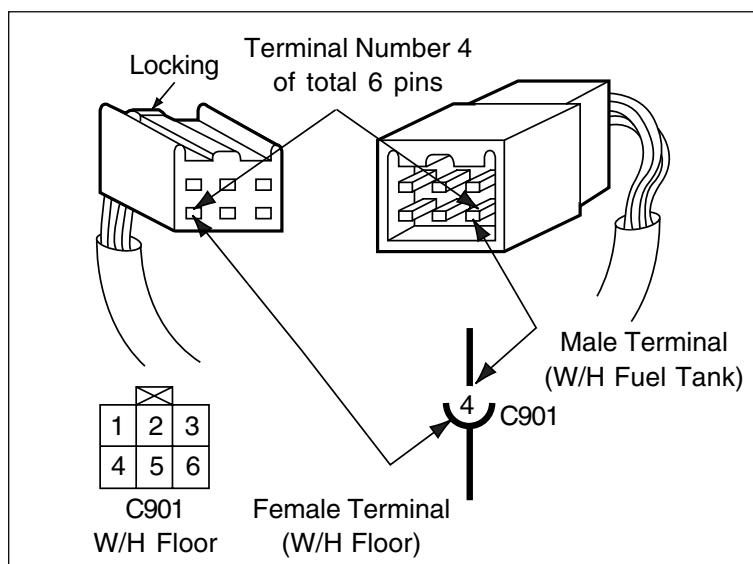





## 6. PART LOCATION ACCORDING TO PART NUMBER

Ex.) **C 1 0 2**

- C : Symbol character for connector

Symbol Character	Description
C	Connector (Connecting part that connects two wiring harness)
D	Diode
G	Ground
S	Splice pack (Joint connector that connects various wiring harness)

- 1 : Part location number

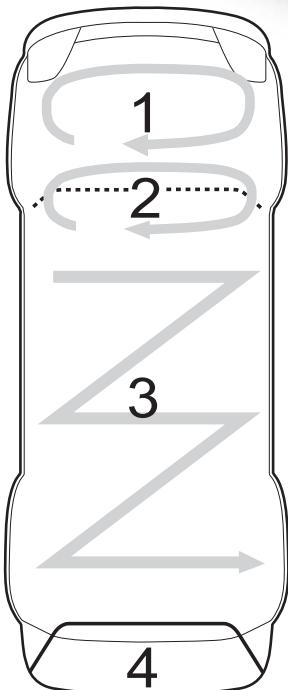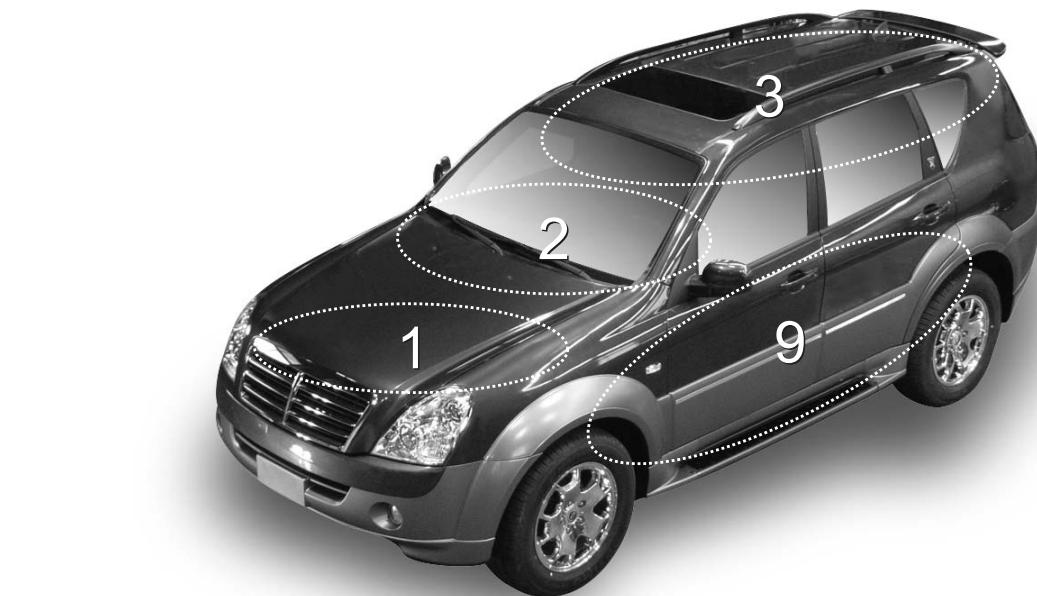

- Part number according to locating section

Part Number	Location
□1□□	Engine compartment
□2□□	Instrument panel
□3□□	Passenger compartment
□4□□	Tailgate
□9□□	Underbody

- In the locating section, the assignment for part number starts from left bottom and proceeds clockwise.
- In the fuse and relay box or the instrument panel, the part number is assigned from left top to light bottom.



## 7. ELECTRIC SYMBOLS

Items	Symbols	Items	Symbols
Resistance		Lamp	
Rheostat		Single Bulb	
Coil, Inductance		Double Bulb	
Condenser, Capacitor		Transistor : PNP type	
Ground, Earth		Transistor : NPN type	
Diode		~Meter, ~Gauge	
Zener Diode		Voltmeter	
Photo Diode		Amperemeter	
Light Emitting Diode		Switch	
Battery		Thermistor	
Disconnected Wire		Junction Point	
Fuse		Fusible Link	
Motor		Connector	
Speaker		Horn	

---

## **SECTION 2**

# **POSITION OF CONNECTORS AND GROUNDS**


### **TABLE OF CONTENTS**

<b>1. WIRING HARNESS, COMPONENTS LOCATION .....</b>	<b>0000</b>	<b>2-2</b>
1) WIRING HARNESS .....		2-2
2) COMPONENTS LOCATION .....		2-3
3) CONNECTOR, GROUND & SPLICE PACK INFORMATION .....		2-4
4) SPLICE PACK CIRCUIT .....		2-13
5) CONNECTOR CIRCUIT .....		2-16
<b>2. W/H ENGINE ROOM .....</b>	<b>8210</b>	<b>2-42</b>
<b>3. W/H MAIN .....</b>	<b>8210</b>	<b>2-44</b>
<b>4. W/H FLOOR .....</b>	<b>8210</b>	<b>2-47</b>
<b>5. W/H ROOF .....</b>	<b>8210</b>	<b>2-50</b>
<b>6. W/H DRIVER DOOR .....</b>	<b>8210</b>	<b>2-51</b>
<b>7. W/H PASSENGER DOOR .....</b>	<b>8210</b>	<b>2-52</b>
<b>8. W/H RR DOOR .....</b>	<b>8210</b>	<b>2-53</b>
<b>9. W/H TAIL GATE .....</b>	<b>8210</b>	<b>2-54</b>



# 1. WIRING HARNESS, COMPONENTS LOCATION 0000

## 1) WIRING HARNESS

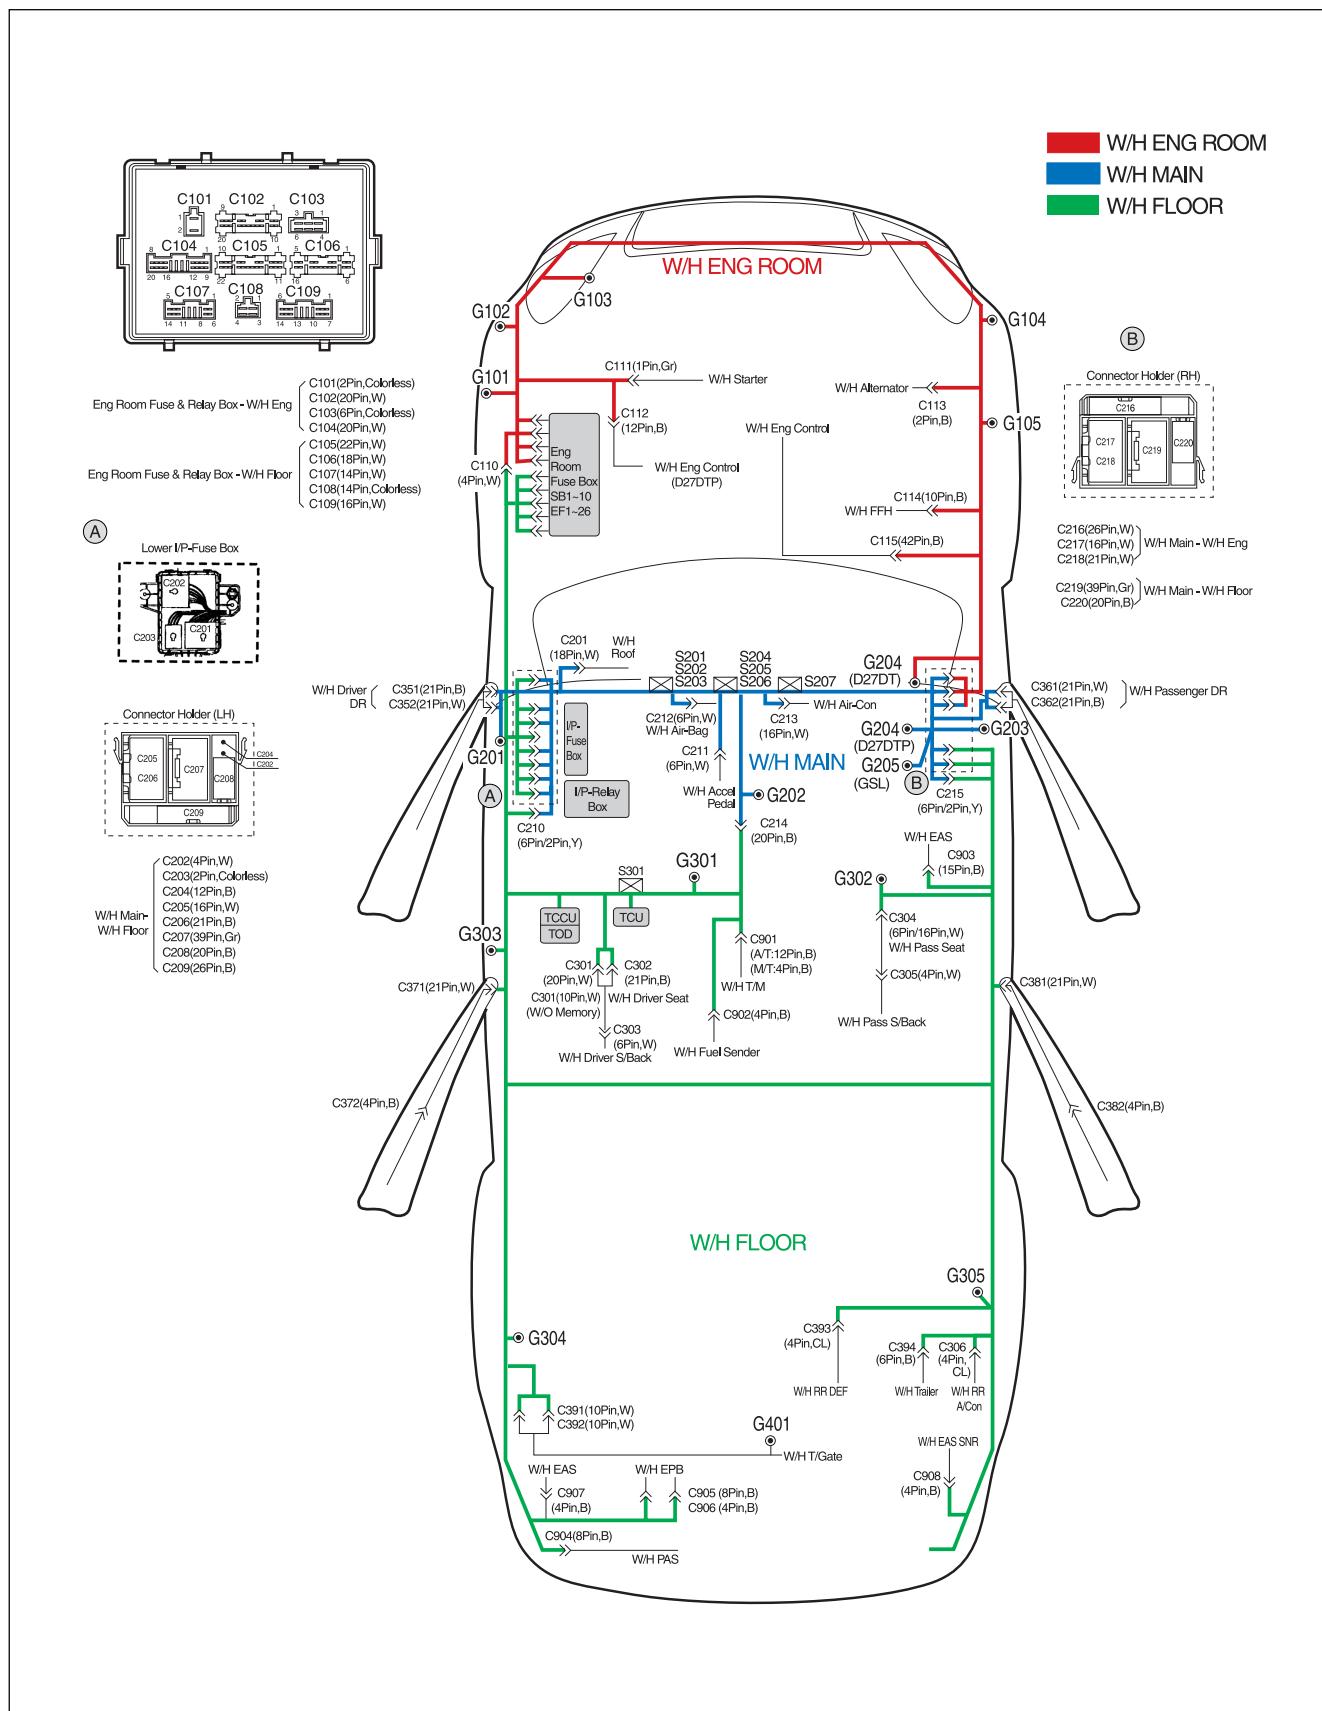



01


02

03

04

05

## 2) COMPONENTS LOCATION

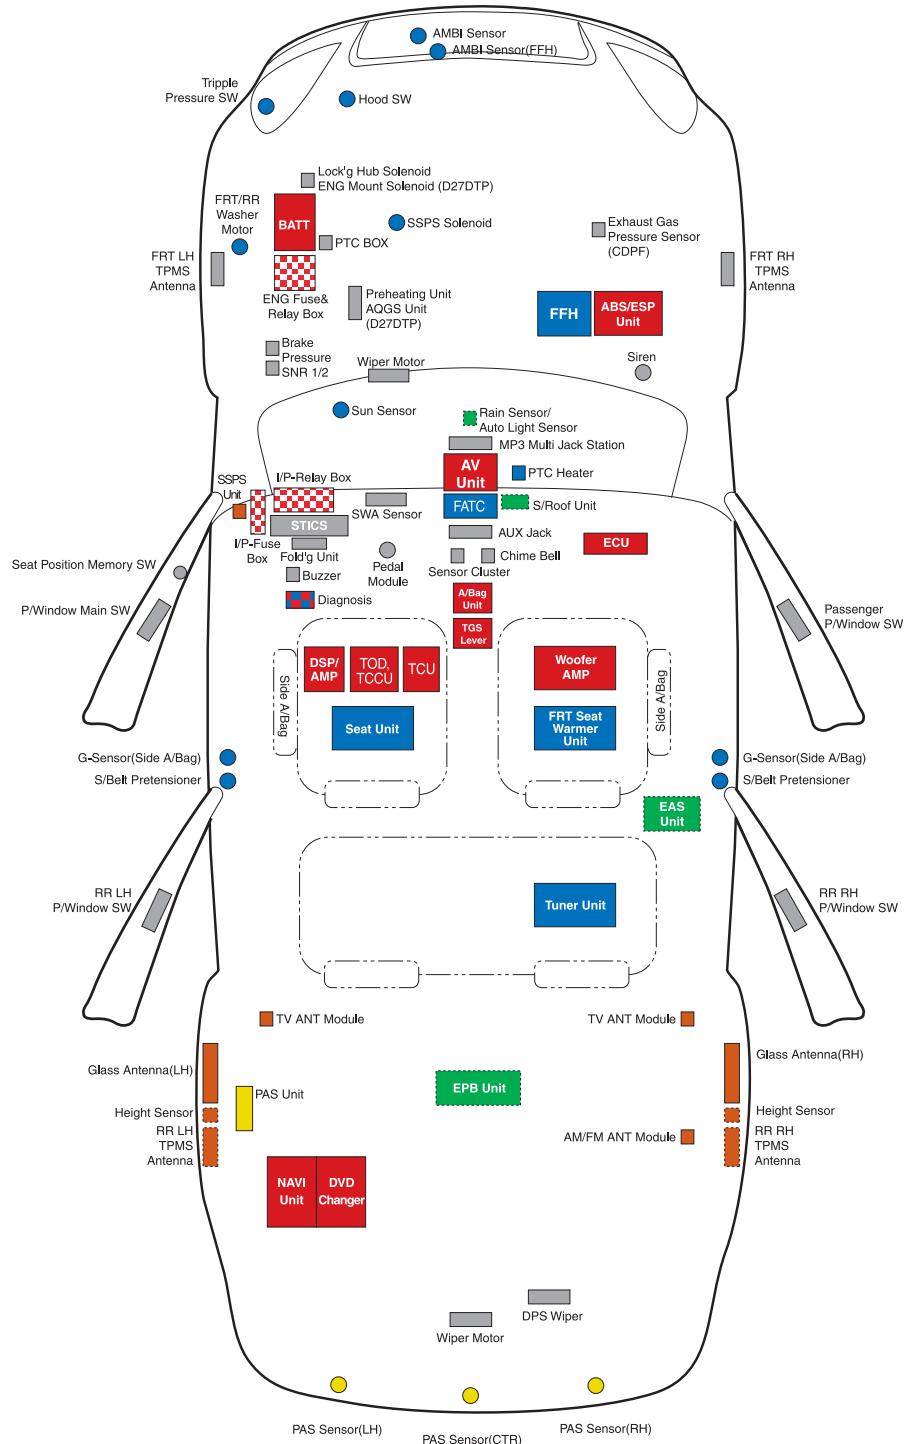



### 3) CONNECTOR, GROUND & SPLICE PACK INFORMATION

#### ► CONNECTOR

Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C101 (2Pin, Colorless)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C102 (20Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C103 (6Pin, Colorless)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C104 (20Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C105 (22Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C106 (18Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C107 (14Pin, White)	W/H Eng - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C108 (4Pin, Colorless)	W/H Eng - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C109 (16Pin, White)	W/H Eng - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C110 (4Pin, White)	W/H Eng - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C111 (1Pin, Gray)	W/H Floor - Starter Motor	Under the Preheating Time Relay	Solenoid
C112 (12Pin, Black)	W/H Eng - W/H Eng Control	Under the Preheating Time Relay	D27DTP
C113 (2Pin, Black)	W/H Eng - W/H Alternator	Under the Coolant Reserve Tank	
C114 (16Pin, Black)	W/H Eng - W/H FFH	Backside Coolant Reserve Tank	FFH
C115 (42Pin, Black)	W/H Floor - W/H Eng Control	Right Eng Room Dash PNL	
C201 (18Pin, White)	W/H Main - W/H Roof	Under the I/P Fuse Box	
C202 (4Pin, White)	W/H Main - W/H Floor	Under the I/P Fuse Box	PTC
C203 (2Pin, Colorless)	W/H Main - W/H Floor	Under the I/P Fuse Box	
C204 (12Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C205 (16Pin, White)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	C/Holder
C206 (21Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	C/Holder
C207 (39Pin, Gray)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	C/Holder
C208 (20Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	C/Holder
C209 (26Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	C/Holder
C210	(6Pin, Yellow)	W/H Air Bag - W/H Air Bag EXTN	Driver Cowl Side C/Holder
	(2Pin, Yellow)	W/H Air Bag - W/H Air Bag EXTN	Driver Cowl Side C/Holder
C211 (6Pin, White)	W/H Main - W/H Accel Pedal	Inside the Driver Under-Cover	
C212 (6Pin, White)	W/H Main - W/H Air Bag	Backside the Cluster(Inside I/P)	
C213 (16Pin, White)	W/H Main - W/H A/Con	Backside the A/V Head Unit	
C213A (13Pin, White)	W/H A/Con - W/H Blower	Backside the Glove Box	
C214 (20Pin, Black)	W/H Main - W/H Floor	Lower the Console Box	
C215	(6Pin, Yellow)	W/H Air Bag - W/H Air Bag EXTN	Passenger Cowl Side C/Holder
	(2Pin, Yellow)	W/H Air Bag - W/H Air Bag EXTN	Passenger Cowl Side C/Holder
C216 (26Pin, White)	W/H Main - W/H Eng	Passenger Cowl Side C/Holder	C/Holder