


Foreword

This manual contains SECTION 8A "Wiring Diagram" which is a part of the ELECTRICAL SYSTEM section of the service manual.

Applicable model:

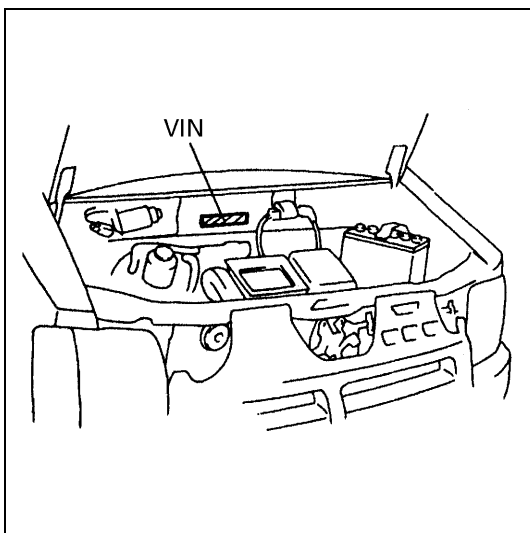

XXXXXXXXXXXXXX
(Fill VIN No. in each country)

All information, illustrations and specifications contained in this literature are based on the latest product information available at the time of publication approval. The descriptions in this manual are based on standard or base model specifications. Therefore, please note that the actual vehicle being serviced may differ from the manual. SUZUKI MOTOR CORPORATION reserves the right to make changes at any time without notice.

Please note that this manual contains references to equipment that may not be marketed in all countries.

For inspection and service work, refer to the service manual(s) listed below.

NOTE:

This manual shows the circuits for all the possible variations in production specifications. However, depending on the specifications of the vehicle you are handling, its wiring harness may not include some of the circuits or wiring shown in this manual.

Related Manual

Manual Name	Part Number
SR410 Service Manual	XXXXX-XXXXX-XXX

(Fill manual name and no. in each country)

SUZUKI MOTOR CORPORATION

OVERSEAS SERVICE DEPARTMENT

(Change to your company name)

© COPYRIGHT SUZUKI MOTOR CORPORATION 2001

Table of Contents

Table of Contents

Precautions	8A-0-1	B-6 Horn	8A-7-11
General information	8A-1-1	C-1 Combination meter (Meter & gauge)	8A-7-12
How to read connectors	8A-1-1	C-2 Combination meter (Indicator lamp)	8A-7-13
How to read power supply diagram	8A-1-2	C-3 Combination meter (Warning lamp)	8A-7-14
How to read system circuit diagram	8A-1-3	D-1 Headlight	8A-7-15
Symbols and marks	8A-1-4	D-2 Position, tail and licence plate light	8A-7-16
Abbreviations	8A-1-6	D-3 Interior light	8A-7-17
Wire color symbols	8A-1-7	D-4 Turn signal and hazard warning light	8A-7-18
Power supply diagram	8A-6-1	D-5 Brake light	8A-7-19
Main fuse box	8A-6-1	D-6 Back-up light	8A-7-20
Fuse	8A-6-1	E-1 Heater and air conditioner	8A-7-21
Power supply diagram	8A-6-2	F-1 Radio	8A-7-22
System circuit diagram	8A-7-1	F-2 Cigar lighter (For Indonesia Spec)	8A-7-23
A-1 Cranking system	8A-7-1	F-3 Warning buzzer (For Indonesia Spec)	8A-7-24
A-2 Ignition system	8A-7-2	F-4 Power steering (For Indonesia Spec)	8A-7-25
A-3 Charging system	8A-7-3		
A-4 Cooling system	8A-7-4		
B-1 Windshield wiper and washer	8A-7-5		
B-2 Rear wiper and washer (If equipped)	8A-7-6		
B-3 Rear window defogger (If equipped)	8A-7-7		
B-4 Power window (For Vietnam, Indonesia Spec)	8A-7-8		
B-5 Central door lock system (For Vietnam, Indonesia Spec)	8A-7-10		

Precautions

WARNING:

(For the vehicles with the Supplemental Restraint System (Air Bags) and/or the Seat Belt Pretensioner System)

Service on or around the air bag system / Seat belt pretensioner system components or their wiring must be performed only by an authorized SUZUKI dealer. Observe all the warnings in the service manual and disable the systems before servicing on or around the components and the wiring of the systems. The service manual(s) is (are) mentioned in the FOREWORD of this manual. Failure to follow the Warnings could result in unintended activation of the systems or could render the systems inoperative. Either of these two conditions may result in severe injury.

CAUTION:

To prevent damage to the electrical/ electronic parts (especially computers or semi-conductors) or to prevent fire.

- When disconnecting the battery terminals, be sure to (1) turn off the ignition switch and all other switches, (2) disconnect the negative (-) terminal wire and then (3) disconnect the positive (+) terminal wire. Connect the wires in the reverse order of disconnecting.
- When disconnecting the connectors, be sure to unlock the connector lock (if equipped) and then pull the connector shells to detach them. Do not pull the wires.
- Connect the connectors by holding the connector shells. Make sure they are securely locked.
- Install the wiring harness securely without any slack.
- When installing parts, make sure the wiring harness is not interfered with or pinched by them.
- Avoid routing the wiring harness near or around a sharp corner or edge of the vehicle body or parts as much as possible. If necessary, protect the wiring harness by winding tape or the like around on it.
- When replacing a fuse, make sure to use the specified capacity fuse. Using a fuse with a larger capacity can cause damage to the electrical parts or a fire.
- Do not handle electrical/ electronic parts (computer, relay, etc.) roughly or drop them.
- Do not expose electrical/ electronic parts to high temperature (Approximately 80°C(176°F) or higher) or water.
- Be sure to insert the tester probe into the wiring harness side of the connector for inspection.

8A-0

8A-1

8A-6

8A-7

