




Operating, Service and Maintenance Manual

ATF 90G-4

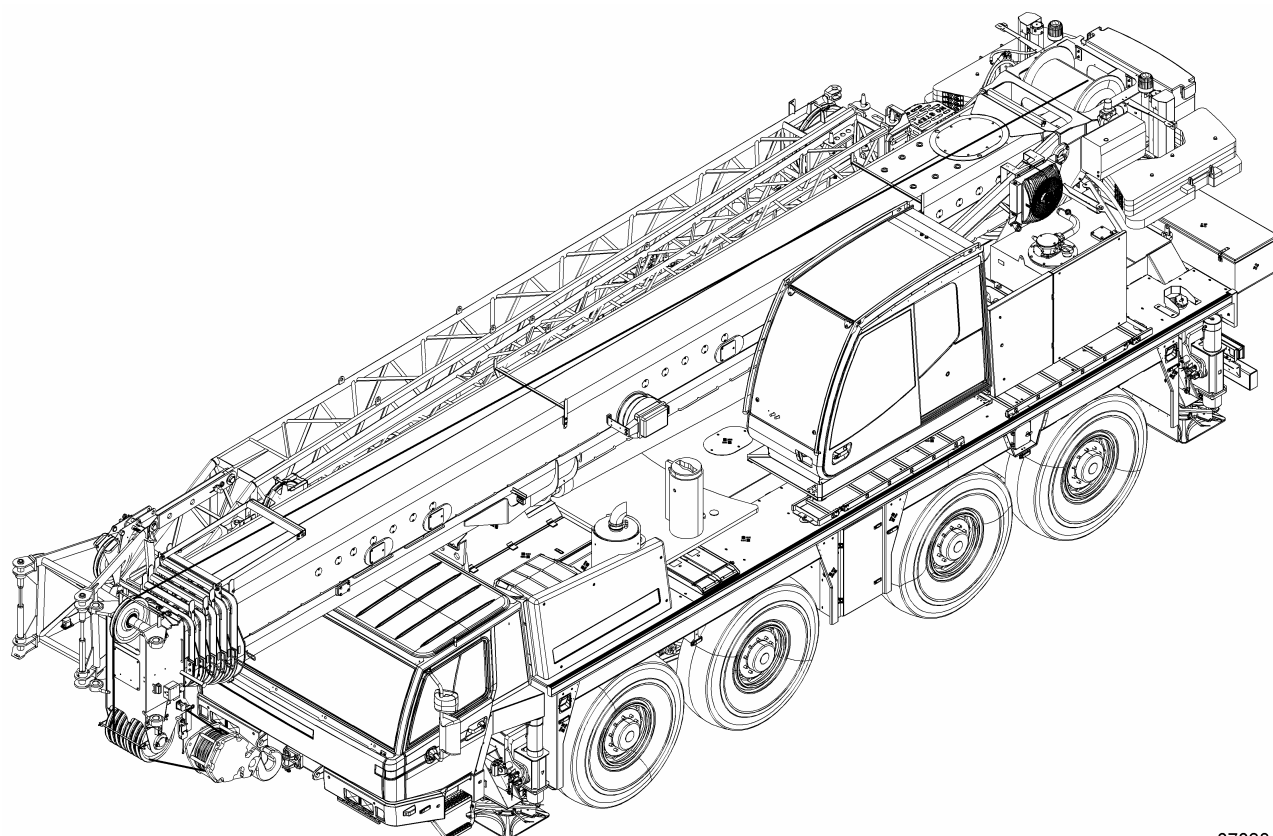

07038

DANGER

Read this manual before operating. Keep this manual in the crane carrier cab for future reference.

Vehicle identification no: WFN4RULT4C2145027

Head Office:

Ko-34,
Sinden-cho,
Takamatsu, Japan

Overseas Service Dept.:

Tadano Ryogoku Bldg.
4-12, Kamezawa 2-chome,
Sumida-ku
Tokio, Japan
Tel. (03) 3621-7765
Tel fax (03) 3621-7785

Diesel engine exhaust and some of its constituents, and certain crane components contain or emit chemicals known to the State of California to cause cancer, birth defects, and other reproductive harm.



Dear Customer,

We have gone to great lengths to provide the conditions for a long service life of your FAUN crane.

High-grade coatings, multi-layer paint systems and high-performance application procedures with a high process reliability characterize the excellent visual appearance of our FAUN cranes. Service and upkeep are indispensable to maintain this finish:

1. Paint takes some time to develop its maximum resistance. Thus, please do not clean your crane with excessively hot water, nor with excessive water pressure during the first 8 weeks. Avoid steam-jet units.
2. When using the crane on construction sites, when loading it with load take-up equipment and wooden planks, damage to the paint is inevitable. Such damage will result in corrosion or rust and must therefore be repaired in an expert fashion without delay.
3. Damage may also be caused by stone impact during travel. This also requires immediate action.
4. The paintwork is also vulnerable to weather conditions and thawing salt. Thus, regular cleaning of the crane and preservation of connectors, welts and screw couplings is necessary.

Customer satisfaction is our aim !



TABLE OF CONTENTS

TABLE OF CONTENTS

P R E F A C E

- 1 How to use this Operating Manual**
- 2 Technical data, operation, maintenance, troubleshooting**
- 3 Handling of this Operating Manual**
- 4 Mounting locations of the vehicle identification number and of the nameplate**
- 5 Disassembly and disposal**

Part A) Technical Details

- 1 General technical details (chassis)**
 - 1.1 Dimensions and weights
 - 1.2 Driving performance data (according to DIN 70020)
- 2 Details of components (chassis)**
 - 2.1 Engine
 - 2.2 Gearbox
 - 2.3 Transfer box
 - 2.4 Axles
 - 2.5 Axle suspension
 - 2.6 Power transmission
 - 2.7 Wheels and tires
 - 2.8 Brake system
 - 2.9 Steering
 - 2.10 Electrical equipment
 - 2.11 Driver's cab
 - 2.12 Heating system
 - 2.13 Frame
 - 2.14 Outriggers
 - 2.15 Fuel system
 - 2.16 Tools, accessories, acceptance inspection
 - 2.17 Painting
 - 2.18 Optional equipment

TABLE OF CONTENTS

cont.:

Part A) Technical Details

3 Technical details of components (superstructure)

- 3.1 Engine
- 3.2 Hydraulic system
- 3.3 Hoisting gear
- 3.4 Telescopic boom
- 3.5 Boom elevation
- 3.6 Swing mechanism
- 3.7 Superstructure frame
- 3.8 Safety equipment
- 3.9 Electrical equipment
- 3.10 Electronic automatic safe load indicator (ASLI)
- 3.11 Superstructure cab
- 3.12 Heating system
- 3.13 Painting
- 3.14 Acceptance inspection
- 3.15 Counterweight
- 3.16 Optional equipment
- 3.17 Noise level when the engine is operating under load and at max. engine speed
- 3.18 Vibration values in the crane cab during crane work
- 3.19 Information about noise reduction

4 Illustration of the vehicle

5 Notes referring to the load (lifting capacity) and supporting forces charts

- 5.1 Explanation regarding a load chart
- 5.2 Supporting forces charts

Part B.0) Safety Instructions

- 1 Requirements and conditions for vehicles used in public road traffic.**
- 1.1 Important instructions regarding the load ratings of tires depending on the maximum traveling speeds and the stress to which the rims are subject
- 2 Instructions for the crane operator**
- 2.1 Applications planning
- 2.2 Steps to be taken before crane operation
- 2.3 Supporting the crane by outriggers
- 2.4 Counterweight
- 2.5 Hoist winch and reeving of the winch rope
- 2.6 Taking account of the wind velocities
- 2.7 Hand signals recommended for communication between the crane operator and his assistant
- 2.8 Work in the vicinity of electrical overhead lines
- 2.9 How to behave in case of sparkover (if the crane has touched the power line)
- 2.10 Grounding the crane and the load
- 2.11 Work in the vicinity of supply lines
- 2.12 Crane work with a load
- 2.13 Notes regarding work with two cranes
- 2.14 Instructions for crane operation
- 2.15 Crane application in accordance with the intended use
- 2.16 Crane application not in accordance with the intended use
- 2.17 Potential causes of accidents
- 2.18 Fire, smoke, inflammation and explosion hazard
- 2.19 Instructions and regulations concerning the compressed air tanks installed in air-operated braking systems
- 2.20 Differences in cylinder stroke
- 3 Instruction Sheet for Overload Safety Devices for Boom Cranes (excerpts)**

TABLE OF CONTENTS

Part B) Operating Instructions

B 1) Chassis

- 1 General instructions concerning operation of the vehicle**
 - 1.1 Warning and instruction plates
 - 1.2 Location of warning and instruction plates
 - 1.3 Components, assemblies - installation location and position
 - 1.4 Transport condition of the vehicle when used in public road traffic
 - 1.5 Wheel chocks
 - 1.6 Refueling with diesel fuel or AdBlue®
- 2 Driver's cab**
 - 2.1 Explanation of the control elements and of the equipment
 - 2.3 Front cover
 - 2.4 Seat adjustment
 - 2.5 Adjustment of the steering wheel
 - 2.6 Actuation of the roller sun visor
 - 2.7 Seat belts
 - 2.8 Cab lighting
 - 2.9 Air distribution; fan; heater unit; air circulation and air conditioning**)
- 4 How to put the machine into operation**
 - 4.1 Steps to be taken and checks to be made before start-up
 - 4.2 Operation of the electrical equipment
 - 4.3 Functional check of the electrical equipment of the vehicle before starting driving operation
 - 4.5 Start the engine
 - 4.6 Indicators working while the engine is running
- 5 Gearshift and driving operation**
 - 5.1 Gearbox
 - 5.2 Transfer box
 - 5.4 Engaging the inter-axle and inter-wheel differential locks / axle drive **)
 - 5.6 Brakes
 - 5.7 Cruise Control
 - 5.9 Steering
 - 5.10 Towing the vehicle

cont.:

Part B) Operating Instructions

B 1) Chassis

6 Stabilizing the vehicle by outriggers

6.1 The vehicle must be lowered and the axle suspension must be locked

6.2 Electrical outrigger actuation

6.3 Outrigger operation from the chassis

6.4 Instructions regarding outrigger operation

6.5 Extending the outrigger beams

6.6 Extending the outrigger cylinders

6.7 Outriggers - retracting the outrigger cylinders / outrigger beams

7 Emergency control functions and elements

7.1 Hydraulic system

7.2 Centering the 3rd and 4th axles

8 Operation in winter

8.1 Engine

8.2 Gearbox

8.3 Warming up the hydraulic oil or changing the oil type in winter

8.4 Batteries

8.5 Adjustable air vents

8.6 Windshield washing system

9 Steps facilitating access to the superstructure

TABLE OF CONTENTS

cont.:

Part B) Operating Instructions

B 1) Chassis

10 Attachments, optional equipment and accessories

- 10.1 Fog lights
- 10.2 Acoustic reversing signal - warning device
- 10.3 City / country horn (Supertone horn)
- 10.4 Electronic immobilizer (FinTronic Car Bloc TTS 24/12)
- 10.5 Air conditioner
- 10.6 WEBASTO - Thermo 90 ST / with engine pre-heating
- 10.7 WEBASTO diesel heater unit
- 10.8 Eddy-current brake
- 10.9 Checking the air accumulator retaining force on upward gradients - vehicles equipped with trailer coupling device
- 10.10 Trailer Coupling Device
- 10.11 Starting the engine in the chassis with current supplied from an external power source
- 10.12 Battery charging plugbox
- 10.13 Switch "Emergency OFF, engine in chassis"
- 10.14 Centralized lubrication system
- 10.15 Reversing light on the outside rearview mirrors
- 10.16 Working floodlight at the rear of the vehicle
- 10.17 Spare wheel

11 Instrument panel

- 11.1 Pilot, indicator and warning lamps
- 11.2 Other components
- 11.3 Instruments
- 11.4 Switches, rocker switches (WS) and rocker tip switches (WT)

Part B) Operating Instructions

B 2) Superstructure

- 1 General instructions concerning operation of the vehicle**
 - 1.1 Warning and instruction plates
 - 1.2 Location of warning and instruction plates
 - 1.3 Components, assemblies - installation location and position
 - 1.4 Refueling with diesel fuel or AdBlue®
- 2 Crane cab**
 - 2.1 Explanation - control elements
 - 2.2 Adjustment of the seat
 - 2.3 Roller sun visor - skylight
 - 2.4 Opening the windscreen
 - 2.5 Opening the rear window
 - 2.6 Cab lighting
 - 2.7 Emergency exit
 - 2.8 Assignment of functions to the crane control levers
 - 2.9 Superstructure locking mechanism
 - 2.10 Access plate adjustment
- 4 How to put the machine into operation**
 - 4.1 Steps to be taken and checks to be made before start-up
 - 4.2 Operation of the electrical equipment
 - 4.3 Functional check of the electrical equipment of the vehicle before starting work
 - 4.4 Blower fan, heating, air regulation
 - 4.5 Starting the engine
 - 4.6 Indicators working while the engine is running
- 5 Gearshift, driving and outrigger operation from the superstructure**
 - 5.1 Changing-over to driving from the superstructure
 - 5.2 Starting the engine in the chassis from the superstructure
 - 5.3 Monitoring the air brake system
 - 5.4 Driving operation from the superstructure
 - 5.5 Driving from the superstructure with complete counterweight
 - 5.6 Outrigger operation from the superstructure

TABLE OF CONTENTS

cont.:

Part B) Operating Instructions

B 2) Superstructure

- 6 Crane movements in no-load condition**
 - 6.1 Instructions regarding actuation of the crane control
 - 6.2 Actuation of the hoisting gear (main hoisting gear)
 - 6.3 Boom elevation
 - 6.4 Telescoping
 - 6.5 Slewing the superstructure
 - 6.6 Counterweights
 - 6.7 Work involving metallic ropes
 - 6.8 Inspection of the safety equipment
- 7 Crane operation with a load fixed to the boom**
 - 7.1 Crane operation with the machine stabilized by outriggers
 - 7.2 Crane operation "free on wheels"
 - 7.3 Driving with a load
 - 7.4 Moving the crane in full rig arrangement on construction sites
- 8 Emergency control functions and elements**
- 9 Operation in winter**
 - 9.1 Engine
 - 9.2 Warming up the hydraulic oil or changing the oil type
 - 9.3 Batteries
 - 9.4 Adjustable air vents
 - 9.5 Windshield washing system

cont.:

Part B) Operating Instructions

B 2) Superstructure

11 Attachments, optional equipment and accessories

- 11.1 Mirror heating on boom
- 11.2 Aircraft warning lamp
- 11.3 Working floodlight on the hoist winch
- 11.4 Working floodlight on boom
- 11.5 Hook height indication, auxiliary hoist winch
- 11.7 Centralized lubrication system
- 11.8 Air conditioning
- 11.9 Switch "Emergency OFF, superstructure engine"
- 11.10 Positioning the double ladder
- 11.11 Mounting the jib (boom extension)
- 11.12 Jib
- 11.13 Starting the engine with current supplied from an external power source
- 11.14 Battery charging plugbox
- 11.15 Hourmeter, hoist winch
- 11.16 Hourmeter, auxiliary hoist winch
- 11.17 1.6 m jib
- 11.18 Single top
- 11.19 Removal of the auxiliary hoist winch, mounting the balancing weight
- 11.20 Emergency control of superstructure / emergency drainage device
- 11.21 Supplementary heater unit Webasto Thermo 90 S with engine pre-heating
- 11.22 Heavy-lift sheave
- 11.23 Winch observation mirror, main winch
- 11.24 Winch observation mirror, auxiliary winch
- 11.25 Warning lamp - crane utilization ratio

12 Instrument panel

- 12.1 Monitoring the superstructure and the chassis, driving and outrigger operation from the superstructure, AML control unit
- 12.2 Operation of the superstructure

TABLE OF CONTENTS

Part C) Service and Maintenance

C1) Chassis

1 General information

- 1.1 Before starting service and maintenance work
- 1.2 Welding and straightening work
- 1.3 Inspection of screw couplings
- 1.4 Checking the hydraulic system and its screw couplings for leakage
- 1.5 Cleaning
- 1.6 After having finished service and maintenance work
- 1.7 Configuration of electronic components

2 Maintenance intervals

- 2.1 Maintenance schedule - chassis

3 Engine

- 3.1 Oil level inspection
- 3.2 Oil change / oil filter replacement
- 3.3 Inspection of hose clamps of the charge air hoses
- 3.4 Fuel tank
- 3.5 Coolant
- 3.6 Cleaning of radiator
- 3.7 Air cleaner
- 3.8 Exhaust system

4 Gearbox

- 4.1 Oil level inspection
- 4.2 Oil change / oil filter replacement
- 4.4 Clutch and clutch actuating assembly

5 Transfer box

- 5.1 Oil level inspection
- 5.2 Oil change
- 5.3 Cleaning the radiator

cont.:

Part C) Service and Maintenance

C1) Chassis

6 Axles

- 6.1 Oil level inspection in the axle drive assemblies of the driven steering axles, and in the planetary gears
- 6.2 Oil change in axle drive assemblies and planetary gears
- 6.4 Greasing the axles
- 6.5 Check for leakage / visual inspection / inspection of the control function
- 6.6 Checking the axial play of the steering axle bearings and the planetary bearings; check the wheel bearing backlash
- 6.7 Checking screws and bolts on axles for tight fit; check axle fastening, drop arms, thrust rod fastening, etc.
- 6.8 Preservation of axle and planetary gearings
- 6.9 Checking the propeller shaft flange screws for tight fit

7 Propeller shafts

- 7.1 Inspection of backlash
- 7.2 Noise test
- 7.3 Checking the flange couplings

8 Eddy-current brake

- 8.1 Service

9 Breather

10 Hydraulic system

- 10.1 Inspection of hydraulic oil level
- 10.2 Replacement of filter cartridges
- 10.3 Oil change
- 10.4 Changing the oil type
- 10.5 Hydraulic system of steering assembly
- 10.6 Hydraulic system of the suspension
- 10.7 Hydraulic system of outriggers

TABLE OF CONTENTS

cont.:

Part C) Service and Maintenance

C 1) Chassis

11 Brake system

- 11.1 Drainage valves in the compressed air tanks
- 11.2 Air drier
- 11.3 Pressure governor with tire inflator socket (integrated in the air drier)
- 11.4 Brake cylinders
- 11.5 Wheel brakes
- 11.7 Check pressure limiting valve
- 11.8 Automatic anti-block system (ABS) - Maintenance
- 11.9 Engine brake
- 11.10 Test connectors for inspection of the compressed air brake system
- 11.11 Test and setting values
- 11.12 Locations of the measuring and test connectors

12 Electrical equipment

- 12.1 Batteries
- 12.2 Three-phase generator
- 12.3 Starter
- 12.4 Lamps and lights
- 12.5 Fuse, relay and diode arrangement
- 12.6 Relay arrangement in the distribution box

13 Wheels and tires

- 13.1 Measures to be taken to avoid accidents caused by the wheels
- 13.2 Checking the wheel nuts on the disc wheel for tight fit
- 13.3 Tightening torque of wheel nuts (with thrust plate)
- 13.4 Tire pressure
- 13.5 Replacement of a disc wheel
- 13.6 Interchanging wheels in view of tire wear

TABLE OF CONTENTS

cont.:

Part C) Service and Maintenance

C 1) Chassis

14 Outriggers

- 14.1 Slide pieces
- 14.2 Check cable drag chain
- 14.3 Checking the outrigger floats

15 Driver's cab

- 15.1 Warm water heating
- 15.1 Wiper-blade elements / washing system
- 15.2 Air conditioner
- 15.4 Supplementary heater unit
- 15.5 Engine pre-heating unit

16 Miscellaneous; other points of lubrication, servicing and maintenance

- 16.1 Other points of lubrication
- 16.2 Replacement of filter in the fuel pipe of the supplementary heater unit**)
- 16.3 Trailer coupling device
- 16.4 Sliding coupling
- 16.5 Steering
- 16.6 Suspension
- 16.7 Centralized lubrication system

24 Summary of oil types and filling capacities

25 Summary of lubricating grease types (recommended grease types)

26 Chart of approved consumables and lubricants