



TEREX®

SHOP MANUAL

Document 57.4400.9204 - Rev. 0 01/2011

Light Capability Rough Terrain Forklift (LRTF)


TX 51-19MD

CONTRACT NO. M67854-10-D-5074



From serial n. **657769**
To serial n. **xxxxxx**

 PCN 500 091352 00

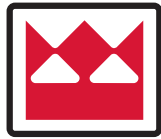

TEREX®

Terex
202 Raleigh Street
Wilmington, NC 28412
Phone: 910-395-8500 Fax: 910-395-8507

 
DEALER'S OR ASSISTANCE STAMP

Shop Manual **57.4400.9204**

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means without prior written permission from TEREX

In pursuing a policy of constant quality improvement, TEREX reserves the right to make changes at any time and without undertaking to give prior notice; therefore, also this publication may be subject to modifications.

© Copyright 2011 **TEREXLIFT srl** - All rights reserved.

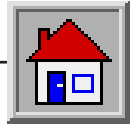

Section 1 - Introduction

1.0	Introduction.....	3
1.1	Symbols.....	4

Section 2 - Safety Rules

2.0	Safety Rules	7
2.1	General	7
2.2	Operators Maintenance Staff Responsibilities	7
2.3	Clothing.....	7
2.4	Personal Equipment	8
2.5	Safety Precautions.....	8
2.6	Getting Ready to Work	8
2.7	During Work or Maintenance	8

Section 3- General Information and Specification

3.0	Machine References.....	13
3.1	Machine Position	13
3.2	Labels and Warning Decals.....	14
3.3	Explanation of the Different Symbols.....	19
3.4	Machine Model and Type	20
3.5	Manufacturer.....	20
3.6	Machine Identification	20
3.7	Chassis Serial Number	21
3.8	Identification Plates.....	21
3.9	Allowed Use.....	21
3.10	Improper Use	21
3.11	Applicable Standards.....	22
3.12	List of Main Components.....	22
3.13	Description of Main Components.....	23
3.14	Optional Accessories	23
3.15	Technical Data and Performance	24

Section 4 - Controls and Instruments

4.0	Preparation, Inspection and Adjustments....	29
4.1	Adjusting the Seat.....	29
4.2	Fastening the Seat Belts.....	30
4.3	Adjusting the Rear View Mirrors	30
4.4	Controls and Operations.....	32
4.5	Controls and Instruments.....	33
4.6	Control Description	34
4.7	Control Lever	43
4.8	Operating the Control Lever	44
4.9	Tilting the Forks Forward and Rearward	45
4.10	Side Shifting the Forks.....	46
4.11	Rotating the Forks	47
4.12	Quick-Coupling the Fork Attachment.....	48

Section 5- Pre-operation Inspection and Adjustment

5.0	Pre-operation Inspection and Adjustment.....	51
5.1	Pre-operation Inspection and Check List.....	51
5.2	Starting the Engine	51
5.3	Jump-Starting the Engine	52
5.4	Battery Disconnect Switch	52
5.5	Stopping / Parking Machine.....	53
5.6	Refueling the Machine	53

Section 6 - Lubrication

6.0	Lubrication	57
6.1	Lubricant Specification	57
6.2	Lubricant Chart	58
6.3	Lube and Fluid Capacity Chart	59

Section 7 - Preventive Maintenance

7.0	Preventive Maintenance	63
7.1	Using the Suggested Schedule Check Sheet	63
7.2	50 Hours or Weekly Services	65
7.3	250 Hours or Monthly Services.....	66
7.4	500 Hours or Quarterly Services	67
7.5	1000 Hours or Semi-Annually Services.....	68
7.6	3000 Hours or Three Years Services	69

Section 8 - 50 Hours or Weekly Maintenance

8.0	50 Hours Or Weekly Maintenance	73
8.1	Check Engine Oil	73
8.2	Drain Engine Fuel Filter	73
8.3	Check Hydraulic Reservoir Oil	74
8.4	Check Brake Oil Reservoir Level	74
8.5	Lube Boom Pads	74
8.6	Lube Drive Shaft	75
8.7	Lube Axle King Pins.....	75
8.8	Lube Axle Rear Pivot Pin	75
8.9	Lube Cylinders.....	75
8.10	Lube Fork Attachments.....	76
8.11	Lube Boom Pivot	76
8.12	Check Tire Inflation	76
8.13	Check Tire Wheel Nuts	76
8.14	Check Drive Shaft Bolts.....	77

Section 9 - 250 Hours or Monthly Maintenance

9.0	250 Hours Or Monthly Maintenance	81
9.1	Engine and Hydraulic Oil Sampling	81
9.2	Check Engine Air Filter	81
9.3	Check Engine Drive Belts	82
9.4	Check Axle Wheel Ends Oil.....	82
9.5	Check Axle Differential Oil.....	83
9.6	Check Battery	83



Section 10 - 500 Hours or Quarterly Maintenance

10.0	500 Hours or Quarterly Maintenance Checks	87
10.1	Change Engine Oil	87
10.2	Change Engine Oil Filter	88
10.3	Change Engine Air Filter (external cartridge)	89
10.4	Change Engine Fuel Filter	90
10.5	Check Engine Glow Plugs	91
10.6	Change Hydraulic Reservoir Filter	91

Section 11 - 1000 Hours or Semi-Annually Maintenance

11.0	1000 Hours or Semi-Annually Maintenance	95
11.1	Check Engine Valve Tip Clearance	95
11.2	Check Electrical Alternator	95
11.3	Check Electrical Starter	95
11.4	Check Electrical System	96
11.5	Check Hydraulic Hoses and Fitting	96
11.6	Change Hydraulic Reservoir Oil Filter, Cleaning Hydraulic Magnet	96
11.7	Change Axle Wheel End Oil	97
11.8	Change Axle Differential Oil	97
11.9	Check Accumulator Pre-charge Pressure	98
11.10	Change Engine Air Filter (internal cartridge)	98

Section 12 - 3000 Hours or Three Years Maintenance

12.0	3000 Hours or Three Years	101
12.1	Check Atomisers (Fuel Injector)	101

Section 13 - Routine Maintenance

13.0	Routine Maintenance	105
13.1	Replacing the Attachments	105
13.2	Slider Pads Adjustment	106
13.3	Changing Slider Pads	106
13.4	Attachment Plate Removal / Installation	108
13.5	Parking Brake Adjustment	109
13.6	Bleeding Brake System	111
13.7	Proximity Switch Adjustment	111
13.8	Drive Shaft	111
13.9	Fuel Tank	113
13.10	Oil Tank	114
13.11	Radiator	115

Section 14 - Hydraulic Boom

14.0	Boom Introduction	121
14.1	Boom Removal / Installation	121
14.2	Tilt Cylinder Replacement	124
14.3	Boom Disassembly	125
14.4	Boom Assembly	126
14.5	Compensation Cylinder Removal / Installation	127
14.6	Locking Cylinder Removal / Installation	128
14.7	Boom Hoist Cylinder - Removal / Installation	130
14.8	Extend Cylinder Removal / Installation	133

Section 15 - Carraro Axles

15.0	Front Axle - Removal / Installation	137
15.1	Rear Axle - Removal / Installation	141
15.2	Carraro Axles - Repair manual	143

Section 16 - Troubleshooting Guide

16.0	Troubleshooting Guide	275
16.1	General Troubleshooting	275
16.2	Hydraulic Troubleshooting	276
16.3	Electrical Troubleshooting	281

Section 17 - Hydraulic System


17.0	Hydraulic System	297
17.1	Hyd. Drive Pump - Removal / Installation	297
17.2	Cylinder Holding Valve - Removal / Installation	298
17.3	Hydraulic Motor - Removal / Installation	298
17.4	Rexroth Pump (A4vG) - Repair instructions	299
17.5	Rexroth Motor (A6Vm107) - Repair instructions	341
17.6	Rexroth Operating Instructions	381

Section 18 - Engine

18.0	Operating Manual	399
------	------------------	-----

Section 19 - Tables and Enclosures

19.0	Torque Wrench Settings	453
19.1	Pressure Setting	455
19.2	Special Tool List	457

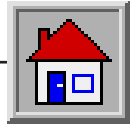 

Section 20 - 3B6 Technologies LMI System

20.0 3B6 Load Moment Indicator Manual 465

20.1 System lay-out and connections..... 466

20.2 Components location on the machine 467

20.3 Infolift main unit: Characteristics..... 468

20.4 Infolift main unit: Dimensions 469

20.5 Load cell amplifier: Dimensions,
characteristics, cable 470

20.6 Control panel description 471

20.7 Display information: Working messages..... 472

- Power-on sequence
- Safe working condition
- Warning condition
- Shut-off condition
- Setting mode
- Shut-off over ride

20.8 Display information: Diagnostics messages .. 475

- A01 crc error
- A02 cellalarm
- A03 cellalarm

20.9 Standard operating mode 476

- Normal / safe working load
- Pre-warning working load
- Overload working load
- By-pass pushbutton

20.10 Accuracy verification..... 480

- Pushbuttons functions
- Procedure

20.11 Accuracy verification mode..... 482

- First time accuracy verification
- Re-accuracy verification
- Load cell reading
- Empty accuracy verification
- Laden accuracy verification
- Cut-off percentage
- Empty moment
- Laden moment
- Filter

20.12 How to set a numeric value 485

20.13 How to set the password 486

20.14 External wiring 487


20.15 Spare parts list 488

20.16 Warnings 488



TEREX[®]

 TX 51-19MD
Light Capability Rough Terrain Forklift (LRTF)

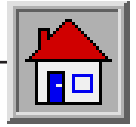


THIS PAGE
INTENTIONALLY
BLANK



TEREX[®]

 TX 51-19MD
Light Capability Rough Terrain Forklift (LRTF)

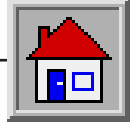


SECTION 1 INTRODUCTION




TEREX[®]

 TX 51-19MD
Light Capability Rough Terrain Forklift (LRTF)

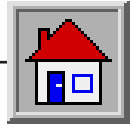

THIS PAGE
INTENTIONALLY
BLANK

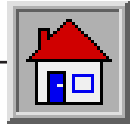 

1.0 INTRODUCTION

Owners, Users, and Operators:

 
Terex appreciates your choice of our machine for your application. Our number one priority is user safety, which is best achieved by our joint efforts. We feel that you make a major contribution to safety if you as the equipment users and operators:

1. **Comply** with OSHA, Federal, State, and Local Regulations.
2. **Read, Understand, and Follow** the instructions in this and other manuals supplied with this machine.
3. **Use Good, Safe Work Practices** in a common sense way.
4. **Only have trained operators** – directed by informed and knowledgeable supervision – running the machine.

NOTE: OSHA prohibits the alteration or modification of this machine without written manufacturers approval. Use only factory approved parts to service or repair this unit.

If there is anything in this manual that is not clear or which you believe should be added, please send your comments to Manager of Publication, Terex, 202 Raleigh Street, Wilmington, North Carolina 28412; or contact us by telephone at (910) 395-8500.

Thank you!

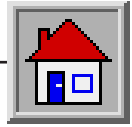

1.1 SYMBOLS

When using the machine, operators could face some situations requiring special care and particular knowledge.

When these situations involve the safety of operators or bystanders, the machine efficiency and proper utilization, this manual stresses these specific instructions by means of SPECIAL SYMBOLS. There are special (or safety) symbols in this manual, always combined with keywords, which class the situations according to their danger degree. The symbols are always followed by a text explaining the situation taken into account, the attention that must be paid to such situation, the method and the behavior, which should be adopted. When necessary, it stresses prohibitions or supplies instructions to prevent dangers. Sometimes, it can be followed by illustrations.

Listed below are special (or safety) symbols according to the relative seriousness of the hazard situation:



DANGER – Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.




WARNING – Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION – Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.




ATTENTION – Indicates a situation which, if not avoided, may result in property or equipment damage.

	<p>THIS SYMBOL MEANS YOUR SAFETY IS INVOLVED! READ, UNDERSTAND, AND FOLLOW ALL DANGER, WARNING, AND CAUTION DECALS ON YOUR MACHINE.</p>
---	---



TEREX[®]

 TX 51-19MD
Light Capability Rough Terrain Forklift (LRTF)

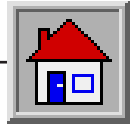


SECTION 2

SAFETY RULES




TEREX[®]

 TX 51-19MD
Light Capability Rough Terrain Forklift (LRTF)

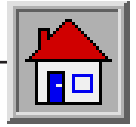

THIS PAGE
INTENTIONALLY
BLANK

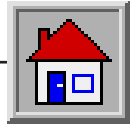 

2.0 SAFETY RULES

2.1 GENERAL

Most accidents, which occur while working, repairing or maintaining machines, are caused by not complying with the basic safety precautions. Therefore, it is necessary to pay attention to the potential hazards and the effects, which may come of operations carried out on the machine.

If you recognize hazardous situations, you can prevent accidents!

For instance, this handbook list special safety symbols to stress any potentially hazardous situation.

The instructions given in this manual are the ones established by Terex. They do not exclude other safe and most convenient ways for the machine installation, operation and maintenance which take into account the available spaces and means.

If in doubt, it is always better to ask! For this purpose, contact Terex the assistance service is at you disposal. Addresses, phone and fax numbers are given in the title page of this manual.

ATTENTION

Machine must be used, operated and maintain in compliance with ASME B56.6 Standards.

2.2 OPERATORS MAINTENANCE STAFF RESPONSIBILITIES

The operators who use the machine regularly or occasionally (i.e. for transport reasons) shall have the following responsibilities:

- Make sure the machine is in proper order and all warning signals are functional before operating.
- Before and during any operation, operators shall never consume alcoholic beverages, medicines or other substances, which may alter their psychophysical conditions and, consequently, their working abilities.
- Never lift a load without a Rating Chart in the cab.

 
- Good eyesight, acute hearing, good coordination and ability to carry out all required operations in a safe way, according to the instructions of this manual.
- Ability to understand and apply the enforced rules, regulations and safety precautions. They shall be careful and sensible for their own as well as other's safety and shall desire to carry out the work correctly and in a responsible way.
- They shall keep calm and always be able to evaluate their own physical and mental conditions.
- Read and understand the operators' manual, its enclosed graphs and diagrams, the identification and hazard warning decals. The operator should be skilled and trained about the machine use.
- The operator might be required to have a license (or a driving license) when provided for by the laws enforced in the country where the machine works.

WARNING

From a technical point of view, the ordinary maintenance of the machine is not complex. And can be carried out by the machine operator provided that he has a basic knowledge of mechanics.

2.3 CLOTHING

Your clothing should be relatively close fitting. Loose jackets, shirt sleeves, rings, and other jewelry should be avoided because of the danger of catching them in moving parts or on controls.

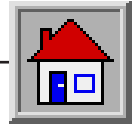

2.4 PERSONAL EQUIPMENT



Use only approved personal protective equipment in good condition.

Always wear required protective items such as hard hats, safety glasses, reflective clothing, safety shoes, and ear protection as required.

2.5 SAFETY PRECAUTIONS

JOB SITE

Always take into account the features of the job site where you are going in work:

- Always examine the working area and compare it with the machine dimensions in the different configurations.



Pay the greatest attention to overhead electric lines. Always keep at a minimum a safe distance of at least 20 feet from the telescopic boom and the lifted load. Electrical Hazards!

- When assembling the machine or part of it on site, you need a well-equipped area of suitable dimensions. The surface shall be even, compact and stable.
- Look for the best route to the job site.
- When the machine is running, nobody can enter its working range.
- While working, keep the working area in order. Never leave objects scattered: They could hinder the machine movements and represent a danger for personnel.

2.6 GETTING READY TO WORK

 
Before any operation, the following precautions should be taken:

- First of all, make sure that all maintenance has been carried out with care according to the established schedule.
- Ensure you have enough fuel to avoid a sudden stop of the engine, especially during a crucial maneuver.
- Clean instruments, data plates, lights and the cab windshield thoroughly.
- Check the correct functioning of all the safety devices installed on the machine and in the job site.
- In case of troubles or difficulties, inform the supervisor at once. Never start working under unsafe conditions.

2.7 DURING WORK OR MAINTENANCE

During work, and especially maintenance, always pay attention:

- Do not pass or stop under raised loads or machine parts supported by hydraulic cylinders or ropes only.
- Keep the machine handholds and access steps always clean from oil, grease or dirt to prevent falls or slips.
- When entering/leaving the cab or other raised parts, always face the machine.
- Do not get into or off the machine while it is running.
- Do not leave the operators seat when the machine is running.
- Neither stop nor carry out repairs under or between the machine wheels when engine is running. When maintenance in this area is required, stop the engine.
- Do not carry out maintenance or repair works without a sufficient lighting.
- When using the machine lights, the beam should be oriented in order not to Blind the personnel at work.
- Before applying voltage to electric cables or components, check their connection and proper functioning.
- Do not carry out repairs on electric components with voltage over 48V.
- Do not connect wet plugs or sockets.
- Plates and hazard warning stickers shall never be removed, hidden or become unreadable.

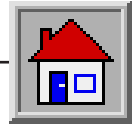

- Except for maintenance purposes, do not remove safety devices, shields, protection cases, etc. Should their removal be necessary, stop the engine, remove them with the greatest care and always remember to refit them before starting the engine and using the machine again.
- Before any maintenance or repair work, stop the engine and disconnect the batteries.
- Do not lubricate, clean or adjust moving parts.
- Do not carry out operations manually when specific tools are provided for this purpose.
- Absolutely avoid the use of tools in bad conditions or in an improper way i.e. pliers instead of adjustable wrenches, etc.
- Before carrying out operations on hydraulic lines under pressure or disconnecting hydraulic components, ensure the relevant line has been previously depressurized and does not contain any hot fluid.




Any repairs made on the hydraulic circuit must be carried out by authorized personnel. The hydraulic circuit of this machine is fitted with pressure accumulators. You and others could be seriously injured if accumulators are not completely depressurized. For this purpose, shut the engine down and step on the brake pedal 8-10 times. Operate the steering wheel and joystick several times until the wheels stop turning with the machine engine off.

- Neither smoke or open flames in areas subject to fire dangers and in presence of fuel, oil or batteries.
- Do not leave fuel cans or bottles in unsuitable places.
- Do not empty catalytic mufflers or tanks containing burning substances without taking the necessary measures.
- Carefully handle all flammable or dangerous substances.
- Do not tamper with fire-extinguishers or pressure accumulators: explosion hazard!
- After any maintenance or repair work, make sure that no tool, cloth or other object has been left within machine compartments, fitted with moving parts, or where suction and cooling air circulates.
- When working, do not have more than one person giving instructions to the operator. Instructions and signals must be given by one person only.
- Always follow the instructions given by the supervisor.
- Never distract the operator during working phases of a crucial maneuver.
- After working, never leave the machine under potentially dangerous conditions.
- **The relief valves are factory preset. Adjusting the relief valve in the field will void machine warranty. Valves must be set only by trained personnel.**



TEREX[®]

 TX 51-19MD
Light Capability Rough Terrain Forklift (LRTF)

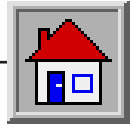


THIS PAGE
INTENTIONALLY
BLANK



TEREX[®]

 TX 51-19MD
Light Capability Rough Terrain Forklift (LRTF)

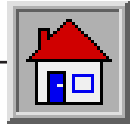


SECTION 3 GENERAL INFORMATION AND SPECIFICATIONS




TEREX[®]

 TX 51-19MD
Light Capability Rough Terrain Forklift (LRTF)

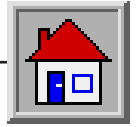


THIS PAGE
INTENTIONALLY
BLANK

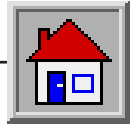 


3.0 MACHINE REFERENCES

3.1 MACHINE POSITION

  Any reference to the machine position will always be as if the operators is seating in the operator's seat, unless other wise specified.

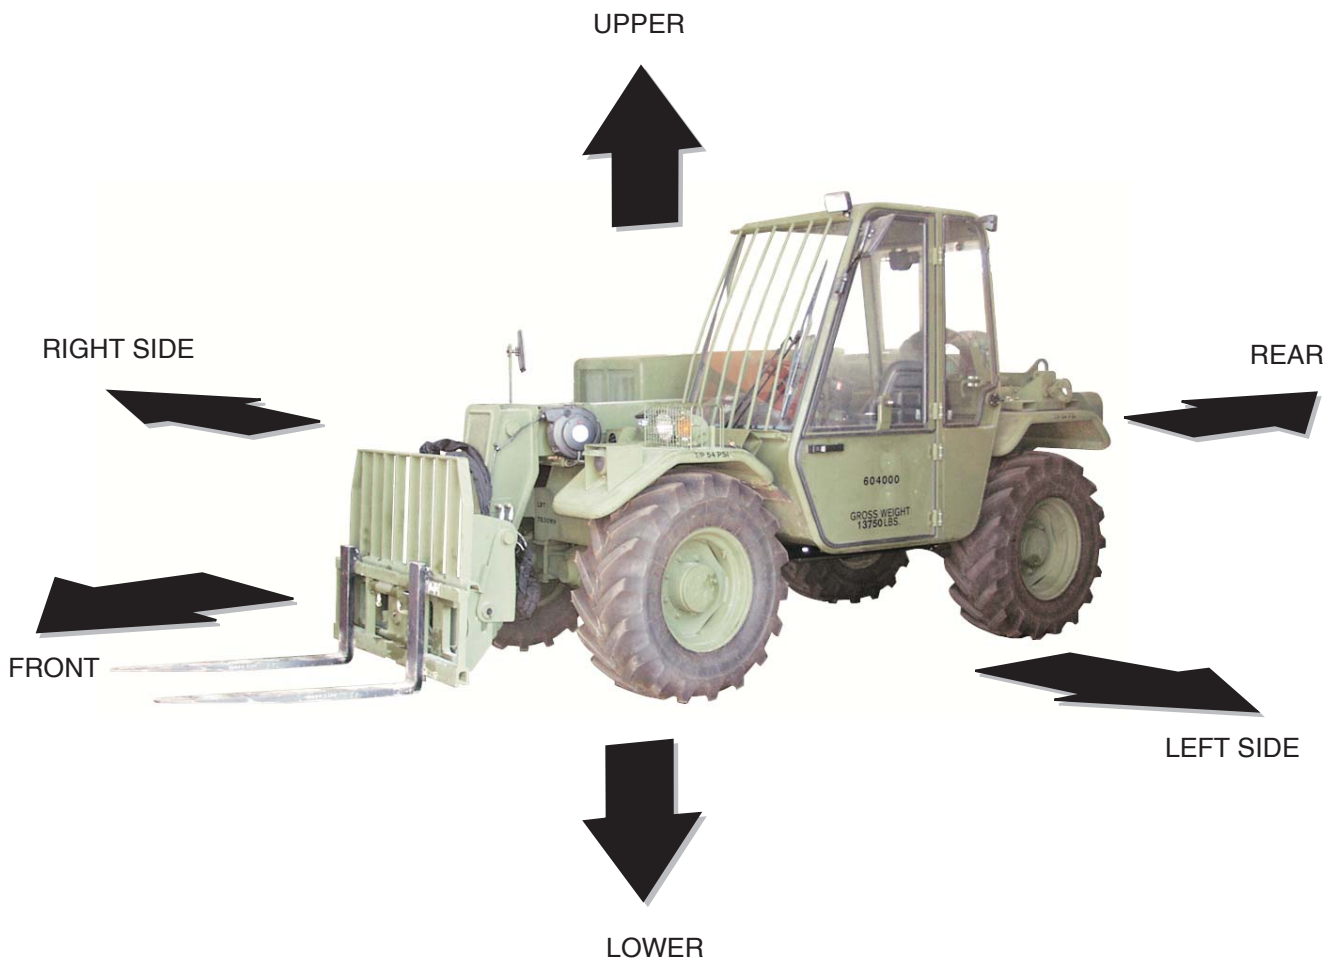

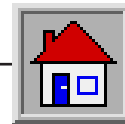

3.2 LABELS AND WARNING DECALS

The labels and warning decals normally applied on standard machines or which can be found when special attachments are coupled to the machine are shown below.



Read and understand all decals on this machine. Make sure they are easy to read. For this purpose, clean them or replace those that become unreadable (either graphic or text). To clean labels, use a soft cloth, water and soap. Never use solvents, petrol, etc. When a label is applied on a part being replaced, make sure that the replaced part is already labeled as required or apply a new label.

WARNING

Your safety and the safety of those around you depends on your using care and judgement in the operation of this equipment. Know the positions and functions of all controls before attempting to operate. All equipment has limitations. Understand the speed, braking, steering and load characteristics of the machine before starting to operate. Read the Operator's Manual and ask questions of your supervisor until you know the limitation.

Do not operate TEREXLIFT TELEHANDLER while people and property are within a 50 foot (15.24 M) minimum radius. Falling objects from the forks or attachment can cause serious injury or property damage. The 50 foot (15.24 M) minimum radius should be used as a guideline and should be enlarged if warranted by working conditions.

Always remain completely within canopy enclosure while operating machine. Falling debris can cause serious personal injury.

Never extend a load beyond the load chart band. Machine turn over, component damage, injury or death could occur.

Absolutely no riders on machine or attachment.

Never lower a maximum load before retracting it. Machine turn over, component damage, injury or death could occur.

Always wear the seat belt when operating the machine.

Always inspect the machine daily. Check for missing guards and screens, loose bolts or anything out of the ordinary. Repair and/or replace immediately. Failure to do so can cause injury or death.

Do not travel on terrain or in dangerous areas that may cause the machine to tip over.

Carry a load so that you have maximum machine stability.

Always level the machine as indicated on the gauge before raising the boom. Raising the boom with an unlevel machine may cause the machine to overturn causing injury or death.

TEREXLIFT

WILMINGTON, N.C. 28412

3232Z936 B