


Terex S17e Operation Safety Maintenance

Full download: <http://manualplace.com/download/terex-s17e-operation-safety-maintenance/>

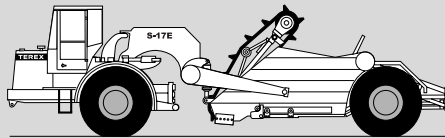

S17E

Operation - Safety - Maintenance

This is the cut pages sample. Download all 134 page(s) at: ManualPlace.com

WHEN RE-ORDERING THIS HANDBOOK,
SPECIFY - **PART NUMBER 15273732**

TECHNICAL PUBLICATIONS DEPARTMENT
TEREX EQUIPMENT LIMITED
MOTHERWELL, SCOTLAND ML1 5RY
Ref No. OHE 803 Jan 2001

**ONLY TRAINED PERSONNEL SHOULD BE
ALLOWED TO OPERATE THIS VEHICLE**

The operator is responsible and must be familiar with the contents of the Operator's Handbook and any local regulations prior to operating this vehicle.



CALIFORNIA
Proposition 65 Warnings

WARNING: Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

WARNING: Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm.
Wash hands after handling.

SPARE PARTS STATEMENT

When carrying out repairs, alterations or fitting attachments, it is important that only genuine spare parts are used to ensure the operating safety of the machine is not impaired.

It is only by using genuine parts that the technical requirements stipulated by the manufacturer can be maintained.

If a General Operating Approval is issued for this machine, it may be considered null and void if non-genuine parts are used.

CONTENTS

1. INTRODUCTION

Introduction	1-2
Safety Precautions	1-2
Machine Identification	1-3
Theft Deterrent Practices	1-4

2. SAFETY PRECAUTIONS

General	2-2
Preventing Fire Hazards	2-3
Mounting and Dismounting	2-5
Pre-Starting	2-6
Starting	2-6
Operating	2-7
Roading	2-8
Lubrication and Servicing	2-10
Wheels and Tyres	2-11
Avoid Tyre Explosion Hazard	2-12

3. CONTROLS AND OPERATING

Controls and Instruments	3-3
Basic Data	3-4
Indicator/Warning Lights	3-4
Instruments	3-5
Switches	3-6
Controls	3-9
Heater	3-10
Air Conditioner	3-10
Operator's Seat - Air Suspension	3-11
Seat Belt	3-12
Machine Controls	3-13
Braking	3-13
Service Brake	3-13
Park/Emergency Brake	3-13

3. CONTROLS AND OPERATING (cont)

Engine	3-14
Electronic Foot Pedal	3-14
HEUI Electronic Management System	3-14
Description	3-16
Operation	3-17
Steering	3-30
Transmission	3-31
System Components	3-33
General Transmission Operation	3-35
Power-Locking Differential	3-36
Hydraulic System Controls	3-37

4. OPERATING THE SCRAPER

Pre-Starting Inspection	4-2
Component Checks - Tractor	4-3
Component Checks - Scraper	4-5
Engine Operation	4-6
Starting the Engine	4-7
Starting the Engine at Low Ambient Temperatures	4-9
Starting the Engine with Jumper Cables	4-10
Pre-Operating Checks	4-10
Brake Function Checks	4-10
Driving and Stopping	4-13
Stopping the Engine	4-15
Parking	4-16

5. WORKING THE SCRAPER

Standard Functions	5-2
Loading	5-3
Loading Tips	5-5
Transporting the load	5-6
Spreading the load	5-6
Elevator Adjustments	5-8

5. WORKING THE SCRAPER (cont)

Elevator Mode Adjustment	5-9
Elevator Height Adjustment	5-9
Idler Roller Adjustment	5-10
Types Of Cuts	5-11
Cutting Through Hills	5-11
Cutting Banks	5-11
Stripping Topsoil	5-11
Starting A Ditch	5-12
Types Of Fills	5-12
Finishing And Grading	5-13

6. ROADING

Roading	6-2
General	6-2
Preparation Prior to Roading	6-2
In Case Of Trouble	6-4

7. MOVING DISABLED SCRAPER

Moving Disabled Scraper	7-2
-------------------------------	-----

8. LUBRICATION AND SERVICING

Safety Precautions	8-2
Lubrication and Servicing	8-3
Tractor Lubrication and Service Chart	8-5
Remote Lubrication Points	8-7
Scraper Lubrication and Service Chart	8-9
Remote Lubrication Points	8-10
Tractor and Scraper Additional Miscellaneous Servicing Information	8-12
Recommended Lubricants	8-15

9. TECHNICAL DATA

10. SYMBOL IDENTIFICATION

INTRODUCTION

This Handbook is provided as a guide to familiarize the operator and serviceman with the controls, recommended inspections, start-up, operating, shutdown and parking procedures for S17E Scrapers.



Look for this symbol to point out important safety precautions. It means: ATTENTION! BECOME ALERT! YOUR SAFETY AND THE SAFETY OF OTHERS IS INVOLVED!

Safety Precautions

The machine should be properly operated and maintained to keep it in safe, efficient operating condition. Be sure that all controls are free of mud, grease, or other matter that might cause slips hazardous to the operator, serviceman, or other personnel or equipment. Report all malfunctions to those responsible for maintenance, and, do not operate the equipment until corrected. Normal service or maintenance performed as required can prevent unexpected and unnecessary downtime.

This Handbook describes general inspections, servicing and operation with the normal safety precautions required for normal servicing and operating conditions. It is not a guide however, for other than normal conditions or situations, and therefore, servicemen and operators must be safety conscious and alert to recognize potential servicing or operating safety hazards at all times, and take, necessary precautions to assure safe servicing and operation of the machine.

READ the CIMA Safety Manual supplied with this machine.

All information, illustrations and specifications contained in this publication are based on the latest product information available at the time of publication. The right is reserved to make changes at any time without notice. Continuing improvement and advancement of the design may cause changes to your machine which may not be included in this publication. Each publication is reviewed and revised, as required, to update and include these changes in later editions.

This Handbook contains lubrication and routine servicing instructions, most of which can be performed in the field. Maintenance manuals containing repair/rebuild procedures can be obtained from your dealer.

Machine Identification

While reading this handbook you will notice references to controls and equipment which may not be found on all machines. It is important that you know your machine and its equipment and how to operate it properly.

Information regarding the machine model, code and chassis serial number is found on the unit serial number plates on the front left hand side of the tractor and rear right hand side of the scraper. The machine model and serial number should always be referenced in any correspondence with your dealer or factory.

There is a dealer serving every part of the world where these products are sold. Your dealer is ready to provide you with any additional information needed and should be consulted for additional publications for this machine.

Terex S17e Operation Safety Maintenance

Full download: <http://manualplace.com/download/terex-s17e-operation-safety-maintenance/>

Theft Deterrent Practices

General

The owner/operator should take the following precautions to discourage theft, to aid in the recovery in the event that the machine is stolen, or to reduce vandalism.

Actions to Discourage Theft and Vandalism

Remove all keys any time the machine is left unattended.

At night lock all doors and attach, secure or lock all anti-vandalism and anti-theft devices on the machine.

Immobilize the machine by removing a critical electrical or starting system device.

Upon receipt of a machine, record the machine serial number and the serial numbers of all major components and attachments. Keep this list up to date and filed in a safe location for fast retrieval.

Place a decal or notice on the machine that all serial numbers are recorded.

Discourage the thief! Inspect the gates and fences of the machinery storage yard or