Terex Ta25 27 Operation Safety Maintenance

Full download: http://manualplace.com/download/terex-ta25-27-operation-safety-maintenance/







Operation - Safety - Maintenance

This is the cut pages sample. Download all 132 page(s) at: ManualPlace.com

WHEN RE-ORDERING THIS HANDBOOK, SPECIFY - **PART NUMBER 15274234**

TECHNICAL PUBLICATIONS DEPARTMENT TEREX EQUIPMENT LIMITED MOTHERWELL, SCOTLAND ML1 5RY Ref No. OHE 805 July 2000

ONLY TRAINED PERSONNEL SHOULD BE ALLOWED TO OPERATE THIS VEHICLE

The operator is responsible and must be familiar with the contents of the Operator's Handbook and any local regulations prior to operating this vehicle.

CALIFORNIA Proposition 65 Warnings

WARNING: Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

WARNING: Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. Wash hands after handling.

SPARE PARTS STATEMENT

When carrying out repairs, alterations or fitting attachments, it is important that only genuine spare parts are used to ensure the operating safety of the machine is not impaired.

It is only by using genuine parts that the technical requirements stipulated by the manufacturer can be maintained.

If a General Operating Approval is issued for this machine, it may be considered null and void if non-genuine parts are used.

CE

EC DECLARATION OF CONFORMITY

MANUFACTURERS NAME AND FULL ADDRESS					
TEREX EQUIPMENT LI MOTHERWELL, SCOTLAND, ML1 5RY	MITED,				
DESCRIPTION OF M	ACHINERY		DIRECTIVE	S COMPLIED	WITH
MAKE:	TEREX		87/404/EEC		
MODEL:	TA25 ARTICULATED TRUCK		89/336/EEC		
	TA27 ARTICULATED TRUCK		98/37/EEC		
UNIT SERIAL NO.			DATE OF MAI	NUFACTURE:	
INSPECTOR:					
THE ABOVE MACHINERY, TAKING INTO ACCOUNT THE STATE OF THE ART, COMPLIES WITH, OR IS DESIGNED AND CONSTRUCTED AS FAR AS POSSIBLE TO COMPLY WITH, THE ESSENTIAL HEALTH AND SAFETY REQUIREMENTS OF THE MACHINERY DIRECTIVE.					
FOR AND ON BEHALF OF THE MANUFACTURER:					
NAME:	TOM McILWAIN	SIGNA	FURE:		141. 00.
POSITION:	CHIEF ENGINEER			Jon M	Lamour

SPARE PARTS STATEMENT

When carrying out repairs, alterations or fitting attachments, it is important that only genuine spare parts are used to ensure the operating safety of the machine is not impaired.

It is only by using genuine parts that the technical requirements stipulated by the manufacturer can be maintained.

If a General Operating Approval is issued for this machine, it may be considered null and void if non-genuine parts are used.

CONTENTS

1. INTRODUCTION

I	ntroduction	1-2
;	Safety Precautions	1-2
	Machine Identification	
•	Theft Deterrent Practices	1-5

2. SAFETY PRECAUTIONS

General	2-2
Articulation and Oscillation Locks	2-3
Vehicle Lifting Precautions	2-4
Vehicle Tie Down Precautions	2-4
Preventing Fire Hazards	2-5
Mounting and Dismounting	
Pre-Starting	
Starting	
Operating	
Roading	
Lubrication and Servicing	
Wheels and Tyres	
Avoid Tyre Explosion Hazard	
Decals and Instruction Plates	

3. CONTROLS AND OPERATING

Controls and Instruments	3-3
Basic Data	3-4
Warning Lights	3-4
Instruments	3-6
Switches	3-8
Controls 3	-10

3. CONTROLS AND OPERATING (Cont)

Heating and Ventilation Operator's Seat -	3-11
Air Suspension (Grammer)	3-12
Operator's Seat -	
Operation (Grammer)	3-13
Seat Belt	3-14
Machine Controls	3-15
Braking	3-15
Exhaust Brake	3-16
Engine	3-18
Accelerator	
Steering	3-19
EST-37 Automatic Shift	
Transmission	3-20
Differential Lock	3-29
Body Control	3-30
-	

4. OPERATING THE TRUCK

Pre-Starting Inspection	. 4-2
Component Checks	. 4-3
Engine Operation	. 4-5
Starting the Engine	. 4-6
Starting the Engine	
with Jumper Cables	. 4-9
Pre-Operating Checks	
Brake Function Checks	4-10
Driving and Stopping	4-12
Stopping the Engine	4-14
Parking	4-15

5. WORKING THE TRUCK

Working the Truck 5-2	2
Loading 5-2	2
Hauling 5-5	5
Dumping 5-6	
Empty Return 5-8	3

6. ROADING

Roading 6-2	
General 6-2	
Preparation Prior to Roading 6-2	
In Case Of Trouble 6-4	

7. MOVING DISABLED TRUCK

Moving Disabled	Truck	. 7-2
-----------------	-------	-------

8. LUBRICATION AND SERVICING

Safety Precautions	8-2
Lubrication and Servicing	8-3
Lubrication and Service Chart	8-5
Miscellaneous Servicing Information	8-8
Service Capacities	3-13
Recommended Lubricants 8	3-14

9. TECHNICAL DATA

TA25	 9-2
TA27	 9-8

10. SYMBOL IDENTIFICATION

Terex Ta25 27 Operation Safety Maintenance

Full download: http://manualplace.com/download/terex-ta25-27-operation-safety-maintenance/ INTRODUCTION

This Handbook is provided as a guide to familiarize the operator and serviceman with the controls, recommended inspections, start-up, operating, shutdown and parking procedures for TA25 and TA27 Articulated Trucks.

Look for this symbol to point out important safety precautions. It means: ATTENTION! BECOME ALERT! YOUR SAFETY AND THE SAFETY OF OTHERS IS INVOLVED!

Safety Precautions

The machine should be properly operated and maintained to keep it in safe, efficient operating condition. Be sure that all controls are free of mud, grease, or other matter that might cause slips hazardous to the operator, serviceman, or other personnel or equipment. Report all malfunctions to those responsible for maintenance, and, do not operate the equipment until corrected. Normal service or maintenance performed as required can prevent unexpected and unnecessary downtime.

This Handbook describes general inspections, servicing and operation with the normal safety precautions required for normal servicing and operating conditions. It is not a guide however, for other than normal conditions or situations, and therefore, servicemen and operators must be safety conscious and alert to recognize potential servicing or operating safety hazards at all times, and take, necessary precautions to assure safe servicing and operation of the machine.

READ the CIMA Safety Manual supplied with this machine.

1-2

This is the cut pages sample. Download all 132 page(s) at: ManualPlace.com