

WIRING DIAGRAMS - EXCEPT FX

Article Text

1988 Toyota Corolla (FWD)
For Rse 555 Main Street Clarksville Va 22901
Copyright © 1997 Mitchell International
Thursday, February 28, 2002 11:49AM

ARTICLE BEGINNING

1988 WIRING DIAGRAMS

Toyota

Corolla (Except FX & FX-16)

COMPONENT LOCATION MENU

COMPONENT LOCATIONS TABLE

AA

Component	Figure No. (Location)
A/C Fuse	6 (E 20)
A/C System	6 (A-E 20-23)
Alternator	1 (B 2)
Battery	1 (A 2)
CDS Fan Fus Link (J/B #5)	6 (E 22)
Circuit Opening Rly (EFI)	2 (A 6)
Clock	5 (A 16)
Clutch Start Sw	1 (C 3)
Cold Mixture Htr (CMH) (Carb, Calif)	3 (C 9)
Cold Mixture Htr (CMH) (Carb, Fed)	3 (D 9)
Combination Sw	4 (D-E 12)
Cruise Ctrl Clutch Sw	5 (D 19)
Cruise Ctrl Computer	5 (E 17-18)
Cruise Ctrl Main Sw	5 (D 16)
Defog CB	1 (C 2)
Defog Relay	10 (E 39)
Defog Sw	10 (D 38)
Dir Flasher	4 (D 15)
Door Ctsy Sws	9 (E 32-33)
ECU-IG Fuse	4 (A 14)
EFI ECU	2 (B-D 4)
Elect Idle Up VSV	6 (C 22)
Emission Ctrl Computer (ECC) (Carb, Calif)	3 (A-C 11)
Emission Ctrl Computer (ECC) (Carb, Fed)	3 (D-E 11)
Fuel Tank Send Unit	10 (B 38)
Fus Link Box	1 (A 2)
Hazard Sw	4 (E 14)
Heater CB (J/B #4)	6 (E 20)
Hi Pres SW (Rad Fan) (Carb, Calif)	3 (A 8)
Idle Up Diodes	6 (D 22)
Idle Up VSV SOL	2 (D 5)
Igniter (EFI)	2 (E 6)
Ign Mod/Igniter (Carb, Calif)	3 (A 8)
Ign Mod/Igniter (Carb, Fed)	3 (D 8)