

WIRING DIAGRAMS

1993 Toyota Celica

1993 WIRING DIAGRAMS
Toyota Wiring Diagrams

Toyota; Celica

IDENTIFICATION**COMPONENT LOCATION MENU**

COMPONENT LOCATIONS TABLE

Component	Figure No. (Location)
A/C COMPRESSOR CLUTCH RELAY (AUTO A/C)	11 (D 41)
A/C CONDENSER FAN MOTOR (AUTO A/C)	11 (E 40)
A/C CONDENSER FAN RELAY #2 (AUTO A/C)	11 (D 40)
A/C POWER TRANSISTOR (AUTO A/C)	11 (D 41)
A/C SYSTEM (AUTO)	9 (A-E 32-35)
A/C SYSTEM (MANUAL)	10 (A-E 36-39)
AUTOMATIC TRANSMISSION	
INDICATOR SWITCH	14 (E 53-54)
ANTI-LOCK BRAKE SYSTEM (ABS)	13 (A-E 48-51)
ALTERNATOR	1 (B 3)
AUTO ANTENNA	14 (E 55)
AUTO TILT AWAY ECU	12 (E 47)
BACK-UP LIGHT SWITCH	16 (D 63)
BATTERY	1 (A 2)
BLOWER RESISTOR (AUTO A/C)	11 (D 43)
CENTER AIRBAG SENSOR ASSEMBLY	12 (E 44)
CHECK CONNECTOR (1.6L)	3 (D 11)
CHECK CONNECTOR (2.0L)	4 (C-D 15)
CHECK CONNECTOR (2.2L A/T)	5 (D-E 19)
CHECK CONNECTOR (2.2L M/T)	6 (D-E 23)
CIRCUIT OPENING RELAY (1.6L)	3 (A 10)
CIRCUIT OPENING RELAY (2.0L)	4 (A 13)
CIRCUIT OPENING RELAY (2.2L A/T)	5 (A 18)
CIRCUIT OPENING RELAY (2.2L M/T)	6 (A 22)
COLD START INJECTOR	1 (B 2)
COMBINATION SWITCH	15 (C-E 59)
CRUISE CONTROL SYSTEM	12 (A-D 44-47)
DEFOGGER SWITCH	14 (A 52)
DIRECTIONAL FLASHER	8 (D 30)
DOOR LOCK SYSTEM	16 (D-E 60-62)
ECM (1.6L)	3 (B-D 8)
ECM (2.0L)	4 (A-E 12)
ECM (2.2L A/T)	5 (A-E 16)
ECM (2.2L M/T)	6 (B-E 20)
ELECTRONICALLY CONTROLLED	
TRANSMISSION (ECT) PATTERN SELECT SWITCH	14 (C 52)
EXTRA HIGH SPEED RELAY (AUTO A/C)	11 (D 41)
FOG LIGHT SWITCH	1 (C-D 2)
FUEL SENDER	15 (A-B 59)
FUSIBLE LINK BOX	2 (C 5-6)
HAZARD SWITCH	15 (E 56)
HEATER RELAY (AUTO A/C)	11 (D 41)
HORNS	1 (C 1)
IGNITER (1.6L)	3 (E 9-10)
IGNITER (2.0L)	3 (D-E 15)
IGNITER (2.2L A/T)	5 (E 18)