

CHARGING SYSTEM

PRECAUTION

1. Check that the battery cables are connected to the correct terminals.
2. Disconnect the battery cables when the battery is given a quick charge.
3. Do not perform tests with a high voltage insulation resistance tester.
4. Never disconnect the battery while the engine is running.
5. Check that the charging cable nut is tightened on terminal B of the generator and the engine room R/B.

PARTS LOCATION

