


# TOYOTA

## HTH 10 M/ MX/ MI HTH 10 E/ EX/ EI

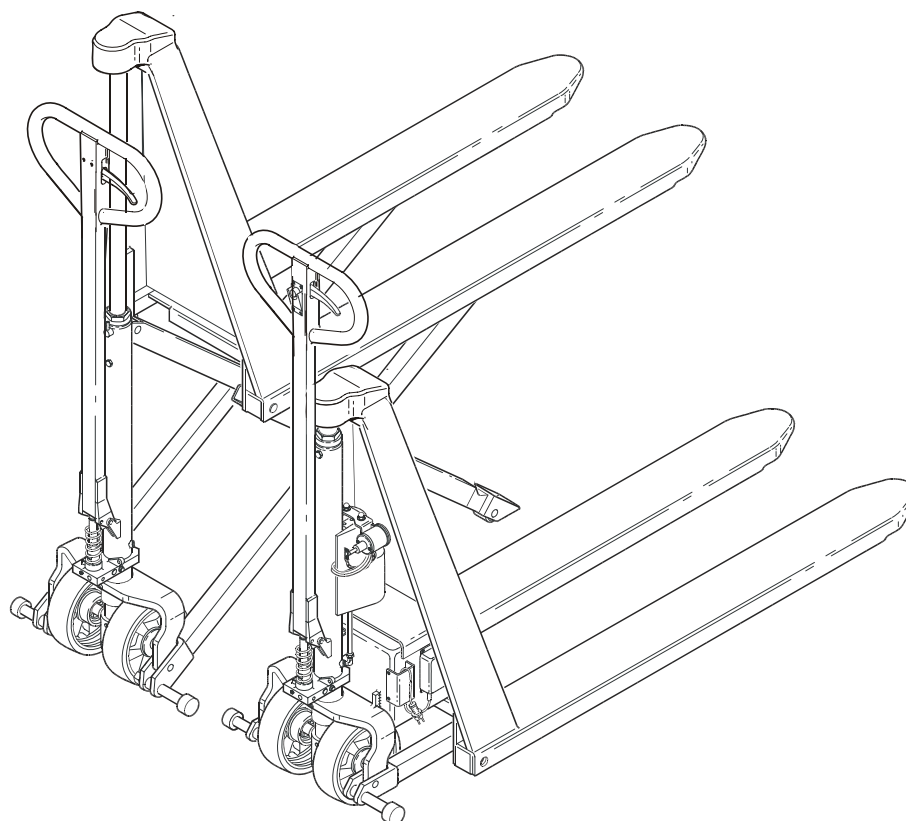

### High Lifter

Operator's Manual/Service

en

### High Lifter

Instrukcja użytkowania / Obsługa

pl

### High Lifter

Uživatelská příručka / Servis

cs

### High Lifter

Inštrukčná príručka / Údržba

sk

Serial number: 480.000 -

Order No: 214439-007

Issued: 2007-09-06

	Page
Operator's Manual / Service	3 - 14
Instrukcja użytkowania / Obsługa	15 - 26
Uživatelská příručka / Servis	27 - 38
Inštrukčná príručka / Údržba	39 - 50



The product complies with  
the CE-directives

# HIGH LIFTER

## Operator's Manual/Service

en



### WARNING!

Do not use the truck before first reading through the OPERATOR'S MANUAL.

### NOTE!

Keep for future reference.

**HTH 10 M = Standard, manual**

**HTH 10 E = Standard, electric**

**HTH 10 MI = manual in stainless steel design (I = Inox)**

**HTH 10 EI = electric in stainless steel design (I = Inox)**

**HTH 10 MX = manual with hand brake**

**HTH 10 EX = electric with hand brake**

**Accessories:**

**Parking brake**

*With reservation for deviations in the product range.*



### DANGER!

### DANGER!

Warns that an accident **will** occur if you do not follow the instructions.

The consequences are serious personal injury or possibly death and/or extremely large material damage.



### WARNING!

### WARNING!

Warns that an accident **can** occur if you do not follow the instructions.

The consequences are serious personal injury or possibly death and/or extremely large material damage.



### CAUTION!

### CAUTION!

Warns that an accident **can** occur if the instructions are not followed.

The consequences are personal injury and/or material damage.

### NOTE!

### NOTE!

Marks the risk of damage of the truck if the instructions are not followed.

It is your employer's responsibility to ensure that the truck operator has sufficient knowledge of how to use the High Lifter safely.

## SAFETY REGULATIONS



### SAFETY SHOES

*Always wear safety shoes when working with the High Lifter.*



### PROTECTIVE GLASSES

*When assembling or dismantling the High Lifter protective glasses must be worn to avoid personal injury.*



### NO SMOKING

*If smoking occurs in situations where a restriction against smoking is stated, a serious accident can occur.*



### NAKED FLAMES PROHIBITED

*If naked flames are used in situations where naked flames are prohibited, a serious accident can occur.*

## Control

The High Lifter must not be used if it is damaged or has faults that affect safety or its safe use. The High Lifter should not be used if it has been repaired, modified or adjusted unless it has been checked and approved by authorised personnel.

The battery must be secured in the compartment provided for this purpose. The weight of the battery should correspond with the weight stated on the high lifter's identification plate.

## Using the High Lifter

The High Lifter is extremely stable even when the forks are fully raised. It can also be used as an order picking truck. The order picker can set the collecting height and in doing so avoid unnecessary strain on the back. When picking has been completed the High Lifter acts as a normal pallet truck for transportation to the unloading area.

The manual and electric High Lifters can be fitted with a foot operated parking brake as an option.

When the lifting height exceeds 400 mm the machine's weight rests on the support arms, resulting in the High Lifter standing stable.

When the lifting height is less than 400 mm the machine's weight rests on the steering wheels, in such cases a High Lifter with parking brake is recommended.

It is not permitted to use the High Lifter:


- In areas where the atmosphere contains gases that can cause fires or explosions.
- To transport/lift passengers.

## Operator's responsibility

- The High Lifter should always be driven with care, good judgement and in a responsible manner.
- The High Lifter should not be driven with oily hands or oily shoes due to the risk of slipping.

## Working area

- The operator should ensure that the floor where the High Lifter is to be used has sufficient load bearing capacity for the total weight of the High Lifter, including the truck's maximum load.
- Take special care if there are protruding parts from racks, shelves or walls that can cause injury or damage the truck.
- It is **forbidden** for others to be present in the area around the High Lifter when there is a risk of personal injury, e.g. areas that can be reached by falling goods, lowering or lifting devices or in the High Lifter's manoeuvring area.

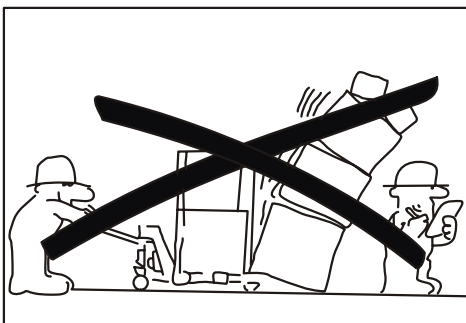

**Driving and conduct while driving**


- Avoid cornering at high speed.
- Pay particular attention to other personnel as well as fixed and moving objects within the working area and thereby avoid accidents.
- When the load impairs the line of vision, the High Lifter should always be operated with the load to the rear.



**WARNING!**

**Risk of tipping.**

**The High Lifter must not be used on sloping ground, as there is a great risk of the truck overturning.**

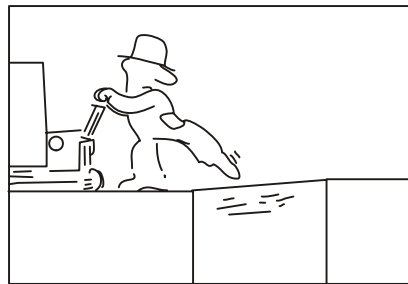

- Always keep a safe distance from the edges of loading bays and loading ramps. Be attentive to marked risk areas.
- Before the High Lifter is driven over a loading ramp, the operator must make sure the ramp is correctly secured and has the necessary load bearing capacity. The High Lifter should be driven slowly and carefully across the ramp.
- When the High Lifter is driven on to another vehicle, make sure the vehicle is stable and that the brakes have been applied correctly. When parking the High Lifter on the vehicle a **parking brake** is recommended.
- Before the High Lifter is driven into a lift, the operator must make sure that the lift is approved for the total weight of the truck, the load, operator and any other passengers in the lift. When entering the lift, the load must enter first not the driver. No other personnel should be in the lift when the load or High Lifter enters or leaves.
- Any accidents that have caused personal injury or damage to buildings or equipment must be reported to the supervisor. Incidents and faults on the High Lifter shall also be reported.

**Operator instructions for a High Lifter equipped with a handbrake**

- Pull the handbrake lever upwards to actuate the handbrake.

The handbrake is also equipped with a parking brake function. Press the locking catch towards the locking mechanism when the brake has been applied on the truck to lock the brake.



**WARNING!**

**Never leave the truck in the raised position with the brake applied.**

- Pull the brake handle upwards and move the lock catch outwards to release the parking brake.



**WARNING!**

**There is a pinch risk, never place your fingers under the locking catch.**



**CAUTION!**

**Adapt your speed according to the slope and surface.  
Max slope = 3.5 % for use of the High Lifter with handbrake.**