

# TOYOTA

## MAINTENANCE PROCEDURES

**1986 MODELS**

**Land Cruiser**

For USA & Canada Pub. No. MM001U



## FOREWORD

This manual describes the maintenance procedures for the 1986 TOYOTA LAND CRUISER models sold in the United States and Canada.

Detailed repair procedures are contained in the following manuals:

'81 2F Engine Emission Control Repair Manual	(Pub. No. 36043E)
2F Engine Repair Manual	(Pub. No. 36104E)
B Series Engine Repair Manual	(Pub. No. 36047E)
2H, 12H-T Engine Repair Manual	(Pub. No. RM012E)
Land Cruiser Heavy Duty Chassis and Body Repair Manual	(Pub. No. 36262E)

For reference, the General Maintenance Items required of the vehicle owner/driver are listed in Appendix A.

All information in this manual is based on the latest product information at the time of publication. However, specifications and procedures are subject to change without notice.

**TOYOTA MOTOR CORPORATION**

# 1986 TOYOTA MAINTENANCE PROCEDURES MANUAL

INTRODUCTION	<b>1</b>
LAND CRUISER (2F ENGINE)	<b>2</b>
LAND CRUISER (3B,2H ENGINE)	<b>3</b>
APPENDIX	<b>A</b>

# INTRODUCTION

	Page
GENERAL PRECAUTIONS .....	1-2
PRECAUTIONS FOR VEHICLES EQUIPPED WITH A CATALYTIC CONVERTER .....	1-3
GENERAL REPAIR INSTRUCTIONS .....	1-4
ABBREVIATIONS USED IN THIS MANUAL .....	1-5

**1**