

INSTALLATION

Installation is in the reverse order of removal (See page [AT-17](#)).


HINT:

After installtion, check fluid level (See page [AT-3-1](#)).

REMOVAL

1. REMOVE RADIATOR GRILLE SUB-ASSY


- (a) Remove the 3 screws.
- (b) Release the 2 clips and remove the radiator grille sub-assy.

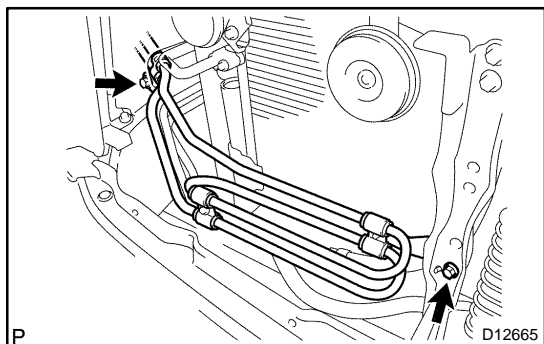

2. SEPARATE POWER STEERING OIL COOLER SUB-ASSY


Remove the 2 bolts and separate the power steering oil cooler sub-assy .

Torque: 7.5 N·m (76 kgf·cm, 66 in.-lbf)

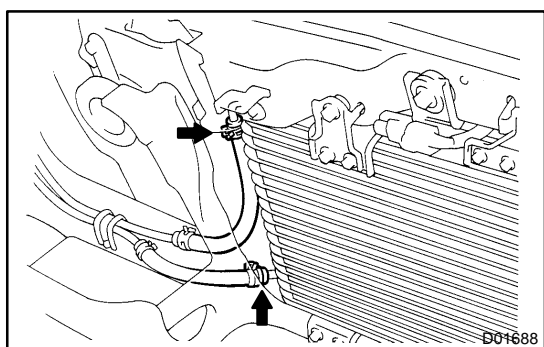


3. REMOVE OIL COOLER

- (a) Loosen the 2 clips and disconnect the 2 hoses.

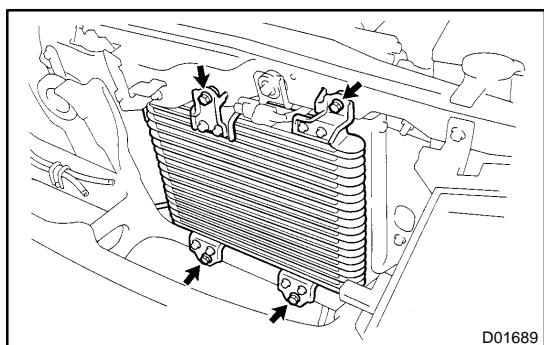

- (b) Remove the 4 bolts and oil cooler.
Torque: 12 N·m (117 kgf·cm, 8 ft·lbf)

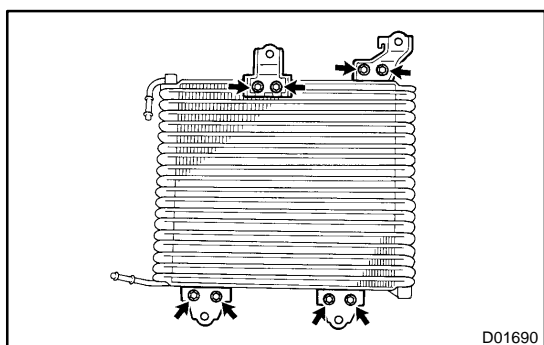

- (c) Remove the 8 bolts, the 2 oil cooler brackets and the 2 stays.
Torque: 4.9 N·m (50 kgf·cm, 43 in.-lbf)