


## ACC CUT RELAY INSPECTION

ST00U-01

### 1. REMOVE ACC CUT RELAY

Remove the relay box and ACC cut relay.

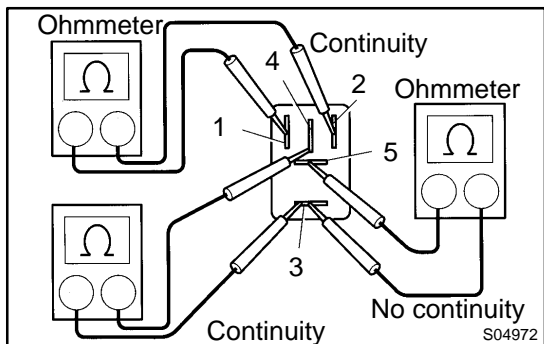

### 2. INSPECT ACC CUT RELAY CONTINUITY


(a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

(b) Check that there is no continuity between terminals 3 and 5.

If there is continuity, replace the relay.

(c) Check that there is continuity between terminals 3 and 4. If there is no continuity, replace the relay.

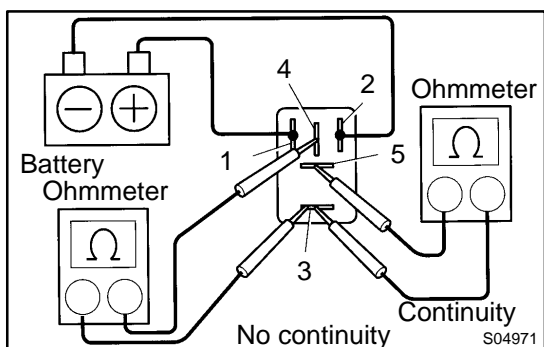

### 3. INSPECT ACC CUT RELAY OPERATION

(a) Apply battery positive voltage across terminals 1 and 2.

(b) Using an ohmmeter, check that there is no continuity between terminals 3 and 4.

If there is continuity, replace the relay.

(c) Using an ohmmeter, check that there is continuity between terminals 3 and 5.

If there is no continuity, replace the relay.

### 4. REINSTALL ACC CUT RELAY