

USING THE ELECTRICAL WIRING DIAGRAM

One of the keys to a quick and successful electrical diagnosis is correctly using the **Toyota Electrical Wiring Diagram or EWD**. The EWD is not *just* a book of wiring diagrams, but an *information resource for anything electrical* on the vehicle. Everything from connector ID and location to what circuits share splice points is included in this manual.

Because there is so much information, it takes a little practice to learn where it is located, and what each of the EWD symbols and individual sections can tell you. We will take a detailed look at all of these features, and how to use them in diagnosing an electrical problem.


NOTE

As you follow your instructor's "tour" of the EWD Sections, it is recommended that you use the **actual EWD, instead of this technician handbook**. This way, you will be getting a "feel" for the actual tool that you have at your dealership. For a review of the EWD and its sections, view the Toyota Technical Training Video *Using the Electrical Wiring Diagram* (p/n 00401-42925).

Sections of the EWD

The EWD is an invaluable tool when diagnosing an electrical problem. Knowing where specific information is, and the "system" that the book uses helps to speed up the diagnostic process.

Fig. 2-1

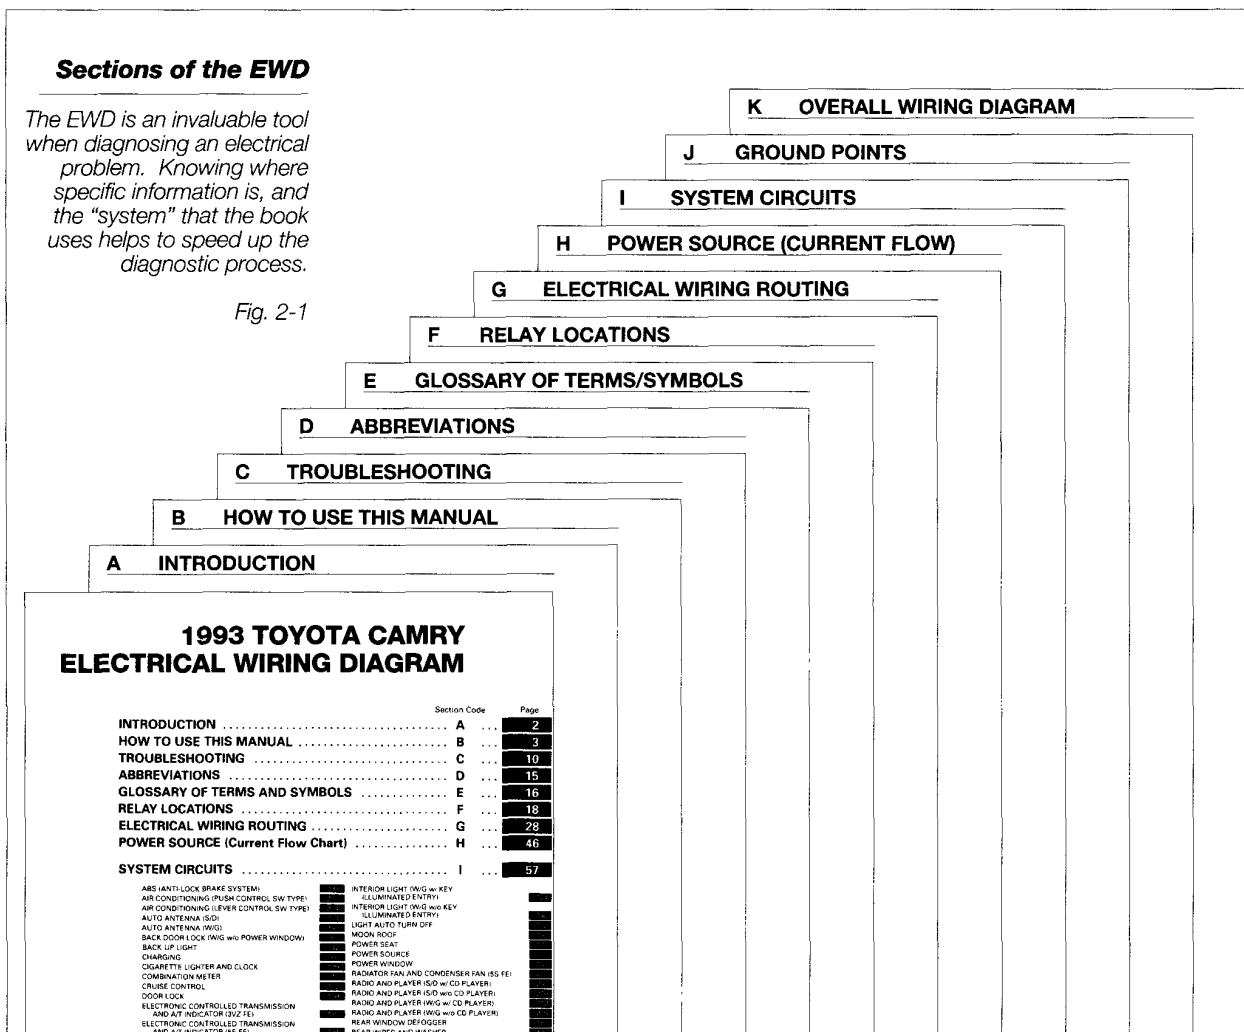

The Table of Contents

With the large number of pages and sections in the EWD, the fastest way to find the wiring diagram or information you need is to use the **Table of Contents**.

There are two table of contents that are available. One is on the title page of the book. This lists all of sections (A-K) and the also has an *alphabetical list* of all the **System Circuit Diagrams** located in Section I. These wiring diagrams are the “heart” of the EWD, and the place to start when diagnosing an electrical problem. There is also a listing of each System Circuit Diagram on the first page of Section I.

Table of Contents

The table of contents is found on the title page of the EWD. A second table of contents for just the System Circuit Diagrams is found at the beginning of Section I.

Fig. 2-2

**1993 TOYOTA CAMRY
ELECTRICAL WIRING DIAGRAM**

	Section Code	Page
INTRODUCTION	A	2
HOW TO USE THIS MANUAL	B	3
TROUBLESHOOTING	C	10
ABBREVIATIONS	D	15
GLOSSARY OF TERMS AND SYMBOLS	E	16
RELAY LOCATIONS	F	18
ELECTRICAL WIRING ROUTING	G	28
POWER SOURCE (Current Flow Chart)	H	46
SYSTEM CIRCUITS	I	57
ABS (ANTI-LOCK BRAKE SYSTEM)	199	
AIR CONDITIONING (PUSH CONTROL SW TYPE)	228	
AIR CONDITIONING (LEVER CONTROL SW TYPE)	234	
AUTO ANTENNA (S/D)	263	
AUTO ANTENNA (W/G)	263	
BACK DOOR LOCK (W/G w/o POWER WINDOW)	156	
BACK-UP LIGHT	132	
CHARGING	46	
CIGARETTE LIGHTER AND CLOCK	179	
COMBINATION METER	214	
CRUISE CONTROL	182	
DOOR LOCK	130	
ELECTRONIC CONTROLLED TRANSMISSION AND A/T INDICATOR (3VZ-FE)	198	
ELECTRONIC CONTROLLED TRANSMISSION AND A/T INDICATOR (5S-FE)	194	
ELECTRICALLY CONTROLLED HYDRAULIC COOLING FAN (3VZ-FE)	226	
ENGINE CONTROL (3VZ-FE)	68	
ENGINE CONTROL (5S-FE)	78	
FRONT WIPER AND WASHER	174	
HEADLIGHT (FOR USA)	94	
HEADLIGHT (FOR CANADA)	96	
HORN	163	
ILLUMINATION	126	
INTERIOR LIGHT (S/D w/ KEY ILLUMINATED ENTRY)	120	
INTERIOR LIGHT (S/D w/o KEY ILLUMINATED ENTRY)	128	
INTERIOR LIGHT (W/G w/ KEY ILLUMINATED ENTRY)	124	
INTERIOR LIGHT (W/G w/o KEY ILLUMINATED ENTRY)	130	
LIGHT AUTO TURN OFF	102	
MOON ROOF	97	
POWER SEAT	176	
POWER SOURCE	46	
POWER WINDOW	146	
RADIATOR FAN AND CONDENSER FAN (5S-FE)	221	
RADIO AND PLAYER (S/D w/ CD PLAYER)	208	
RADIO AND PLAYER (S/D w/o CD PLAYER)	216	
RADIO AND PLAYER (W/G w/ CD PLAYER)	212	
RADIO AND PLAYER (W/G w/o CD PLAYER)	218	
REAR WINDOW DEFOGGER	150	
REAR WIPER AND WASHER	136	
REMOTE CONTROL MIRROR	141	
SHIFT LOCK	172	
SRS (SUPPLEMENTAL RESTRAINT SYSTEM)	164	
STARTING AND IGNITION	62	
STOP LIGHT (S/D)	110	
STOP LIGHT (W/G)	113	
TAILLIGHT (S/D)	134	
TAILLIGHT (W/G)	138	
TURN SIGNAL AND HAZARD WARNING LIGHT (S/D)	104	
TURN SIGNAL AND HAZARD WARNING LIGHT (W/G)	107	
UNLOCK AND SEAT BELT WARNING	160	
GROUND POINTS	J	238
OVERALL ELECTRICAL WIRING DIAGRAM	K	244

© 1992 TOYOTA MOTOR CORPORATION
All rights reserved. This book may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.