



Individually Yours

# Operator's Manual Compact A Series



# INDEX

<b>0.</b>	<b>TRACTOR SERIAL NUMBERS &amp; PLATES</b>	<b>1</b>			
<b>A.</b>	<b>TO THE USER</b>	<b>4</b>			
<b>B.</b>	<b>SAFETY PRECAUTIONS</b>	<b>7</b>			
B.1.	Safety Rules	7			
B.1.1.	Protective mechanism in case of rollovers and sun protection	9			
B.1.1.1.	Usage	9			
B.1.1.2.	Damaged ROPS'	9			
B.1.2.	Preventing leakages	9			
B.1.3.	Fuel safety	9			
B.1.4.	Carrying reserve loads safely	9			
B.1.5.	To get on and off the tractor	10			
B.1.6.	Using the safety chain	10			
B.1.7.	Canopy	10			
<b>C.</b>	<b>GENERAL DEFINITIONS</b>	<b>11</b>			
C.1.	Tractor models	11			
C.2.	Maintenance	15			
C.2.1.	Free maintenance	15			
C.3.	Engine	15			
C.4.	Transmission	15			
C.4.1.	Clutch	15			
C.4.2.	Gearbox	15			
C.4.3.	Rear axle	15			
C.4.4.	Splitter - Shuttle	16			
C.4.5.	Driven front axle	16			
C.4.6.	Power take-off (PTO)	16			
C.5.	Brake system	16			
C.6.	Steering system	16			
C.7.	Hydraulic system	16			
C.7.1.	Hydraulic lift	17			
C.7.1.1.	Hydraulic lift with mechanic control	17			
C.7.2.	Auxiliary hydraulics	17			
<b>D.</b>	<b>INDICATORS &amp; CONTROLS</b>	<b>18</b>			
D.1.	Indicator figures	18			
D.1.1.	Front controls	18			
D.1.2.	Dashboard	18			
D.1.3.	Controls on the right side	19			
D.1.4.	Controls on the left side	19			
D.1.5.	Driver seat	19			
D.1.6.	Mirrors	19			
D.2.	Indicator and control details	20			
D.2.1.	Front side controls	20			
D.2.1.1.	Clutch pedal	20			
D.2.1.2.	Power take-off (PTO) clutch lever	20			
D.2.1.3.	Accelerator	20			
D.2.1.4.	Brake pedals	20			
D.2.1.5.	Location of fuse box	20			
D.2.2.	Dashboard	20			
D.2.2.1.	Front part of dashboard	20			
D.2.2.1.1.	Steering wheel	20			
D.2.2.1.2.	Main & dipped beams, signals, park lamps & horn	21			
D.2.2.1.3.	Emergency flasher switch	21			
D.2.2.1.4.	Front wipers (in cabin models)	21			
D.2.2.1.5.	Washer (in cabin models)	21			
D.2.2.1.6.	Hand throttle	21			
D.2.2.1.7.	Ignition switch	21			
D.2.2.2.	Dashboard	22			
D.2.3.	Controls on the right side	23			
D.2.3.1.	16+8 transmission box	23			
D.2.3.1.1.	HLR shift lever	23			
D.2.3.1.2.	Main gear lever	23			
D.2.3.2.	12+12 transmission box	23			
D.2.3.2.1.	Range shift lever	23			
D.2.3.2.2.	Speed gear lever	23			
D.2.3.3.	Cabin right side controls	23			
D.2.3.3.1.	Rotating beacon lamp	23			
D.2.3.3.2.	Front operation lamp	23			
D.2.3.3.3.	Rear operation lamp	23			
D.2.3.3.4.	Engagement of driven front axle	23			
D.2.3.3.5.	Differential lock	23			
D.2.3.3.6.	Air compressor	24			
D.2.3.3.7.	Heater speed	24			
D.2.3.3.8.	Lighter	24			
D.2.3.4.	Hydraulic lift with mechanical control	24			
D.2.3.4.1.	Position control setting lever	24			
D.2.3.4.2.	Draft control setting level	24			
D.2.3.4.3.	Stoppers	24			
D.2.3.5.	PTO	24			
D.2.3.5.1.	PTO lever	25			
D.2.3.6.	Auxiliary control levers	25			
D.2.4.	Controls on the left side	25			
D.2.4.1.	Forward - reverse selector lever	25			
D.2.4.2.	PTO lever	25			
D.2.5.	Driver seat	25			
D.2.5.1.	Setting backwards - front	25			
D.2.5.2.	Setting suspension control	25			
D.2.5.3.	Adjusting the height	25			
<b>E.</b>	<b>STARTING AND OPERATING</b>	<b>26</b>			
E.1.	Points to be considered in the first 50 hours	26			
E.2.	Starting	26			
E.2.1.	Normal start - cold start	26			
E.2.1.1.	Special directives for cold start	26			
E.2.2.	Starting with spare battery	26			
E.3.	Driving	27			
E.3.1.	Shifting	27			
E.3.1.1.	Shifting in 16+8 models	27			
E.3.1.2.	Shifting in 12+12 models	27			
E.3.2.	Differential lock	28			
E.3.2.1.	Differential lock in 16+8 models	28			
E.3.2.2.	Differential lock in 12+12 models	28			
E.3.3.	Front axle 4x4	28			
E.4.	Stopping	28			
E.5.	Measurements to be taken during usage	29			
E.5.1.	Driving slopes allowed in ramps for tractor	29			
E.5.2.	Chain usage	29			
E.5.3.	Towing the tractor	29			
<b>F.</b>	<b>USAGE DIRECTIVES</b>	<b>30</b>			
F.1.	PTO usage	30			
F.1.1.	Disconnecting PTO	30			
F.2.	Equipment	30			
F.2.1.	Equipment plug	30			
F.3.	3 Point hanger system	31			
F.3.1.	Leveling links	31			
F.3.2.	Stabilizers	31			
F.4.	Using hydraulic lift	31			
F.4.1.	Position control	31			
F.4.2.	Power control (Sensitivity control)	31			
F.4.3.	Mixed control	32			
F.4.4.	Floating position	32			
F.4.5.	Locking & controlled lowering system	32			
F.5.	Auxiliary hydraulics	33			
F.5.1.	Adjustment valve with single-double acting	33			

# INDEX

F.5.2.	Measurements to be taken during usage	33	H.5.5.	Replacing engine oil & oil filter	46
F.5.3.	Hydraulic motor	33	H.5.5.1.	Drain	46
F.6.	Fixing equipment	33	H.5.5.2.	Re-attaching the oil filter element	46
F.6.1.	Using PTO shaft	33	H.5.5.3.	Blow-by hose	47
F.7.	Using the top link	34	H.5.5.4.	Filling	47
<b>G.</b>	<b>MAINTENANCE SCHEDULE</b>	36	H.5.6.	Brake pedal clearance setup	47
G.1.	Maintenance	36	H.5.7.	Clutch pedal clearance setup	47
G.1.1.	General directions about oil control & filling	36	H.5.8.	Setting park brake	47
G.1.2.	Lubrication of grease nipples	36	H.5.9.	Checking the PTO lever clearance setup	47
G.1.3.	Lubrication and maintenance schedule	36	H.5.10.	Checking the oil level in the transmission and hydraulic systems	48
G.1.4.	Maintenance intervals (100, 250, 500 hours)	36	H.5.11.	Checking the oil level on the 4WD hub	48
G.2.	Recommended fuels and oils	37	H.5.12.	Replacing the pressure filters in transmission	48
G.2.1.	Oil recommendations based on external temp.	37	H.5.13.	Replacing fuel filter & pre-filter (water trap filter)	48
G.2.2.	Fuel quality values	37	H.6.	1.000 hour maintenance	49
G.2.2.1.	Fuel	38	H.6.1.	Replacing the oil and oil ventilation filter in the hydraulic system	49
G.2.2.2.	Fuel tank	38	H.6.1.1.	Draining	49
G.2.2.3.	Filter system	38	H.6.1.2.	Refilling	49
G.3.	Grease	38	H.6.2.	Changing oil in the driven front axle	49
G.4.	Maintenance schedule	39	H.6.3.	Changing the oil in the wheel hub gears of 4WD	50
G.4.1.	Maintenance when required	39	H.6.4.	Hydraulic system	50
G.4.2.	Maintenance daily or once every 10 hrs.	39	H.6.4.1.	Replacing the pressure filter of the hydraulic system	50
G.4.3.	Maintenance weekly or once every 50 hrs.	39	H.6.4.1.1	Disassembly	50
G.4.4.	Maintenance monthly or once every 250 hrs.	39	H.6.4.1.2	Assembly	50
G.4.5.	Maintenance annual or once every 500 hrs.	39	H.6.4.2.	Replacing the suction filter of hydraulic pump	50
G.4.6.	1.000 hour maintenance	39	H.6.5.	Checking and adjusting toe-in & toe-out of front	50
G.4.7.	2.000 hour maintenance	39	H.6.6.	Checking and setting the valve clearances	51
G.4.8.	3.000 hour maintenance	39	H.6.7.	Tightening chassis screw and nuts	51
<b>H.</b>	<b>PERIODICAL MAINTENANCE</b>	40	H.6.8.	Greasing flywheel gear	51
H.1.	General	40	H.7.	2.000 hours maintenance	51
H.1.1.	Repairing the battery	40	H.7.1.	Checking alternator	51
H.1.2.	Removing the battery and cables	40	H.7.2.	Checking the engine connections	51
H.1.3.	Cleaning the engine	40	H.7.2.1.	Checking the starter motor	51
H.1.4.	Taking oil samples from engine	40	H.7.2.2.	Checking the turbo charger	51
H.1.5.	Air filters with cylindrical bodies	40	H.7.2.3.	Checking the water pump	51
H.1.6.	Power core air filters	41	H.8.	Two years maintenance	51
H.1.7.	Checking and replacing injectors	41	H.8.1.	Draining engine coolant liquid	51
H.1.8.	Heavy maintenance applications	41	H.8.2.	Filling engine coolant liquid	52
H.2.	Daily / 10 hour maintenance	42	H.8.3.	Volume of the engine coolant liquid	52
H.2.1.	Checking the engine oil level	42	H.8.4.	Checking and replacing the injectors	52
H.2.2.	Checking / cleaning radiator grids	42	<b>I.</b>	<b>CONTROLS &amp; SETTINGS</b>	53
H.2.3.	Checking setting & changing alternator fan belts	42	I.1.	Engine	53
H.2.4.	Checking the motor air filter service indicator	43	I.1.1.	Discharging the air in the fuel system	53
H.2.5.	Discharging the fuel filter's pre-filter water	43	I.1.2.	Air filter	53
H.2.6.	General checks on tractor	43	I.1.2.1.	Main filter maintenance	53
H.2.6.1.	Checking the leakages & connections	43	I.1.2.2.	Cleaning main filter	53
H.2.6.2.	Checking the water pump	44	I.1.3.	Cooling system maintenance	53
H.3.	Weekly / 50 hours maintenance	44	I.1.3.1.	Coolant	54
H.3.1.	Discharge water & contaminants from fuel tank	44	I.2.	Electric system	54
H.3.1.1.	From fuel tank	44	I.2.1.	Battery check and maintenance	54
H.3.1.2.	From fuel storage tank	44	I.2.2.	Alternator	54
H.3.2.	Lubricating the front axle & steering wheel greasers	44	I.2.3.	Safety precautions for the electrical system	54
H.3.3.	Lubricating 3 point system	44	I.2.4.	Fuses	54
H.3.4.	Checking tire pressures	44	I.2.5.	Receptacle plugs	55
H.4.	Monthly / 100 hour maintenance	45	I.2.6.	Beam adjustment	55
H.5.	Annual / 500 hours maintenance	45	I.3.	Transmission and PTO Clutch settings	55
H.5.1.	Checking the electrolyte level in battery	45	I.3.1.	Adjusting the driving clutch pedal clearance	55
H.5.2.	Replacing air filter & safety filter	45	I.3.2.	Adjusting PTO clutch rod clearance	55
H.5.2.1.	Models with round body	45	I.4.	Brake system	56
H.5.2.2.	Power core models	45			
H.5.3.	Lubricating the gearbox shift levers	46			
H.5.4.	Checking the wheel nuts	46			

# INDEX

I.4.1.	Adjusting the course of the brake pedals	56	J.4.2.	Fuel System & Air Filter	60
I.4.2.	Adjusting parking brakes	56	J.4.3.	Engine Cooling System	61
I.5.	Steering system	57	J.5.	Electric System	61
I.5.1.	Checking the toe-in & toe-out of the front wheels	57	J.6.	Transmission	61
I.5.1.1.	Adjusting toe-in of front tires	57	J.6.1.	Clutch	61
I.5.2.	Max. turn limitation setting of front axle (4WD)	57	J.6.2.	Gearbox	61
I.6.	Adjusting tire track width	57	J.6.3.	Speed Limits	62
I.6.1.	4WD front axle	57	J.6.3.1.	12+12 Gearbox	62
I.6.2.	Tire track widths	57	J.6.4.	PTO	62
I.6.3.1.	Front axle tire track widths	58	J.6.4.1.	PTO Output (kW)	63
I.6.3.2.	Rear axle tire track widths	58	J.6.5.	4WD Powered Front Axle	63
I.7.	If the tractor is not used	58	J.7.	Brake System	63
I.7.1.	Storing the tractor	58	J.8.	Steering System	63
I.7.1.1.	For a period less than two months	58	J.8.1.	Turning Diameter Without Brake	63
I.7.1.2.	For a period longer than two months	58	J.9.	Hydraulic Lift	64
I.7.2.	Taking the tractor out of the store	58	J.9.1.	Hydraulic Lift Functions	64
I.7.2.1.	For a period less than two months	58	J.9.1.1.	Maximum Lifting Capacity (in ton)	64
I.7.2.2.	For a period longer than two months	58	J.9.1.2.	Hydraulic Lift Controls	64
<b>J.</b>	<b>TECHNICAL SPECIFICATIONS</b>	59	J.10.	Vertical Loads	64
J.1.	Dimensions and Masses	59	J.11.	Ballast Weights & Static Loads	65
J.2.	Wheels	59	J.11.1.	Front Ballast Weights	65
J.2.1.	Tires, Tire Pressures and Permitted Loads	59	J.11.2.	Rear Ballast Weights	65
J.2.2.	Wheel Nuts and Tightening Torques	59	J.11.3.	Permitted Vertical Static Loads	65
J.3.	Track Widths	60	<b>K.</b>	<b>Appendix</b>	66
J.4.	Engine	60	K.1.	Measures in Metric System and Equivalents	66
J.4.1.	Lubrication System	60	K.2.	Bolt Torque Table	66

# TRACTOR SERIAL NUMBERS & PLATES

A53c - A63c - A73c



## TRACTOR SERIAL NUMBERS & PLATES

A53c - A63c - A73c Cab models

