

NOTICE

The information contained is for **DEALER REFERENCE PURPOSES ONLY**.
MANUALS ARE MODEL AND SERIAL NUMBER SPECIFIC.

If additional printed manuals are required for your shop/office location, order by part number through the factory's Parts Center.

If a retail customer needs replacement manual(s) for a specific unit, contact the factory's Customer Data Center at: 800-829-0051 or
customerdata@vermeermfg.com

This page intentionally left blank.

D36x50 Series II Navigator® Horizontal Direction Drill with R.A.T.T.

Service Manual



D36x50 SERIES II_S1_01
Serial No. 176 -
Order No. 105400Y37

Vermeer®

This manual contains service requirements and procedures needed by an experienced service person to complete necessary service and repairs on the machine. Study and understand these requirements and procedures thoroughly before servicing or repairing the machine. There are also many components which are not user-serviceable. Do not attempt any service which you do not fully understand, nor any service that you cannot do adequately and safely with the tools and equipment available to you. Failure to do so could result in personal injury or equipment damage. If you encounter a problem that you do not understand or cannot solve, contact your Vermeer service representative.

The instructions, illustrations and specifications in this manual are based on the latest information available at the time of publication. Your machine may have product improvements and options not yet contained in this manual.

Vermeer Manufacturing Company reserves the right to make changes at any time without notice or obligation.

Additional copies of this manual are available. When ordering, use the part number on the front cover.

VERMEER and VERMEER Logo are registered trademarks of Vermeer Manufacturing Company in the U.S. and/or other countries.

This document may contain portions of technical materials of various suppliers. Such component suppliers shall not be responsible for the direct results of their technical materials being presented out of context.

Designations used by component suppliers to distinguish their products which appear in this manual are the property of the respective trademark owner(s). Vermeer Manufacturing Company is aware of the following component suppliers trademarks.

CUMMINS is the trademark of the Cummins Inc.

LOCTITE and VIBRA-SEAL are trademarks of Loctite Corporation.

FLUKE is a trademark of Fluke Corporation.

TEFLON is a trademark of E.I. DuPont de Nemours and Company.

SUNDSTRAND is a trademark of Sauer-Sundstrand Corp.

EATON and CHAR-LYNN are trademarks of Eaton Corporation.

TRIHAWK is a trademark of Earth Tool Company.

No part of this manual may be reproduced in any form or by any means, electronic or mechanical, including photocopying, recording, or by any information storage and retrieval systems, without the express written consent of Vermeer Manufacturing Company.

Copyright © 2007
All rights reserved.
Vermeer Manufacturing Company
1210 Vermeer Road East, P.O. Box 200
Pella, Iowa 50219-0200, USA

Using the Manual	1-1
Reference Publications	1-2
Vermeer Publications	1-2
Vendor Publications	1-2
Warranty Considerations	1-2
Vermeer Warranty	1-2
John Deere Warranty	1-2
Safety	1-3
Do Not Modify Machine	1-3
Replace Shields	1-3
Maintain Operator Presence System.....	1-3
Avoid Moving Parts.....	1-4
Avoid Entanglement - Stay Away	1-4
Rotating Wrench Contact.....	1-4
Avoid Fluid Under Pressure.....	1-5
Work in Ventilated Area.....	1-5
Raised Machine Can Fall.....	1-5
Terminology	1-6
Inputs and Outputs	1-6
Reference Designators	1-6
Diagrams and Schematics	1-6
Chapter Organization.....	1-6
Theory.....	1-7
Troubleshooting	1-7
Repair.....	1-7
Addendum	1-7
Troubleshooting Guidelines	1-8
Problem-Solving Analysis.....	1-8
Rule Out Operator Error	1-8
Define the Problem	1-9
Research the Machine.....	1-10
Electrical Troubleshooting.....	1-11
Common Electrical Problems.....	1-11
Hydraulic Troubleshooting	1-12
Leakage Path Analysis.....	1-12
Pumps and Motors	1-13
Directional Control Valves	1-14
Cylinders	1-14
Required Tools.....	1-15
Hydraulic Connections.....	1-15
Avoid Trapped Pressure	1-15
Avoid Oil Contamination.....	1-16
Connecting Flow Meters	1-16
Connecting a Needle Valve.....	1-17
Connecting Pressure Gauges.....	1-17
Thermometer or Pyrometer.....	1-17
Digital Multimeter	1-18
Measuring Voltage.....	1-18
Measuring Resistance.....	1-18
Testing for Continuity.....	1-19
Measuring Current.....	1-19

Repair Guidelines	1-20
Shop Requirements.....	1-20
Special Tools & Test Equipment.....	1-20
Personnel and Lifting Requirements.....	1-20
Replacement Parts	1-20
Part Numbers/Hose Lengths/Fitting Orientation.....	1-20
Parts Ordering	1-20
Torque Values.....	1-20
Shutdown Procedure	2-1
Starting the Engine	2-2
Cold Weather Starting.....	2-3
Specifications	2-4
Machine Reference and Orientation	2-4
Engine Specifications	2-5
Machine Specifications	2-5
Fuel and Lubricants	2-7
Machine Interlocks	2-7
Starting Interlocks	2-7
Operator Presence Interlock	2-8
Remote Lockout	2-8
Machine Performance	2-8
Preoperation Check	2-9
Tools Needed.....	2-9
Checking Machine Performance	2-9
Machine Performance Standards	2-10
Machine Performance Procedures	2-11
Control Settings.....	2-11
Engine Starting and Warm-Up.....	2-12
Drill Rotation Performance	2-13
Thrust/Pullback Operation.....	2-14
Thrust/Pullback Performance	2-15
Ground Drive, Rod Loader, Vise, Stakedown, Stabilizer/Rack Angle, and Water Shutoff Performance.....	2-16
Ground Drive Performance.....	2-18
Ground Drive	2-18
Rod Loader Performance	2-20
Vise Performance	2-22
Stakedown Performance	2-23
Rack Angle Performance.....	2-26
Stabilizer Function Performance	2-27
Water Shutoff Valve Performance	2-29
Schematic	3-1
Component Locations	3-2
Power Supply	3-3
Ignition Switch S1	3-4
Specifications	3-4
Charging	3-5
Battery Charging	3-5
Battery (BT1).....	3-5

Operation	3-5
Wire Connections	3-6
Ground Disconnect Switch S1	3-6
Thermal Breakers	3-7
Engine Component Locations	3-8
Operation Overview	3-9
Fuel Control	3-9
Throttle Control	3-9
Neutral Start	3-9
Specifications	3-9
Starting Circuit Electrical Schematic	3-11
Coolant Temperature Warning Circuits	3-12
Fuel Delivery	3-13
Fuel Gauge Circuit	3-13
Throttle Circuit	3-14
Troubleshooting	3-16
Pretest Inspection	3-16
Battery BT1	3-16
Ignition Switch	3-17
Breaker CB1	3-18
Breakers F1–F10	3-19
Ground Disconnect Switch	3-20
Continuity Test	3-20
Measure Battery Voltage	3-20
Check for Power at Controllers	3-21
Battery Charging Circuit	3-21
Engine Troubleshooting	3-21
Introduction	3-21
Basic Troubleshooting	3-22
Check Out “Common” and Related Systems	3-22
Inspecting Control Circuits and Mechanical Components	3-23
Engine Coolant Temperature Monitoring Circuit	3-27
Air Intake Monitors	3-29
Air Cleaner	3-29
Turbocharger/Intake	3-30
Fuel Delivery	3-32
Fuel Tanks, Lines, Filters, and Strainers	3-33
Fuel Gauge Circuit	3-34
Supply Voltage Test	3-34
Open Sensor Test	3-35
Sensor Ground Test	3-35
Fuel Sender (B1) Resistance Test	3-35
Ignition START Circuit	3-36
Alternator ALT1	3-38
Throttle Circuit	3-39
Overview	4-1

- Theory..... 4-1**
 - Functions 4-1
 - Components 4-1
 - Component Locations..... 4-2
 - Hose Connections — Fluid Supply and Return..... 4-3
 - Hydraulic Schematic 4-4
 - Oil Supply Function..... 4-5
 - Pump PMP3..... 4-5
 - Operation4-5
 - Rotation Closed-Loop Pump PMP1 4-7
 - Operation - Charge Pressure Mode.....4-7
 - Operation - High Pressure Mode4-8
 - Thrust Closed-Loop Pump PMP2..... 4-10
 - Operation - Charge Pressure Mode.....4-10
 - Operation - High Pressure Mode4-11
 - Oil Filtering Function 4-12
 - With Functions Operating or At Rest4-12
 - Oil Cooling Function 4-13
 - Operation4-13
 - Specifications 4-14
- Troubleshooting 4-15**
 - Excessive Noise/Vibration4-15
 - Pretest Inspection 4-17
 - Test Equipment Needed..... 4-18
 - Troubleshooting/Testing Pump PMP1..... 4-18
 - Troubleshooting/Testing Pump PMP2..... 4-18
 - Troubleshooting/Testing PFC Pump PMP3 4-18
 - Troubleshooting/Testing the Oil Cooling Function..... 4-20
- Hydraulic Fluid Sampling 4-20**
 - Preventive Maintenance 4-20
 - After Repair..... 4-21
 - Fluid Sample Collection Points.....4-22
- Component Repair 4-23**
 - Return Valve Manifold A12 4-24
 - Remove4-24
 - Disassembly4-25
 - PFC Pump PMP3 4-26
 - Remove4-26
 - Install.....4-27
 - Multifunction Valve for Rotation Pump or Thrust Pump 4-27
 - Cartridge Repair4-27
 - Electric Displacement Control (EDC) 4-30
 - Operation4-30
 - Shaft Seal and Shaft Replacement 4-31
 - Return Filters/Manifold 4-34
 - Oil Cooler HE1 4-35
- Component Locations..... 5-1**
- Operation Overview..... 5-2**
 - Rotation Motors.....5-2
 - Rotation Pump.....5-2
 - Charge Pump.....5-2
 - 3-Speed/Loop Flush Valve5-2

Operation.....	5-2
System Specifications.....	5-3
Hose Connections	5-4
Hoses	5-5
Hoses	5-6
Rotation Pump Schematic.....	5-7
Charge Pump.....	5-8
Operation.....	5-8
Multifunction Valves	5-9
Operation.....	5-9
Electric Displacement Control (EDC).....	5-10
Operation.....	5-10
Torque Limiter Circuits	5-11
Torque Limiters.....	5-12
Forward.....	5-12
Reverse.....	5-12
3-Speed Loop Flush Valve Circuits	5-13
Low Speed Function	5-14
Medium Speed Function.....	5-14
High Speed Function	5-14
Rotation Motors	5-15
Basic Electrical Troubleshooting.....	5-16
Open Circuit Test.....	5-17
High Resistance Test.....	5-17
Short Circuit Test.....	5-17
Basic Hydraulic Troubleshooting	5-18
Mechanical Component Inspection	5-20
Pretest Inspection.....	5-21
Required Test Equipment	5-22
Pressure Check.....	5-23
Oil Sampling	5-23
Basic Troubleshooting Tables	5-26
Inspect Related Functions or Circuits	5-29
Pump Test Procedure.....	5-30
Analyzing Test Results.....	5-34
Diagnostic Observations Full Load.....	5-34
Inspect Electric Displacement Control (EDC)	5-35
Adjusting Pump Neutral Setting.....	5-36
Inspect System Relief Valves	5-37
Pressure Checks and Adjustments	5-37
Charge Pressure - Check	5-37
Pump Case Pressure Test.....	5-39
Test Objective	5-39
Special Tools and Materials.....	5-39
Conditions	5-39
Procedure	5-39
Pump Multifunction Valve Inspection.....	5-40

Charge Pump Relief Valve Inspection	5-41
Charge Pressure - Adjust	5-42
Rotation Motors Case Drain Flow Test.....	5-43
Analyzing Motor Test Results	5-44
Replace Drive Chuck.....	5-44
Special Tools and Materials	5-44
Drive Chuck Sub-Saver Installation/Removal	5-45
Special Tools and Materials	5-45
Thread Locking Compound Considerations.....	5-45
Install Sub-Saver	5-46
Remove Sub-Saver.....	5-46
Rear Seal Removal/Installation	5-47
Special Tools and Materials	5-47
Remove Seal	5-47
Install Seal.....	5-48
Gearbox Removal/Installation	5-48
Special Tools and Materials	5-48
Remove Gearbox	5-49
Install Gearbox	5-51
Motor Replacement	5-52
Special Tools and Materials	5-52
Removal	5-52
Install Motors	5-53
Rotation Shaft and Front Seal Removal/Installation	5-55
Special Tools and Materials	5-55
Remove Rotation Shaft and Front Seal	5-56
Install Rotation Shaft and Front Seal.....	5-57
Returning System to Service.....	5-60
Filter Kit Parts	5-61
Flushing the Rotation System.....	5-62
Special Tools	5-62
Procedure.....	5-62
Overview.....	6-1
System and Component Locations	6-1
Overview.....	6-3
Engine	6-3
Thrust/Pullback Pump	6-3
Thrust/Pullback Charge Pump.....	6-3
Rotation Charge Pump	6-3
Thrust Limiter (RockFire)	6-3
Anti-Crash and Slowdown Circuits	6-3
2-Speed Solenoid	6-3
Operation	6-3
System Specifications	6-4
Hose Connections	6-5
Hoses.....	6-6
Hoses.....	6-7
Electrical Diagram - Thrust/Pullback	6-8

Hydrostatic Pump (PMP2).....	6-9
Operation	6-9
Port Locations.....	6-10
Charge Pump	6-11
Operation	6-11
Multifunction Valves	6-12
Operation	6-12
Thrust/Pullback Controls	6-13
Operation Overview	6-13
Thrust/Pullback Joystick	6-14
Controller Pin Identification	6-14
Harness Connector Pin Identification	6-15
EDC Control Circuit	6-16
EDC Ground Circuit	6-17
Slowdown/Anti-Crash Circuit	6-18
Operation	6-19
Slowdown	6-19
Stop	6-19
Anti-Crash	6-19
RockFire/Trihawk Pressure and Mode Switches	6-20
RockFire/Trihawk Pressure and Mode Switches	6-21
Thrust Limiter.....	6-21
Operation.....	6-21
2-Speed Carriage Control Circuit	6-22
Troubleshooting the Hydrostatic Circuit.....	6-23
Indicators Used For Troubleshooting Closed Loops	6-24
Pump Noise	6-24
Fluid Temperature	6-25
Movement—One Direction Only	6-25
Movement—Neither Direction.....	6-26
Movement—Gearbox Creeps in Stop.....	6-27
Nulling the Pump	6-28
Control—Response is Sluggish	6-29
Checking Bypass Valves.....	6-30
Motor Torque	6-31
Charge Pump Inlet Restriction Measurement	6-32
Charge Pressure Measurement	6-33
Function Pressure Measurement	6-34
Case Pressure Measurement	6-35
Case Drain Flow Measurement	6-36
Case Drain Flow Analysis	6-37
Testing Joysticks	6-38
Testing Proximity Switches	6-39
Adjusting Proximity Switch	6-39
Multifunction Valves	6-40
Charge Pressure Relief Valve PRL1	6-41
Adjusting Charge Pressure Relief Setting	6-42
Charge Pump Replacement	6-42

Pump PMP2	6-43
Returning System to Service	6-45
Motor Removal/Installation	6-46
Special Tools and Materials	6-46
Remove Motors	6-46
Install Motors	6-49
Returning System to Service	6-50
Remove Trapped Air From Hydraulic Circuit.....	6-50
Carriage Removal/Installation	6-51
Special Tools and Materials	6-51
Remove Carriage.....	6-51
Install Carriage	6-54
Overview	7-1
Circuit Components	7-1
Circuit Schematic	7-2
Component Locations.....	7-3
Hydraulic Connections	7-5
Circuit Operation	7-6
PFC Pump	7-6
Ground Drive Valve Assembly A4	7-7
Drill/Track Valve DV27, Seat Switch Relay K7, Seat Switch S26, Solenoid L24	7-7
Brake Valves DV31 and DV32	7-8
Troubleshooting	7-9
Check Out Related Circuits and Components.....	7-9
Basic Troubleshooting Questions.....	7-9
Troubleshooting Electrical Circuits.....	7-10
Troubleshooting the Hydraulic Circuit.....	7-11
Mechanical Components	7-11
O-Ring Installation.....	7-12
Flow Test for PMP3	7-13
Set Up.....	7-13
Conducting the Test.....	7-14
Understanding the Results.....	7-15
Calculating Theoretical Flow and Acceptable Flow.....	7-15
SYMPTOM: Some Hydraulic Power but Machine Will Not Move.....	7-16
Towing the Machine	7-18
Conditions	7-18
Procedure	7-18
Valve Service	7-19
Cartridges	7-20
Coils	7-20
Housings.....	7-20
Assembly	7-20
Solenoid Coils	7-21
Coil Specifications	7-21
Coil Waterproofing	7-22
Troubleshooting	7-23
Pretest Inspection	7-23
Troubleshooting Machine Performance.....	7-25

Possible Results	7-25
Testing Ground Drive Performance	7-26
Troubleshooting/Testing Ground Drive Function.....	7-27
Troubleshooting Transport/Rack Valve Manifold A8.....	7-28
Test Equipment Needed	7-28
Specifications.....	7-29
Component Repair/Replace	7-29
Component Repair.....	7-30
Transport/RackValve Assembly A8.....	7-30
Remove.....	7-30
Install	7-30
Directional Valves DV10, DV11 and DV12.....	7-31
Load Check Plug.....	7-32
Relief Valve PV9	7-33
Brake Valves DV31 and DV32	7-34
Track Motors MH5 and MH6.....	7-35
Remove.....	7-35
Special Tools.....	7-35
Disassembly	7-36
Assembly.....	7-40
Timing	7-42
Install	7-45
Track Chain	7-45
Remove.....	7-45
Install	7-46
Track Tension Tightener	7-47
Remove.....	7-47
Install	7-47
Track Tension Adjustment.....	7-48
Planetary Gears.....	7-49
Remove.....	7-49
Disassembly	7-50
Assemble.....	7-51
Install	7-54
Overview.....	8-1
Components	8-1
Rod Handling Terms	8-2
Overview	8-2
Performance Checks	8-2
Troubleshooting.....	8-2
Electrical Diagram	8-3
Component Locations.....	8-5
Hydraulic Connections.....	8-8
Operation.....	8-9
PFC Pump PMP3.....	8-9
Hydraulic Enable Valve DV29 and Solenoid L26.....	8-9
Hydraulic Enable Circuit	8-10
Rod Loader Manifold A6.....	8-12
Function Operation.....	8-13
Extend or Retract Arms.....	8-13
Raise or Lower Lifts	8-13

Rod Loader Add Sequence..... 8-13

Troubleshooting 8-14

 Check Out Related Circuits and Components..... 8-14

 Basic Troubleshooting Questions 8-14

 Troubleshooting Electrical Circuits..... 8-15

 Troubleshooting the Hydraulic Circuit..... 8-16

 Mechanical Components 8-16

 Machine Performance 8-17

 Possible Results 8-17

 Testing Rod Loader Performance..... 8-18

 Troubleshooting the Rod Loader Load Function 8-20

 Troubleshooting Rod Lift Function 8-22

 Test Equipment Needed..... 8-23

 Specifications 8-23

 Component Repair/Replace..... 8-23

Component Repair 8-24

 Rod Loader Valve Manifold A6..... 8-24

 Remove 8-24

 Directional Valves DV13, DV12, and DV9 8-25

 Remove 8-25

 Rod Lift Cylinders CY1 and CY2 8-26

 Remove 8-26

 Disassemble 8-27

 Assemble 8-27

 Rod Loader Motor MH7 8-28

 Remove 8-28

 Disassemble 8-29

 Assemble 8-35

 Rod Box..... 8-42

 Remove 8-42

 Install 8-43

Flow Test for PMP3 8-43

 Setting Up 8-44

 Conducting the Test..... 8-45

 Understanding the Results..... 8-46

 Calculating Theoretical Flow and Acceptable Flow..... 8-46

Rod Transfer Arm Barrier Limit Switch 8-47

Anti-Crash Switch..... 8-47

Alignment of Rod Loader Arms to Rod Row 8-48

Rod Alignment to Drive Chuck..... 8-49

 Special Tools 8-49

 Procedure..... 8-49

Overview..... 9-1

Theory	9-1
Components	9-1
Component Locations	9-2
Hose Connections.....	9-4
Electrical Schematic	9-5
Hydraulic Schematic.....	9-6
Shared Components	9-7
Combination Valve Assembly A9	9-8
Operation.....	9-8
Stabilizer Function	9-9
Stabilizer LOWER Mode	9-9
Operation.....	9-9
Stabilizer RAISE Mode.....	9-10
Operation.....	9-10
Troubleshooting	9-11
Test Equipment Needed	9-11
Specifications.....	9-11
Pretest Inspection.....	9-12
Troubleshooting Machine Performance	9-13
Possible Results:.....	9-14
Testing Stabilizer Performance	9-14
Troubleshooting Stabilizer Function.....	9-15
Troubleshooting Combination Valve A9.....	9-16
Component Repair/Replace	9-17
Component Repair	9-17
Combination Valve Manifold A9	9-17
Remove.....	9-17
Install	9-17
Stabilizer Valve Manifold A25	9-18
Stabilizer Cylinder CY5.....	9-19
Remove.....	9-19
Disassembly	9-20
Assembly & Install.....	9-21
Stabilizer Cylinder Lock Check Valve CV18	9-21
Remove.....	9-21
Disassembly	9-22
Stabilizer	9-23
Circuits	10-1
Overview	10-1
Components	10-1
Component Locations	10-2
Hydraulic Connections.....	10-3
Electrical Circuit.....	10-4
Vise Hydraulic Circuit.....	10-5
Operation Overview	10-6
Operation	10-7
PFC Pump PMP3.....	10-7
Hydraulic Enable Valve DV29 and Solenoid L26.....	10-7
Hydraulic Enable Solenoid L26 Control Circuit	10-8
Front Vise Circuit Operation	10-10
Front Vise Clamp	10-10

Front Vise Unclamp	10-11
Rear Vise Circuit Operation.....	10-12
Rear Vise Clamp.....	10-12
Rear Vise Unclamp.....	10-13
Rear Vise Rotation Circuit Operation	10-13
Shared Components	10-14
Troubleshooting	10-14
Pretest Inspection	10-15
Test Equipment Needed.....	10-16
Troubleshooting Machine Performance.....	10-17
Possible Results:	10-17
Testing Vise Performance	10-18
Troubleshooting/Testing the Vise Functions	10-19
Front Vise Function	10-19
Rear Vise Clamp Function.....	10-20
Rear Vise Rotate Function.....	10-21
Specifications	10-22
Component Repair/Replace.....	10-22
Component Repair	10-23
Vise Valve Manifold A8	10-23
Removal	10-23
Disassembly	10-24
Front and Rear Vise Cylinders CY19 and CY17.....	10-25
Removal	10-25
Disassembly	10-26
Vise Rotate Cylinder CY7.....	10-27
Disassembly	10-28
Assembly	10-29
Overview.....	11-1
Theory.....	11-1
Components	11-1
Component Locations.....	11-2
Hose Connections	11-3
Schematic	11-4
Specifications	11-5
Shared Components	11-5
Rack Lift Function	11-6
Rack RAISE Mode	11-6
Operation	11-6
Rack LOWER Mode	11-7
Operation	11-7
Troubleshooting	11-8
Pretest Inspection	11-8
Test Equipment Needed.....	11-10
Troubleshooting Machine Performance.....	11-10
Possible Results:	11-11
Testing Rack Angle Performance	11-11
Troubleshooting/Testing the Rack Lift Function.....	11-12
Testing	11-13
Troubleshooting Drill/Track Valve DV27	11-14
Component Repair/Replace.....	11-14

- Component Repair..... 11-15
 - Valve Bank Assembly A5 11-15
 - Remove..... 11-15
 - Install 11-15
 - Directional Valve DV25 11-16
 - Load Check Plug..... 11-17
 - Relief Valve PV5 11-18
 - Rack Lift Cylinders CY13 and CY14 11-19
 - Disassembly 11-20
 - Assembly & Install..... 11-21
 - Rack Lift Cylinder Lock Check Valves CV8 and CV9..... 11-22
- Overview..... 12-1
- Circuits 12-1
 - Component Locations 12-2
 - Hydraulic Connections..... 12-3
- Component Overview 12-4
 - PFC Pump PMP3..... 12-4
 - Load Sense Solenoid Valve L25..... 12-4
 - Stakedown Manifold A7..... 12-4
 - Stakedown Motors MH9 and MH10 12-4
 - Operation..... 12-4
- Specifications 12-4
 - Hose Diagram - PFC Pump to Stakedown Manifold 12-5
 - Hydraulic Schematic..... 12-6
- Electrical Diagram 12-7
 - Stake Up Circuit Operation 12-8
 - Stake Down Circuit Operation 12-8
 - Stakedown Motor Counter Clockwise Operation (Stake Out)..... 12-9
 - Stakedown Motor Clockwise Operation (Stake In) 12-9
- Troubleshooting 12-10
 - SYMPTOM: Stakedown Operation Slow or Lacks Force..... 12-10
 - SYMPTOM: Stakedown Will Not Operate..... 12-10
 - Pretest Inspection..... 12-12
 - Troubleshooting Machine Performance 12-14
 - Possible Results:..... 12-14
 - Testing Stakedown Performance 12-15
 - Troubleshooting/Testing Stakedown Function..... 12-16
 - Test Equipment Needed 12-19
 - Specifications..... 12-19
 - Component Repair/Replace 12-19
- Component Repair..... 12-20
 - Stakedown Valve Assembly A7 12-20
 - Remove..... 12-20
 - Disassemble..... 12-21
 - Install 12-21
 - Stakedown Motors MH9 and MH10..... 12-22
 - Remove..... 12-22
 - Motor Breakdown 12-23
 - Install 12-24
 - Stakedown Cylinders CY10 and CY11 12-25
 - Remove..... 12-25

Disassemble	12-25
Install	12-26
Overview	13-1
Theory	13-1
Components	13-1
Component Locations	13-2
Hose Connections	13-3
Schematics	13-4
Auto Greaser Function	13-6
Greasing Mode	13-6
Operation	13-6
Troubleshooting	13-7
Pretest Inspection	13-7
Troubleshooting/Testing the Auto Greaser Function	13-9
Test Equipment Needed	13-9
Specifications	13-10
Component Repair/Replace	13-10
Component Repair	13-11
Auto Greaser Valve A21	13-11
Remove	13-11
Disassemble	13-11
Auto Greaser Cylinder CY6	13-12
Remove	13-12
Disassemble	13-13
Assemble	13-13
Overview	14-1
Theory	14-1
Components	14-1
Specifications	14-2
Component Locations	14-3
Hose Connections	14-6
Hydraulic Schematic	14-7
Electrical Schematic	14-8
Operation	14-9
Drill Fluid OFF	14-10
Operation	14-10
Wash Wand	14-10
Operation	14-10
Troubleshooting	14-10
Pretest Inspection	14-11
Test Equipment Needed	14-12
Testing Machine Performance	14-13
Possible Results	14-13
Testing Water Shutoff Valve Performance	14-14
Troubleshooting/Testing the Drilling Fluid Function	14-15
Troubleshooting/Testing Fluid Control Module A20	14-18
Water Control Module	14-18
Inputs/Outputs	14-18
Function Check	14-19
No Water Output	14-20

Pump Performance	14-22
Component Repair/Replace	14-24
Component Repair	14-25
Combination Valve Manifold A9	14-25
Remove.....	14-25
Install	14-26
Flow Control Valves FV3 and FV4	14-27
Remove.....	14-27
Install	14-27
Fluid Shutoff Valve Assembly A26 and Shift Valve Assembly A27.....	14-27
Remove.....	14-27
Disassembly	14-28
Fluid Shutoff Cylinder CY15 and Ball Valve	14-29
Remove.....	14-29
Cylinder Disassembly	14-30
Ball Valve Disassembly	14-31
Ball Valve Assembly	14-32
Fluid Pump PMP4 — Apex or FMC	14-33
Remove.....	14-33
Fluid Pump PMP4 – Apex SC-45.....	14-34
Valve Disassembly	14-34
Piston Cup and Piston Rod Disassembly.....	14-36
Piston and Crankcase Disassembly	14-37
Fluid Pump PMP4 – FMC.....	14-38
Piston Cup Seal Removal/Installation.....	14-38
Special Tools and Materials.....	14-38
Remove Piston Cup Seals	14-39
Install Piston Cup Seals	14-42
Suction and Discharge Valve Removal/Installation.....	14-46
Special Tools and Materials.....	14-46
Remove Valves	14-46
Install Valves	14-48
Motor MH10 – Eaton 4000 Series.....	14-51
Special Tools.....	14-51
Disassembly	14-51
Assembly.....	14-55
Install Speed Sensor	14-57
Timing.....	14-59
Overview	15-1
Theory	15-1
Functions.....	15-1
Components	15-2
Component Locations	15-3
Electrical Schematic	15-5
Hydraulic Schematic.....	15-6
Hydraulic Lockout Function.....	15-7
Operation.....	15-7
Backup Engine Shutdown Function for Hydraulic Lockout	15-7
Engine Shutdown Lockout Function.....	15-8
Option Procedure	15-8
Operation.....	15-8

- Troubleshooting 15-9**
 - General System Information..... 15-9
 - Base Module Indicators 15-10
 - Power On..... 15-12
 - Remote Unit On15-12
 - Base Module Run15-12
 - Lockout Mode 15-13
 - Power Off 15-13
 - Remote Registration 15-14
 - Battery Condition 15-15
 - Low Battery.....15-15
 - Discharged Battery15-15
 - Recharge Battery15-15
 - Performing Remote Lockout Functions 15-16
 - Resuming Operation After Remote Lockout..... 15-17
 - Flashing Lights.....15-17
 - Troubleshooting/Testing the Remote Lockout Function..... 15-18
 - Remote Unit15-18
 - Base Module15-19
 - Verify Software15-19
 - Hydraulic or Engine Shutdown Lockout Mode.....15-20
 - Battery15-20
 - Battery Charger15-21
 - Terminal Test.....15-21
 - Flow Chart for Determining Machine Problem (Without Remote) 15-22
 - Flow Chart for Determining Machine Problem (With Remote) 15-23
- Overview..... 16-1**
- Theory..... 16-1**
 - Circuits 16-1
 - Components 16-2
 - Component Locations..... 16-3
 - Strike Alert Module Daily Tests 16-4
 - Current Test.....16-4
 - Voltage Test.....16-4
 - Electrical Schematic 16-5
 - Voltage Strike Circuit 16-6
 - Operation16-6
 - Current Strike Circuit 16-6
 - Operation16-6
- Troubleshooting/Testing 16-7**
 - Determining What To Troubleshoot16-7
 - Daily Test16-7
 - Control Panel Light 16-8
 - Strike Alert Module Lights 16-9
- Component Repair 16-10**
 - Voltage Stake E1 16-10
 - Strike Alert Coil Assembly L25 16-11