



Volvo Truck Corporation

Curitiba, Brazil

Service Bulletin Trucks

Date	Group	No.	Release	Page
12.2011	370	00	03	1(82)

Wiring diagrams
VM, EM-EU5, CHID E133361-

Wiring diagrams Contents

“Example of wiring diagram”, page 2

“List of sub-diagrams”, page 5

“Sub-diagrams”, page 7

“List of illustrations”, page46

“Illustrations”, page47


“List of fuses”, page72

“List of relays”, page75


“List of connectors”, page76

“List of components”, page79

“Electrical cables colours”, page82

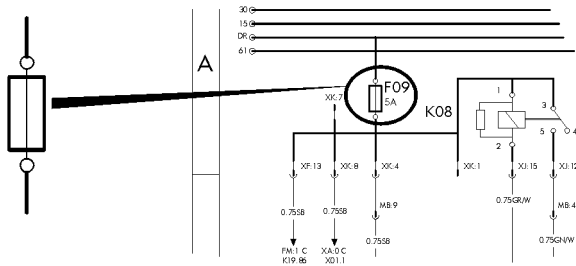

Fuse.

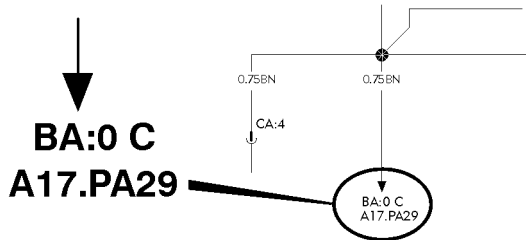


Reference arrow for BA wiring diagram, coordinate 0 C, component A17, connector PA, pin 29.


GEARTRONIC

I-SHIFT


POWERTRONIC

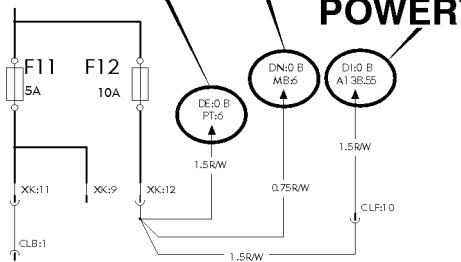


The maximum number of variants has been included in this wiring diagram. Therefore, remember that not all of the components and cables listed here will be installed in your vehicle. Their presence or absence will depend on the variants which are used in your vehicle.

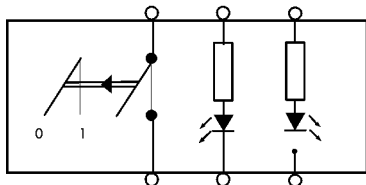


Switch

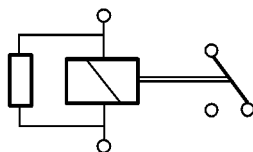


Relay.

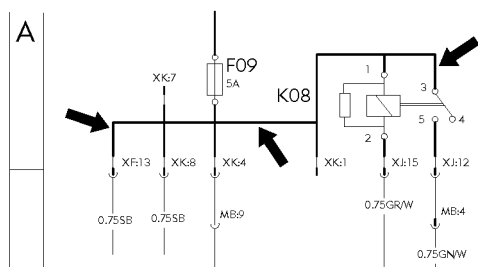


Conduction path on the printed circuit board.

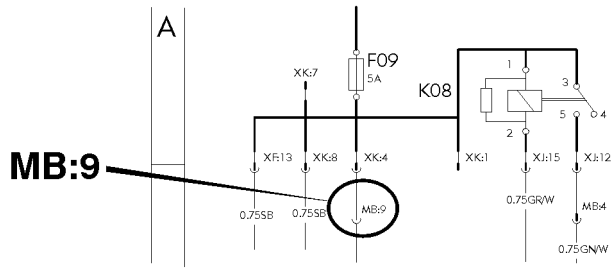


Connector MB pin 9.

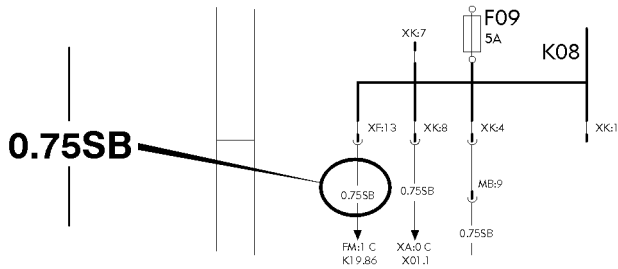


Cable section and colour

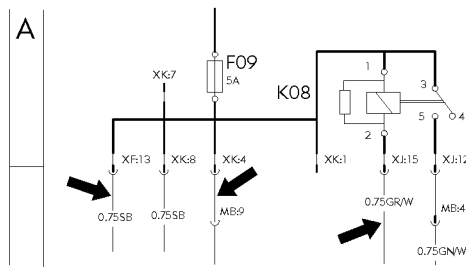


Single lines, cables

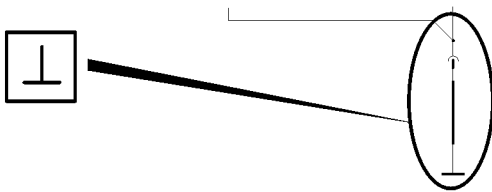

Connection to ground on the printed circuit board.

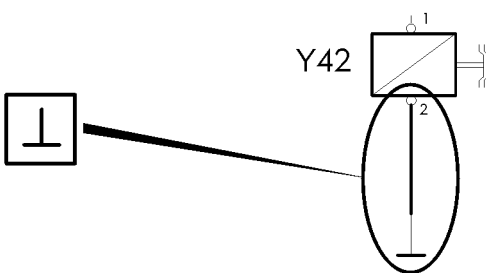

Wireless connection to ground.

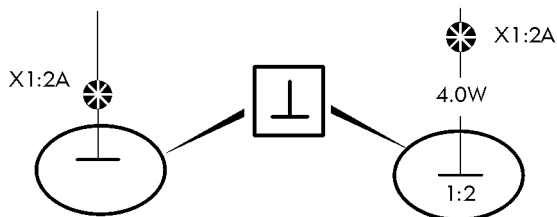


The same connection point can be shown for several diagrams. The cable from the connection point to ground is depicted and coded in only one diagram (ZC connections to ground). In the other diagrams it is shown as in the picture.

List of sub-diagrams

List of sub-diagrams

AA	Power supply, starter system.....	“” , page 7
AG	Accessories power supply	“” , page 8
BA	Engine ECU.....	“” , page 9
BA2	Engine ECU.....	“” , page10
BB	Gateway / OBD	“” , page11
BX	Telematics	“” , page12
BY	Dynafleet	“” , page13
CE	Headlights and Position lights	“” , page14
CF	Spot lights.....	“” , page15
CG	Auxiliary fog lights	“” , page16
CK	Brake light	“” , page17
CL	Exhaust brake	“” , page18
CN	Direction indicator light	“” , page19
CV	SCR.....	“” , page20
DL	Differential lock	“” , page21
EA	Reversing light.....	“” , page22
EE	ABS E-version	“” , page23
EF	ABS trailer connection	“” , page24
ER	Interior light.....	“” , page25
EX	12V Power supply	“” , page26
FA	Horn.....	“” , page27
FW	Fifth wheel light	“” , page28
GA	Climate unit air conditioner	“” , page29
HA	Climate unit air conditioner	“” , page30
HC	Engine preheater	“” , page31
HD	Air cooler	“” , page32
HG	Electrically heated/Operated mirror	“” , page33
HM	Fuel filter heater	“” , page34
JA	Radio	“” , page35
KA	Electric window winders	“” , page36
KH	Central door locking	“” , page37
LD	Power take off.....	“” , page38
LS	Range / Area inhibitor.....	“” , page39
MA	Bogie lift.....	“” , page40

MB	Split gearbox	“”, page41
MC	Eaton gearbox	“”, page42
NA	Instruments, LHS, unit (standard version)	“”, page43
NC	Tachograph.....	“”, page44
ZA	Earth connections.....	“”, page45

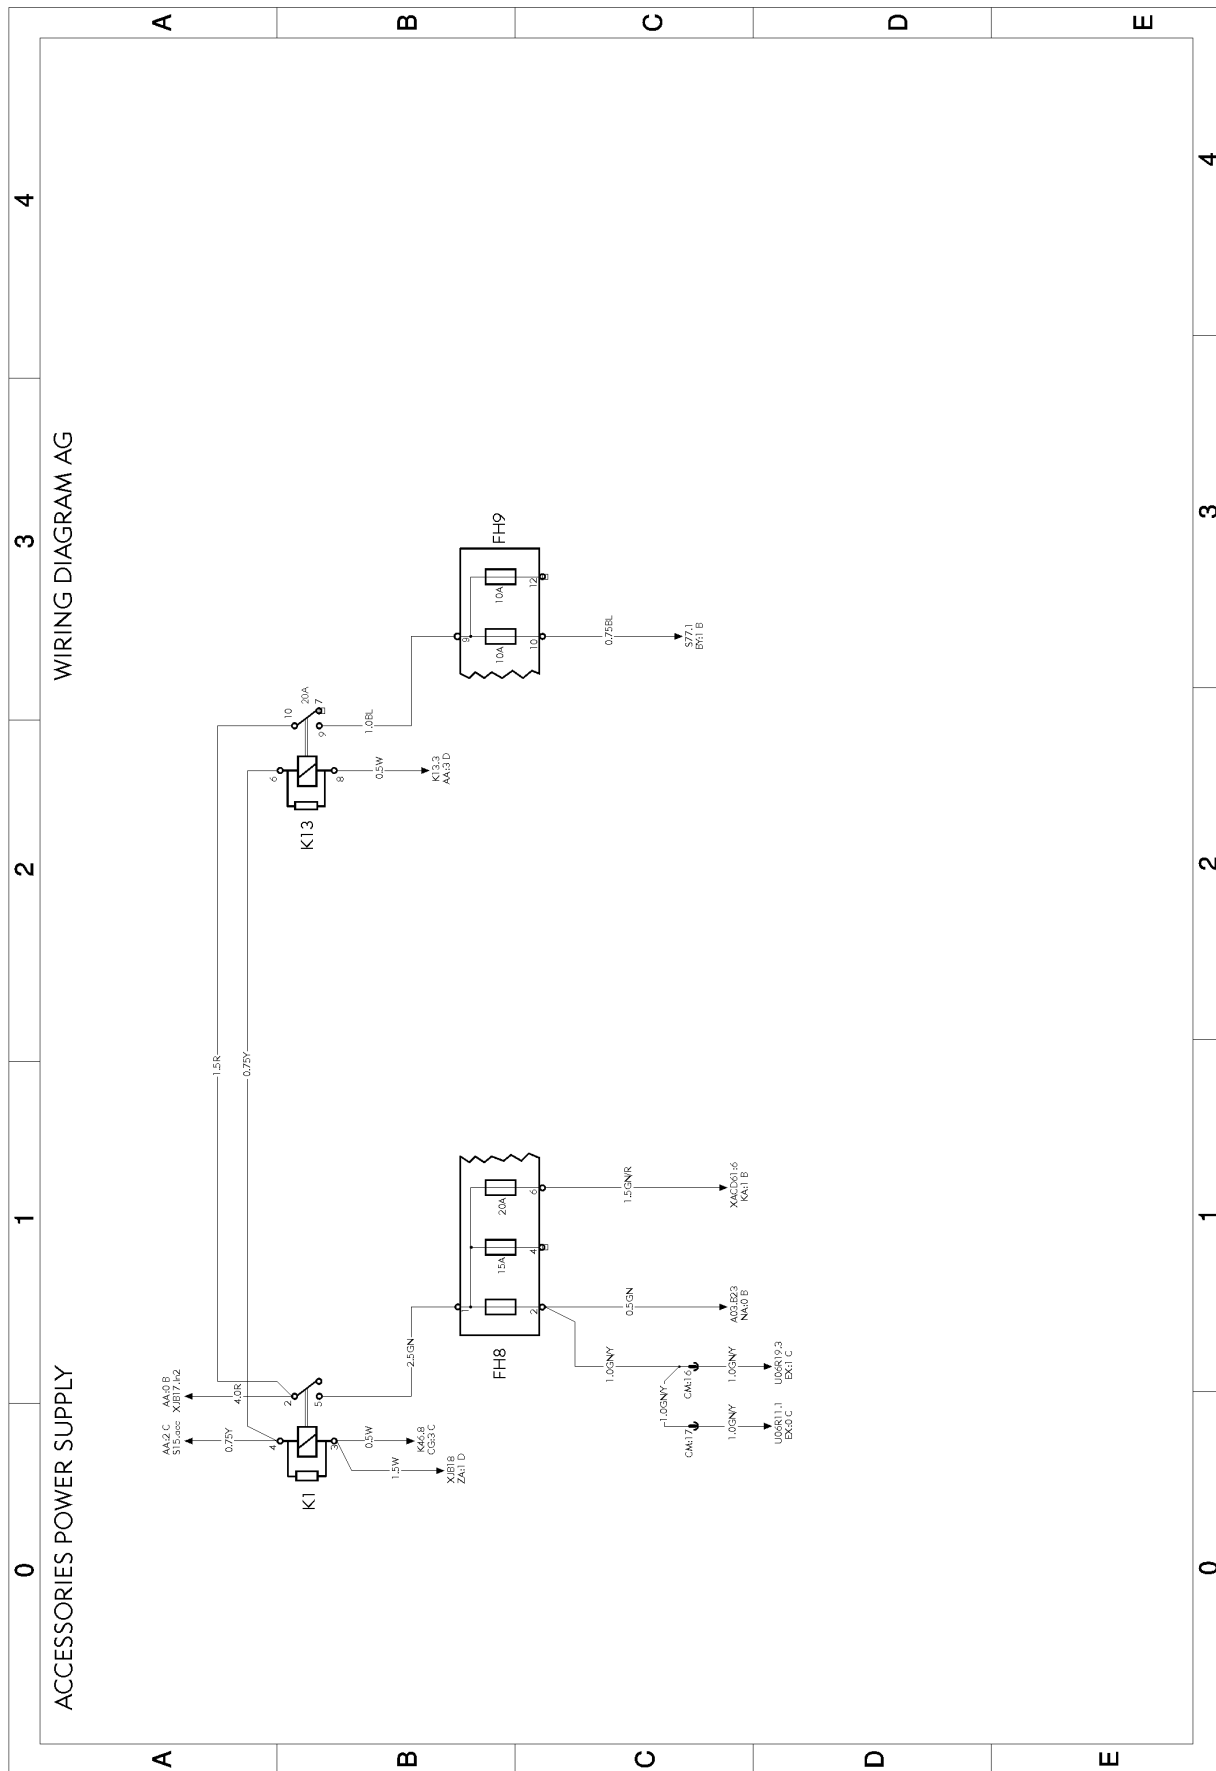

C3066545