

# **Operator's Manual Supplement VN, VHD**

**VOLVO**

# Foreword

This manual contains information concerning the safe operation of your vehicle. It is extremely important that this information is read and understood before the vehicle is operated. This manual also contains a considerable amount of information concerning the vehicle, such as vehicle identification, Preventive Maintenance recommendations and a log for your service records. Please keep this in the vehicle at all times. Information from other component manufacturers is supplied in separate manuals in the Owner's Package.

**NOTE!** It is important that this manual stays with the vehicle when it is sold. Important safety information must be passed on to the new customer. The service information contained in this manual gives the owner important information about maintaining the vehicle but is not intended as a substitute for the Preventive Maintenance Service Manual and must not be regarded as such.

The National Highway Traffic Safety Administration (NHTSA) and Volvo Trucks North America, Inc. should be informed immediately if you believe that the vehicle has a defect that could cause a crash, injury or death.

Contact NHTSA by calling the Auto Safety Hotline at 1 (800) 424-9393 (or 366-0123 in the Washington, DC area) or by writing to: NHTSA, U.S. Department of Transportation, Washington, DC 20590.

**Volvo Trucks North America, Inc.**  
Greensboro, NC USA

**Order number: PV776-20 169629**

© 2002 Volvo Trucks North America, Inc., Greensboro, NC USA

All rights reserved. No part of this publication may be reproduced, stored in retrieval system, or transmitted in any forms by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Volvo Trucks North America, Inc..

# Contents

<b>General Information</b> .....	1
Introduction .....	1
EPA Emissions Performance Warranty .....	2
Noise Emissions .....	8
Noise Control System, Operator Inspection and Maintenance Requirements .....	11
Exhaust System .....	12
Air Intake/ Air Induction System .....	13
Cooling System .....	14
Sound Shielding and Insulation Devices .....	15
Noise Control Log .....	16
<b>Heating and Air Conditioning</b> .....	17
General .....	17
Climate Unit Main Control Panel .....	19
Automatic Temperature Control (ATC) Overview .....	26
Cab Ventilation .....	29
Cab Air Filter .....	30
<b>Brakes</b> .....	31
Parking Brake Alarm .....	31
Audible Warnings: .....	31
Ignition mode Warning .....	31
Running mode Warning .....	32
Alarm Warning .....	32
<b>Power Steering</b> .....	33
Adjustable Steering Column (option) .....	33