

Volvo Xc60 2010 Wiring Diagram

Full download: <http://manualplace.com/download/volvo-xc60-2010-wiring-diagram/>



VOLVO XC60

WIRING DIAGRAM 2010



TP 39153201

Vehicles with SRS (Airbag)/SIPS bag/IC (Inflatable Curtain)

Warning!

Extra caution must be exercised when working on vehicles equipped with SRS/SIPS bag/IC in order to avoid:

1. Personal injuries when performing repair work.
2. Damage or malfunction of the SRS/SIPS bag/IC system.

Work involving the SRS/SIPS bag/IC systems or other components in the vehicle that may affect the SRS/SIPS bag/IC systems must always be performed by an authorized Volvo workshop.

In case of doubt, consult the SRS and SIPS bag/IC service manual.

Is the vehicle equipped with SRS/SIPS bag/IC?

Vehicles with SRS are most easily recognized by the letters SRS in the center of the steering wheel. If the vehicle also has a passenger side airbag, the letters SRS are stamped on the dashboard above the glove compartment. SRS vehicles from 1993 and onward also have explosive seat belt tensioners. SIPS bags are only installed on SRS vehicles from 1995 and onward. SIPS bag decals are located on the windshield and seat compartment. Vehicles with IC can be recognized by the letters IC on the C/D panel (4 door) or the B panel (5 door).

General recommendations

- Be especially careful when working on or around SRS, SIPS, and IC components.
- Make sure that no wires are pinched, frayed, or pierced.
- Never install accessories by the sensors.
- Where applicable, work on the steering wheel, steering shaft, or steering gear must be done in accordance with the methods in the SRS section of VIDA.
- Certain components of the aforementioned systems must be grounded while working. Read the appropriate sections in VIDA.
- Install no accessories in the areas between the A and B-posts, the B and C-posts, and the C and D-posts.

Test terminal

Data link connector in the passenger compartment.

Changes implemented up to and including December 2008

Any changes made to the vehicles after this date are not included in the manual. If necessary refer to service bulletins.

Volvo models are sold in versions adapted for different markets. These adaptations depend on factors such as legal requirements, taxation, and market demands.

This manual may therefore include illustrations and text that do not apply to the vehicles in your country.

Ordering:

Electronic Wiring Diagrams (EWDs) can be ordered from the Technical Information Shop (TIS) at www.volvocarstechinfo.ford.com/vss

We reserve the right to make modifications.

Table of Contents 1:2

Vehicles with SRS (Airbag)/SIPS bag/IC (Inflatable Curtain)	2
Explanations	5
Abbreviations	5
How to use the wiring diagrams 1:2	6
Electrical distribution 1:2	8

Fuses

Distribution box in engine compartment F1-F7	10
Distribution box in engine compartment F9-F24	11
Distribution box in engine compartment F25-F30	12
Distribution box in engine compartment F31-F37	13
Distribution box in engine compartment F38-F43	14
Central Electronic Module (CEM) F1 - F13	15
Central Electronic Module (CEM) F14 - F19	16
Central Electronic Module (CEM) F20 - F28	17
Rear electrical center FA1-FA12	18
Distribution box in cargo compartment FB1-FB12	19
Rear electrical center FD1-FD7	20
Battery PF1-PF2	21

Relays

Relays in the engine compartment R2	22
Relays in the engine compartment R8-R9	23
Relays in the engine compartment R10-R13	24
Distribution box in cargo compartment RA1-RD1	25
Central Electronic Module (CEM)	26

Ground connections

Overview	27
31/1 - 31/7	28
31/10 - 31/15 continues	29
31/15 - 31/68	30
31/83 - 31/89	31
31/90 - 31/XX10	32
31/XX14 - 31/TRM	33

Control modules

Overview locations	34
Overview designations	35
Central Electronic Module (CEM) 1:3	36
Data communication high speed CAN	39
Data communication intermediate speed CAN, LHD	40
Data communication intermediate speed CAN, RHD	41
Data communication Local CAN	42
Data communication, LIN 1:2	43
Data communication MOST	45
Steering Wheel Module (SWM)	46

Group 23 Fuel system

Engine management system 6-Cyl. 1:2	47
Engine management system, 6-Cyl. B6324S2 1:2	49
Engine management system, 6-Cyl. Turbo 1:2	51
Engine management system, 5-Cyl. Diesel EURO5 1:3	53
Emission control 6-Cyl.	56

Group 26 Cooling system

Cooling fan 5-Cyl. Diesel EURO5	57
Cooling fan 6-Cyl.	58

Group 27 Engine controls

Cruise control	59
----------------------	----

Group 32 Alternator and voltage regulator

Power supply	60
--------------------	----

Group 33 Starting system

Starting system	61
-----------------------	----

Group 35 Lighting

High and low beam	62
High and low beam (Dual Xenon)	63
Beam length adjustment, manual	64
Running/Parking light, Tail lights	65
Running/Parking light, Tail lights (Dual Xenon)	66
Fog lights	67
Brake lights	68
Reversing lights	69
Follow-me-home lighting LHD	70
Follow-me-home lighting RHD	71
Interior lighting, LHD 1:2	72
Interior lighting, RHD 1:2	74
Active headlight	76
Lighting in door sill trims	77
Auxiliary lights	78

Group 36 Additional electrical equipment

Rain sensor	79
Direction indicator and hazard warning flashers LHD	80
Direction indicator and hazard warning flashers RHD	81
Wiper/Washer windshield	82
High pressure headlight washer	83
Wiper/Washer rear window	84
Horn	85
Keyless vehicle 1:2	86
Anti-theft alarm	88
Parking assistance	89
Collision warning with power brake booster	90
Tire pressure monitoring system (TPMS)	91
Alcohol lock	92

Table of Contents 2:2

Group 37 Wiring and fuses

Diagnostics system.....	93
Outlet 12V.....	94
Cable harness towbar/tow hitch 4-pin.....	95
Cable harness towbar/tow hitch 7-pin.....	96
Cable harness towbar/tow hitch 13-pin.....	97
USB unit (AUU).....	98

Group 38 Instruments

Seat belt reminder.....	99
Driver information module.....	100

Group 39 Other

Audio Premium 1:3.....	101
Audio 1:2.....	104
Cellular phone 1:2.....	106
DAB Radio.....	108
Telephone system Bluetooth.....	109
Bluetooth Handsfree.....	110
Multimedia & Traffic information.....	111
Satellite radio.....	112
Parking camera.....	113

Group 43 Transmission

Transmission M66.....	114
Automatic transmission, TF-80SC AWD.....	115
Differential electronic module (DEM).....	116

Group 55 Parking brake

Electric parking brake.....	117
-----------------------------	-----

Group 59 Brake system

Brake control system & DSTC.....	118
----------------------------------	-----

Group 64 Steering

Speed dependent power steering.....	119
-------------------------------------	-----

Group 76 Shock absorbers

Four-C.....	120
-------------	-----

Group 83 Doors and openings

Central locking front doors LHD.....	121
Central locking front doors RHD.....	122
Central locking rear doors.....	123
Central locking tailgate.....	124
Central locking fuel filler flap.....	125
Signal receiver central locking.....	126
Power windows front doors LHD.....	127
Power windows front doors RHD.....	128
Power windows rear doors.....	129
Power sunroof.....	130

Group 84 Exterior decorative elements, etc.

Power door mirrors LHD.....	131
Power door mirrors RHD.....	132
Heated door mirrors LHD.....	133
Heated door mirrors RHD.....	134
Blind spot information system LHD.....	135
Blind spot information system RHD.....	136
Heated rear window.....	137

Group 85 Interior equipment

Power driver's seat with memory function, LHD.....	138
Power driver's seat with memory function, RHD.....	139
Power passenger seat, LHD.....	140
Power passenger seat, RHD.....	141
Heated front seats.....	142
Heated rear seat.....	143

Group 87 Climate control system

Climate control system PTC-element.....	144
Climate control system 1:2.....	145
Parking heater, auxiliary heater.....	147
Parking heater, remote start.....	148

Group 88 Internal equipment

Rear-view mirror with automatic dimming.....	149
Supplemental restraint system 1:2.....	150
Remote controlled garage opening.....	152

Index 1:2.....	153
-----------------------	------------

List of components 1:5.....	155
------------------------------------	------------

Explanations

Abbreviations

Groups

Group 23	= Fuel system
Group 26	= Cooling system
Group 27	= Engine controls
Group 32	= Alternator and voltage regulator
Group 33	= Starting system
Group 35	= Lighting
Group 36	= Additional electrical equipment
Group 37	= Wiring and fuses
Group 38	= Instruments
Group 39	= Other
Group 43	= Transmission
Group 55	= Parking brake
Group 59	= Brake system
Group 64	= Steering
Group 76	= Shock absorbers
Group 83	= Doors and openings
Group 84	= Exterior decorative elements, etc.
Group 85	= Interior equipment
Group 87	= Climate control system
Group 88	= Internal equipment

Ignition switch symbols

X	= Accessories (audio position)
S	= Powered upon insertion of key
15	= Contact remains connected during start
15l	= Contact is broken while starting
30	= Constant power from the battery
50	= Start

Countries/Markets

A	= Austria
AUS	= Australia
B	= Belgium
CDN	= Canada
CH	= Switzerland
D	= Germany
DK	= Denmark
E	= Spain
EU/OS	= Markets outside USA and Canada
FIN	= Finland
GB	= Great Britain
ISR	= Israel
J	= Japan
KOR	= Korea
N	= Norway
NL	= Netherlands
S	= Sweden
USA	= United States of America
WEU	= Western Europe

Other

ACC	= Adaptive Cruise Control
Ag	= Silver plated
Au	= Gold plated
AUTO	= Automatic transmission
BLIS	= Blind spot information system
CAN	= CAN communication
DPY	= Display
ECC	= Electronic climate control system
ETA	= Throttle unit
EXC	= Exclusive
GDL	= Gas discharge lamp
HS	= High speed data bus
IR	= Infrared sensor
LIN	= LIN communication
LH	= Left-hand side
LHD	= Left-hand drive
MAN	= Manual transmission
MEMORY	= Memory driver's seat
MS	= Midspeed data bus
MMS	= Mass Movement Sensor
PETROL	= Gasoline
RH	= Right-hand side
RHD	= Right-hand drive
SCR	= Screened
SRS	= Airbag
T	= Turbocharged engine
W/O	= Without
2WD	= Two-wheel drive
4CYL, I4	= 4-cylinder engine
5CYL, I5	= 5-cylinder engine
6CYL, I6	= 6-cylinder engine
8CYL, V8	= 8-cylinder engine

Colors

BK, SB	= Black
BN	= Brown
BU, BL	= Blue
GN	= Green
GY, GR	= Gray
LGN	= Light Green
NL	= Natural
OG, OR	= Orange
PK, P	= Pink
RD, R	= Red
VT, VO	= Violet
WH, W	= White
YE, Y	= Yellow

How to use the wiring diagrams 1:2

The descriptions below apply in general to all wiring diagram manuals, although not all sections are necessarily contained in this manual.

A. Component designation

Every component has a component designation that consists of two parts.

The first part is a type number that describes the type of component in question, for example 3/xx.

The second part of the designation is a serial number, e.g. x/2.

Together, this constitutes a component designation, e.g. 3/2.

At the end of the manual is a list of components, where, with the help of the component designation, you can read off the name of the component, for example, 3/2 = light switch.

List of type numbers

The list shows which type of component that respective type numbers refer to, for example, 3/x = switch, 6/x = electric motor, etc.

1	Battery
2	Relay
3	Switch
4	Control module
5	Driver information module
6	Electric motor
7	Sensor
8	Actuator
9	Heating element
10	Light
11	Fuse
15	Electrical distribution rail/box
16	Audio
17	Service/diagnostics
18	Contact reel
19	Meter
20	Ignition component/shunt
27	Optics
31	Ground connection
73	Branching point
74	Connector

B. Branching points

The wiring diagrams contain numbered branching points, for example 73/5035.

This manual contains a section with a list of branching points. This list shows all the components that are connected to each branching point.

The location of the branching points is shown in the "Cable harness routing in vehicle" section.

C. Connectors

Connectors provide a bridge between two cable harnesses and are described in the "Connectors" section.

D. Electrical distribution

Operation of the fuses and relays is shown in the "Electrical distribution" section.

E. Data communication

Today's cars contain CAN, LIN and MOST networks that transfer information. Connections to these networks are not shown in their entirety in the respective wiring diagram. Complete information on CAN, LIN and MOST communication is found in the section "Control modules".


F. Abbreviations

A number of different abbreviations are used in the manual. These are explained in the section "Abbreviations".


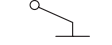

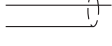

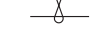






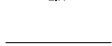


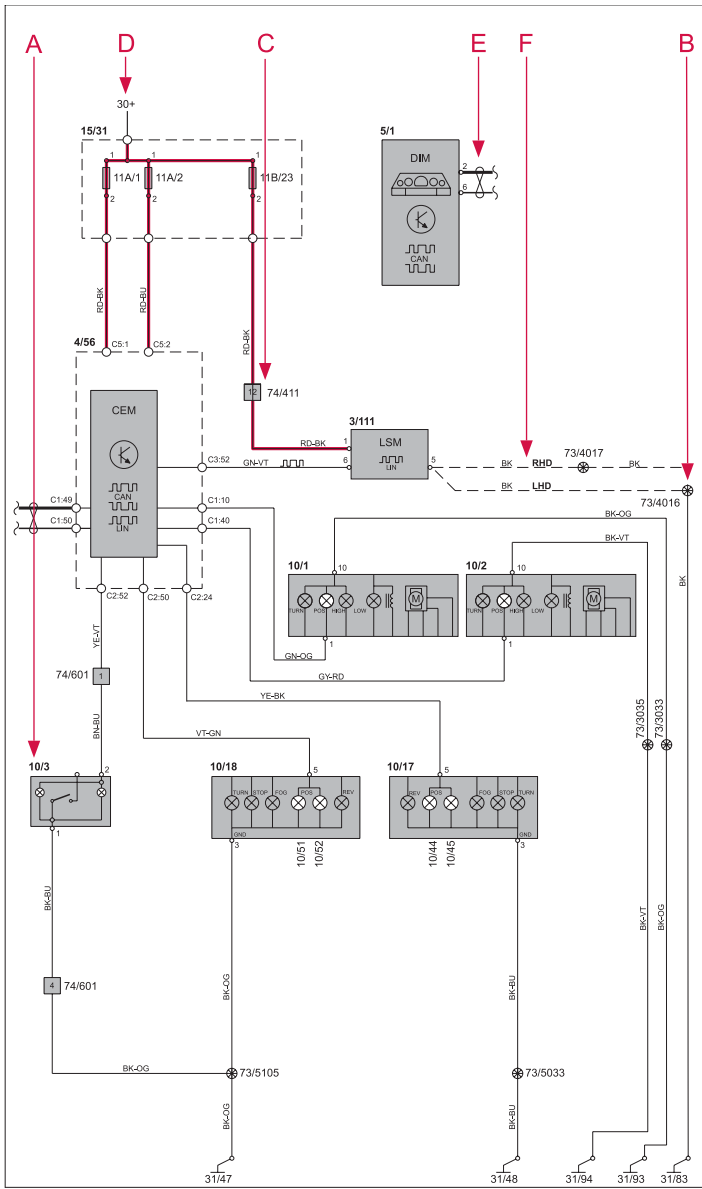

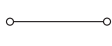
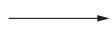



G. Component location


The end of the manual contains a section that describes component appearance and location in numerical order.

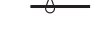How to use the wiring diagrams 2:2

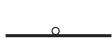

List of symbols


-  = System voltage
-  = Ground connection via wiring
-  = Ground connection in component/chassis
-  = Screened wire
-  = Junction point
-  = Twisted cable
-  = Electrical connection
-  = Variant
-  = CAN communication
-  = CAN high data signal (CAN H)
-  = CAN low data signal (CAN L)
-  = LIN communication
-  = LIN communication
-  = DIN cable, coaxial cable, etc.
-  = Data communication
-  = CAN communication
-  = MOST communication
-  = MOST communication
-  = Connection with distribution box
-  = Further connection to...
-  = Connector between cable harnesses
-  = Connector connected in component

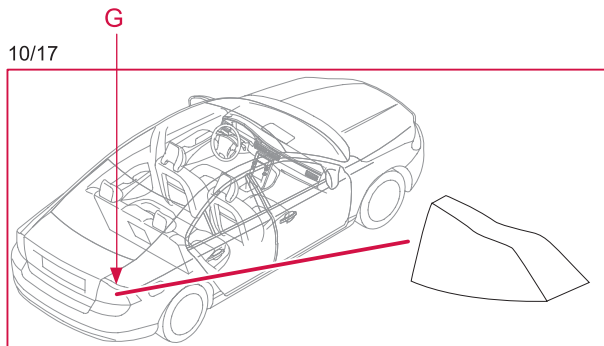

G029147

Electrical distribution 1:2


Overview, Electrical center and Cold zone in engine compartment

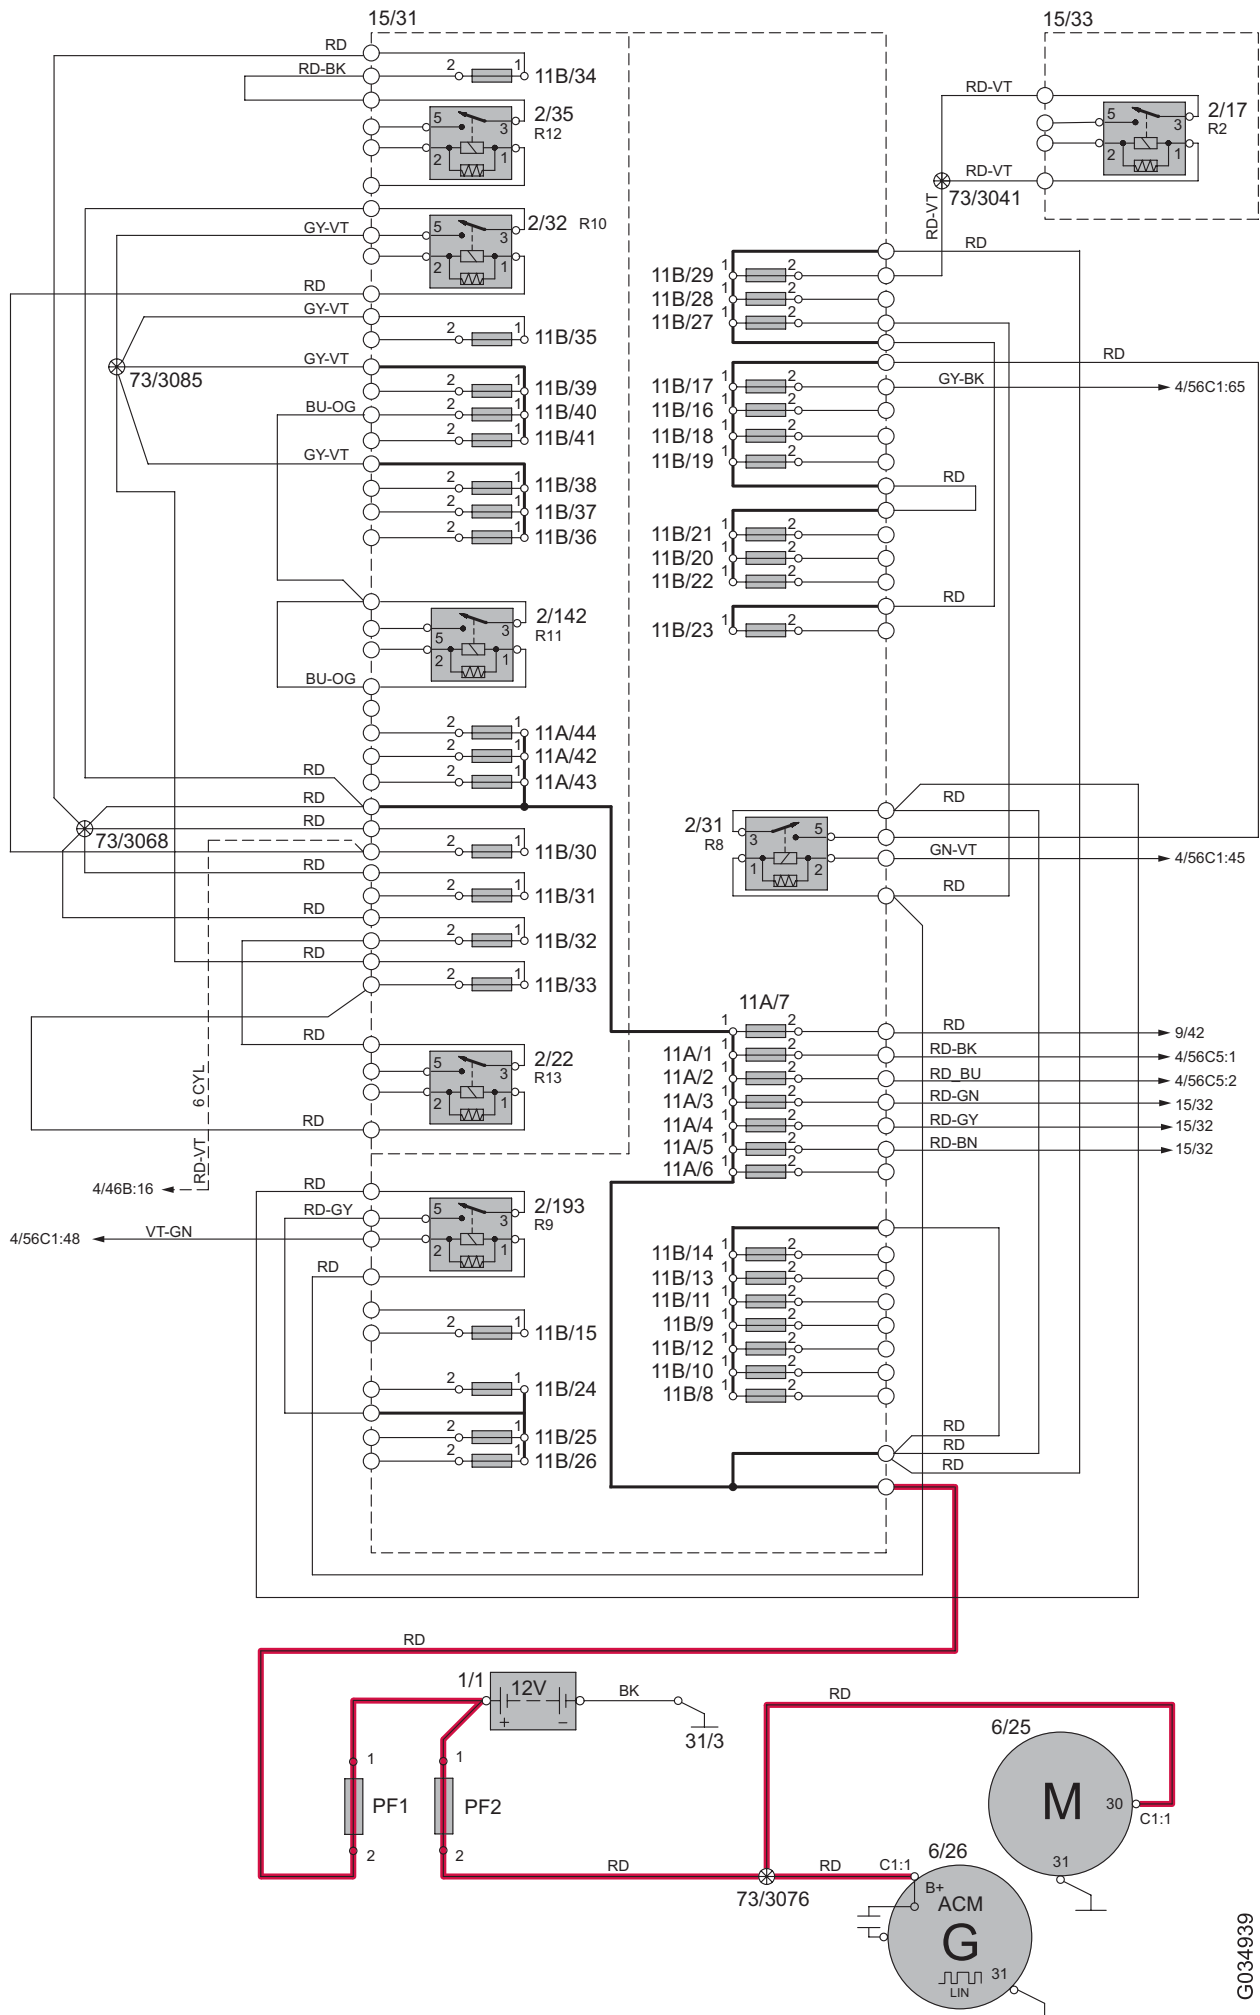

G034939

Electrical distribution 2:2


Overview, rear electrical center

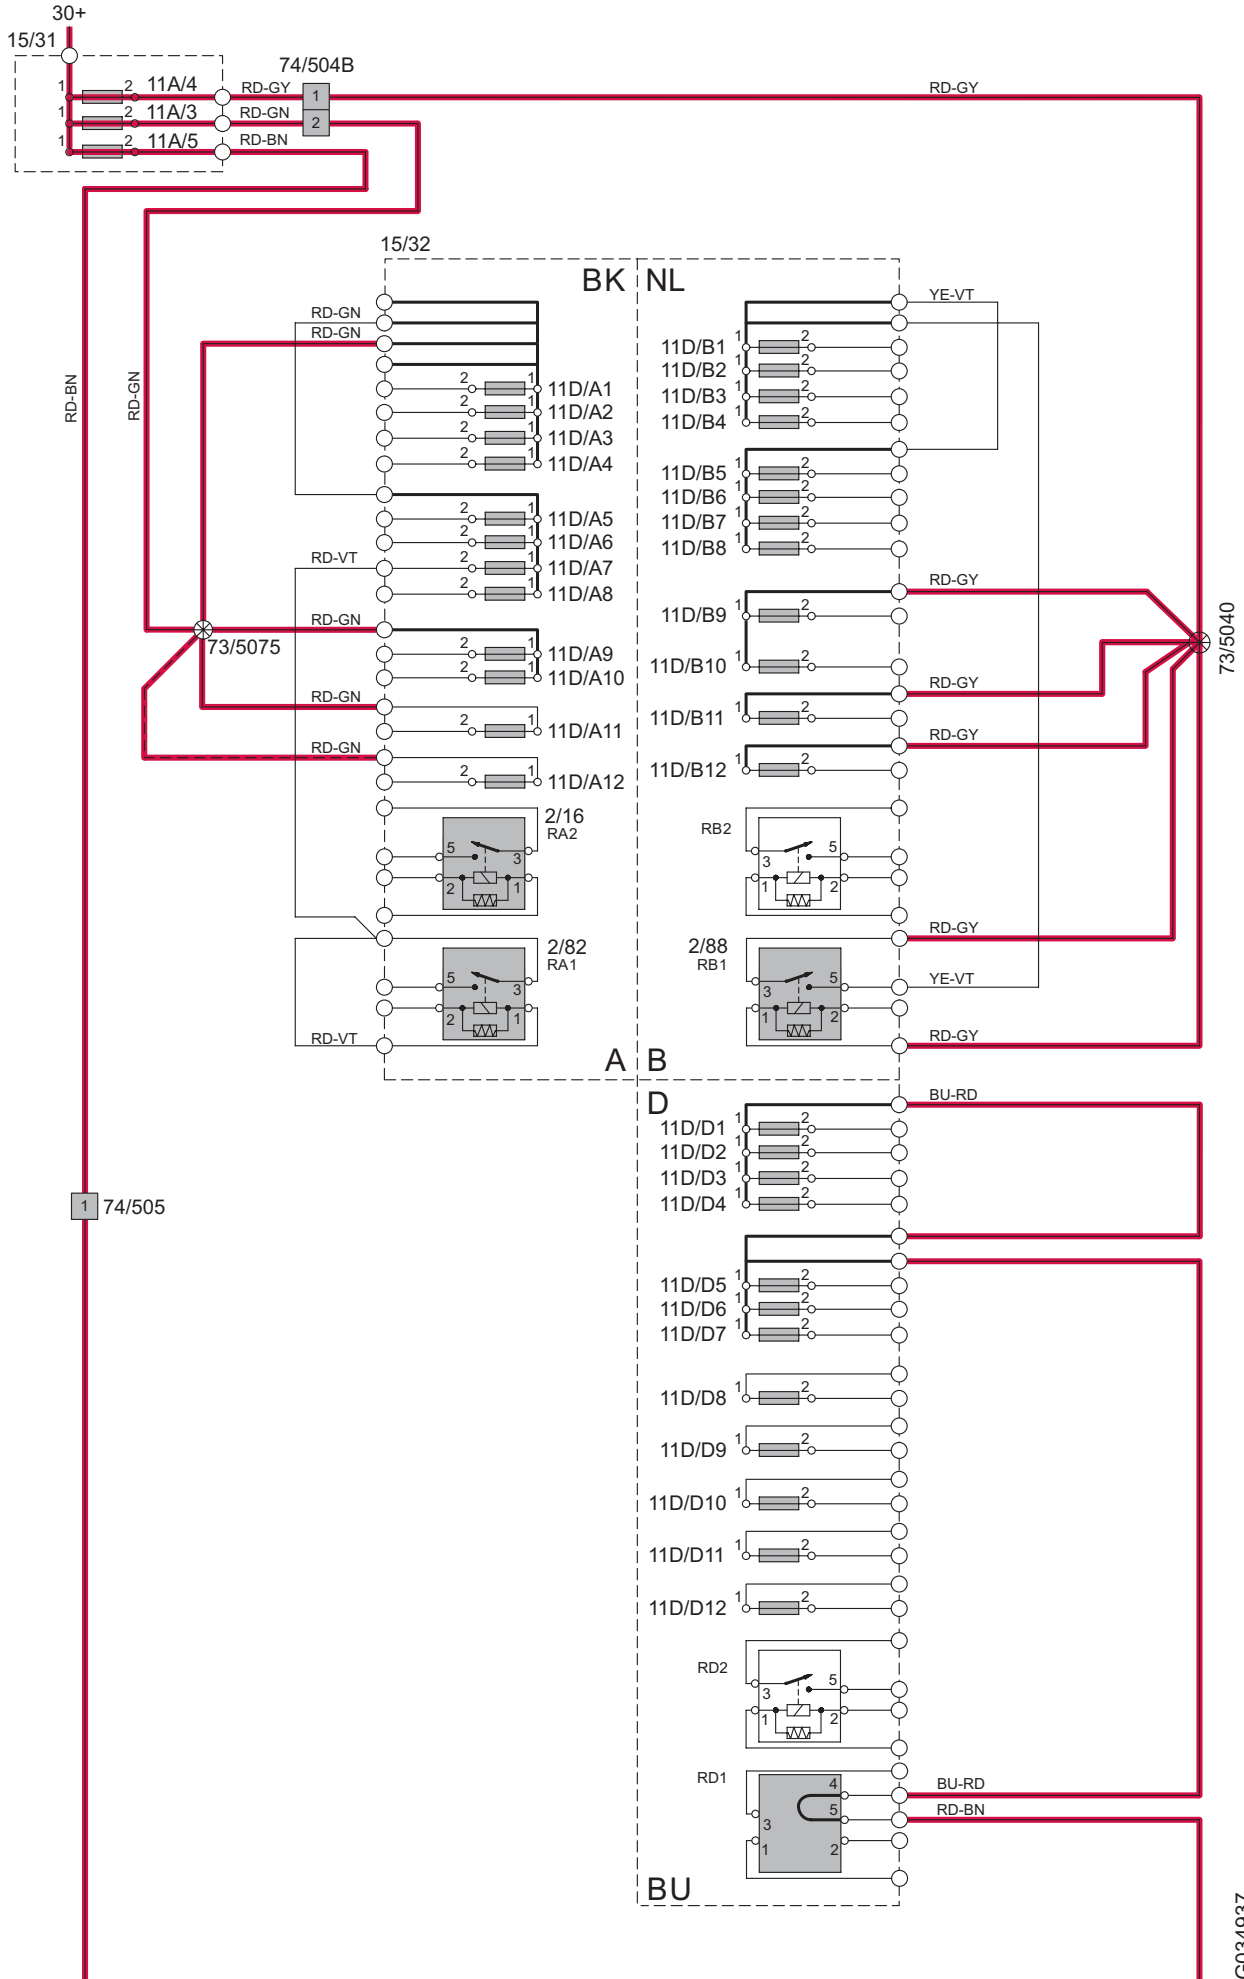

G034937

Fuses

Distribution box in engine compartment F1-F7

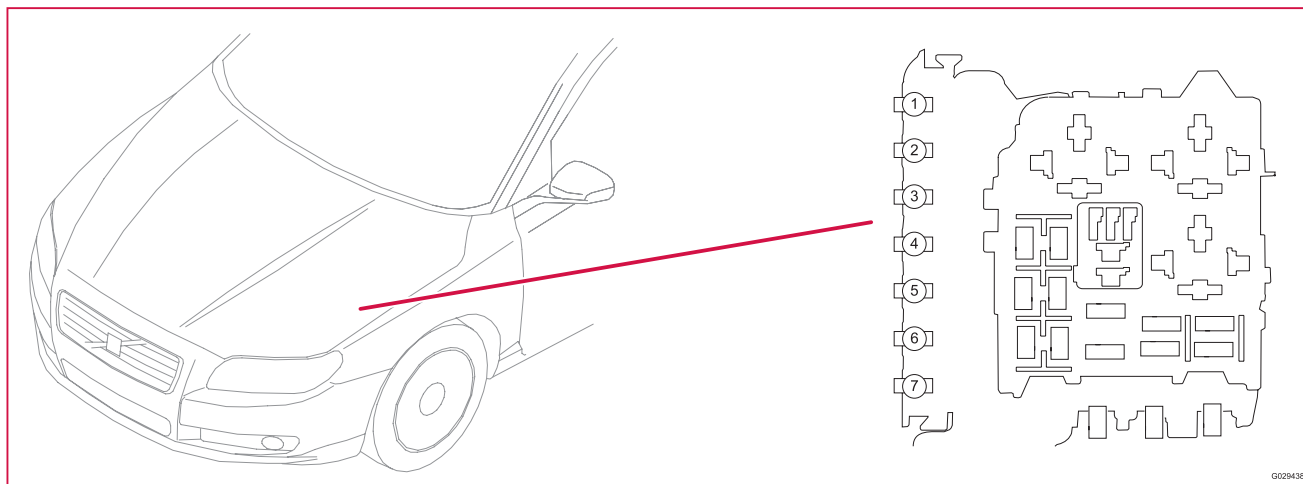

15/31 Distribution box in engine compartment

No.	No.	Fuse function	via	A
F1	11A/1	Main fuse for fuses in CEM	-	50
F2	11A/2	Main fuse for fuses in CEM	-	50
F3	11A/3	11D/A1-11D/A12 Fuses in cargo compartment fuse box	-	60
F4	11A/4	2/88 Relay, 15-feed rear 11D/B1-11D/B8 Fuses in cargo compartment fuse box 11D/B9-11D/B12 Fuses in cargo compartment fuse box	- 2/88 -	60
F5	11A/5	11D/D1-11D/D7 Fuses in cargo compartment fuse box	-	50
F7	11A/7	9/42 PTC-element	-	100
continues				