
REPAIR CATALOG

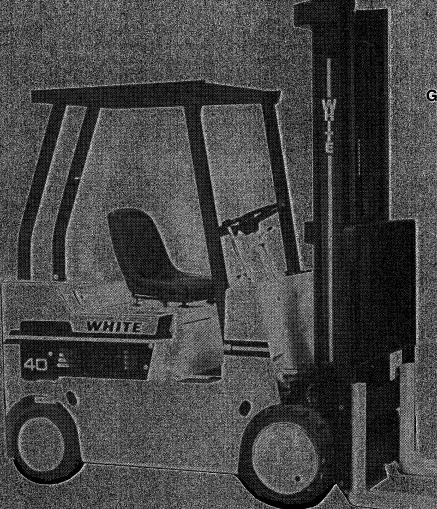

R-2245

SERIAL NUMBERS
GASOLINE AND LP-GAS
MA30C - 60C
5350001 and after

MA30C, 40, 50 AND 60C FORK LIFT TRUCKS



White Lift Truck
PARTS & MANUFACTURING CO. INC.

8600 JEFFERSON HIGHWAY, OSSEO, MN. 55369

QUICK REFERENCE CHART

Ref. No.	Part No.	DESCRIPTION	No. Pcs.
	4	OIL FUEL AND AIR FILTERS	
2 1 2 2 2 3	0-7302402 0P1873 0-7300768 0-3011650 5A698	Element-engine oil (3 per pkg.) Element-transmission fluid and hydraulic oil Element-air cleaner (Standard) Element-air cleaner (Cyclopac) Element-oil strainer, in transmission Strainer-oil, in hydraulic tank Pack-filter, LP-Gas	1 2 1 1 1 1 1 1
		IGNITION SYSTEM	
4 4 4	0-2504810 0-2504608 0-2506303	Plug-spark, Champion RJ-8 Cap-distributor Rotor-distributor Base Plate and module Key-ignition switch	4 1 1 1 1 1 1
		THERMOSTAT AND FAN BELT	
		Thermostat-engine thermostat control, 180° Belt-fan and alternator, 51" 0.6.	
		ENGTNE GASKET SET	
20	0-7302810 0-2090651	Kit-Carburetor repair (LP-Gas) Kit-Carburetor repair (Gasoline) Kit-gaskets, engine overhaul	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
		Kit-gaskets, valve grinding Kit-regulator repair, LP-Gas	$\frac{1}{2} (x, y)$
		HORN BUTTON ASSEMBLY	
3.	5A1066	Horn Button - assembly	$\{1, 1, \dots, 1\}$
		TRANSMISSION AND BRAKE KITS	
3!	5R139	Kit-seals, transmission control valve Kit-gaskets, transmission overhaul	1 1 1
		Kit-master cylinder repair Kit-wheel cylinder repair	$\frac{1}{2}$
	and the second s	TILT CYLINDER KIT	
20	0-7 30271 5	Kit-seals, tilt cylinder	. 1
		HYDRALIZER REPAIR AND SEAL KITS	
		Kit-repair, hydralizer Kit-seals, hydralizer	2 - 2
		SEALANT	
2	0-7301557	Sealant-inching nut, 30cc bottle	

PARTS GROUP INDEX

Page	Page
Accelerator Pedal	Ignition Lock Vacuum Switch
Accumulator	Ignition SystemF-2
Alternator	Instrument Panel
Air Cleaner E-2,E-3	
Auxiliary Valves D-9,D-10	Lamps
Axle Supports	Load Alert for UprightsC-11,C-12
	LP-Gas EquipmentE-5,E-6
Battery C-8	
Battery Tray C-8	Manifolds, EngineF-3
Brakes	Master Cylinder
Brake Linkage A-18	MufflerF-3
Diake Linkage A-10	Motor Mounts
Called for Batterin	riotor riounts
Cables for Battery	Neutral Start Switch
Camshaft Engine F-9	Neutral Start Switch
Carburetor, Gasoline Engine E-4	011 711. 7 1
Carburetor, LP-Gas Engine E-6	Oil Filter, EngineF-11
Choke Control	Oil Filter, Hydraulic Oil
Clutches, Transmission	Oil Filter, Transmission
Coil, Ignition F-2	Oil Pump, EngineF-11
Connecting Rods, Engine F-7	Overhead Guard
Control Valve, Lift and TiltD-6, D-7	
Control Valve, Transmission	Paint
ConverterA-11	Pistons and RingsF-7
Cooling SystemF-4	Positive Crankcase BreatherE-2
Counterweight	Power Steering Booster CylinderB-6
Cow1	Tower breering booster oylinder
Crankcase, EngineF-6	Quick Disconnect Coupling, HydD-3
	quiek bisconnect coupiing, myd
Crankshaft, EngineF-7	Daliatan Daliatan
Cylinder Head, EngineF-8	RadiatorF-4
	Rings for EngineF-7
Decals	
Differential and Cage	Seats
Distributor, IgnitionF-2	Spark PlugF-2
Dipstick, Transmission	Starting Motor
Dipstick, EngineF-6	Steering ColumnB-4
Dipstick, Hydraulic Tank	Steering CylinderB-6
Drive Axle and Wheels	Steering GearB-3 thru B-5
	Steering LinkageB-7
Fan	Steering MotorB-5
Flywheel and HousingF-12	Steering WheelB-2
Foot Accelerator	
Frame	Tilt Cylinder
Fuel Filler E-4	Thermostat, EngineF-4
Fuel Pump, EngineE-4	Transmission
rder rump, Engine4	Transmission Case
C - W (C 11-	
Gas ManifoldsF-3	Transmission Controls
Gasket SetsA-6	Transmission Control Valve
Gauges	
GovernorE-4	Valve, Upright Control
•	Valves, Intake and ExhaustF-8
Hood and Side Panels	
Horn	Water PumpF-5
Horn ButtonB-2	Wheels, Drive
Hydralizer and WheelsB-8,B-9	Wheels, SteeringB-9
Hydraulic Oil Lines	Wiring Harness
Hydraulic Pumps	
Hydraulic Quick Disconnect CouplingD-3	NUMERICAL INDEX
margaria dater proconnect contitues	TOTALLOUIS TIMES

FOREWORD

This catalog contains a complete list of parts for the lift truck. To assist in determining the part numbers and descriptions, the parts in this catalog are grouped according to their location on the lift truck. Reference numbers only are shown in each illustration. These numbers correspond to those in the reference number column in the list of parts which follows each "exploded view".

TYPICAL PARTS ARE SHOWN, AND MAY NOT ALWAYS BE IDENTICAL WITH CURRENT PARTS. REFER TO THE TEXT. "RIGHT OR LEFT" IS DETERMINED BY FACING TOWARD THE UPRIGHT FROM THE LIFT TRUCK SEAT.

To further assist in locating repair parts, the part numbers are arranged in numerical sequence and indexed at the rear of this catalog.

Component parts of assemblies are listed following the assembly itself and are identified as being part of the assembly by this notation following the description:

Consists of the following ... parts or Includes the following ... parts:

Part numbers only make up an assembly. Hardware items are not to be included.

Parts such as standard bolts, nuts, screws, washers, etc., are listed under the respective individual parts with which they are used. The quantity for many of the shims listed is shown as A.R. (as required). The correct amount of shims should be determined in order to get the proper clearance. Bolts and nuts listed are standard Grade 5, special grades will be shown in text.

Occasionally new part numbers replace old numbers in the Part No. column. In those cases where the new number substitutes for the old number, the old number will be enclosed in parenthesis and it will appear at the end of the text in the description column.

When in need of repair parts, order from your local dealer. All parts orders should plainly specify your name, post office address, and whether shipment is to go by parcel post, express, or freight. Claims of shortage or breakage should be made to the transportation company on receipt of goods.


Before returning repair parts to the factory or parts depot, it is necessary to secure written permission from the Company authorizing the return of such parts. In the returning of repair parts be sure the package is tagged with your name and address. Prepay transportation charges.

It is the policy of the Company to improve its products whenever it is possible and practical to do so. We reserve the right to make changes or add improvements in the design or construction of parts at any time without incurring the obligation to install such changes on products previously delivered.

GROUPS


- A Drive Wheels, Differential, Transmission and Brakes
- B Steering, Hydralizer and Steer Wheels
- C Frame, Driver Compartment and Wiring Harness
- D Hydraulics
- E Carburation and LP-Gas Systems
- F Engine and Accessories
- G Decals, Paint and Index

Ref. No.	Part No.	·		No. Pcs.				
	GASKETS AND REPAIR KITS							
	40-2000651	77.1						
	40-2090651 Kit-gaskets, engine overhaul 40-2090652 Kit-gaskets, valve grinding							
		Kit-gaskets, valve grinding Kit-water pump repair Kit-carburetor repair, gasoline						
	1							
		3		_		1 1		
		Kit-regulator repair, LP-Gas Kit-master cylinder repair Kit-wheel cylinder repair Kit-tilt cylinder repair						
	35P922							
	35P2200							
	20-7380073	Kit-repair, hy	draulic pu	ımp		1		
	35R139	Kit-gasket, tr	ansmissio	n overhaul		1		
		Consists of	the follow	wing:				
		7-10A3397 Wa	sher	1-35A12506	Gasket			
			Ring	1-35P613	Seal			
			sket	1-50A767	O-Ring			
	-		ng .	1-50A768	Ring			
			ng	1-50A961	O-Ring			
			sket	1-50A1745	Washer			
			im	1-50A1763	O-Ring	1		
		1-35A10947 Ga		7-50A1829	Stat-o-seal			
			sket	5-50A2878	O-Ring			
		1-35A12294 Sh		1-20-3000701	Ring			
	20-738081	Kit-seals, transmission control valve Consists of the following:						
		7-20-3009707	O-Ring	2-20-3003038	Seal			
		1-10A16405	O-Ring	1-35A8008	Seal *			
		2-10A16329	Seal	1-35A12506	Gasket			
				1-50A5180	O-Ring			
	20-7380115 Kit-repair, hydralizer Consists of the following:							
		donoises of	che lolle	<u>-</u>		,		
		1-20-3009347	Bushing	1-20-3009528				
		1-20-3009395	Sea1	1-35A5174	O-Ring			
		1-20-3009695	Bushing	1-50A1727	Sea1			
	20-7380116	Kit-seals, hydralizer Consists of the following:						
		1-35A5174	Retainer	1-20-3009528	Seal			
		1-35A6404	Seal *	1-50A1727	O-Ring			
		1-20-3009395	Seal	1-50A1760	O-Ring *			
		Note (*) Parts in kits not used.						
		, , = 32		•				
	1							

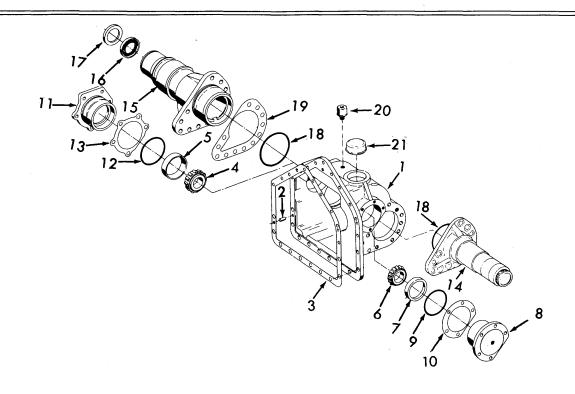

DIFFERENTIAL CASE AND HOUSINGS

Ref. No.	Part No.	DESCRIPTION	No. Pcs.	Ref. No.	Part No.	DESCRIPTION	No. Pcs.	
1 2 3 4 5 6 7 8 9 10 10 10 11 12	20-3001592 10A7059 10A7060 10A7051 10A7052 20-3011120 50A1743 50A3666 35A5442 35A5441 20-3010328 20-3011121	Case-Inc.Ref.#2 Screw-12pt.½ x 1½ Screw-12pt.3/8 x 1½ Washer-lock,3/8 Plug-hex,3/4-14 Pin-dowel,3/8 x 3/4 Gasket-diff.,.015 Bearing-LH Cup-bearing,LH Bearing-RH Cup-bearing,RH O-Ring-cap,3-3/16 OD Bolt-hex,3/8-16X1 Shim-cap,RH,.002 Shim-cap,RH,.003 Shim-cap,RH,.010 Cap-bearing,LH O-Ring-cap,3-7/16 Bolt-hex,3/8-16X1 Bolt-hex,3/8-16X1 Spacer-shift brkt.,9/16	1 8 12 1 2 1 1 1 1 5 AR AR AR 1 1 2 3 3	13 13 14 14 15 15 16 17 18 19 19 19 19 20 21	35A8241 35A8242 35A8243 20-7370037 20-7370053 35B8364 20-7370054 50A1642 50A1166 50A1164 Note (*) Note (+) 35A9511 35A8493 M333 35A5448 35A5447 35A5446 35A57276 35A5891 35A558	Shim-LH,.002 Shim-LH,.003 Shim-LH,.005 *Housing-RH,Inc.16&17 +Housing-RH,Inc.16&17 *Housing-LH,Inc.16&17 +Housing-LH,Inc.16&17 *Screw-12 pt,1/2X1 +Screw-12 pt.1/2X1-3/4 +Screw-12 pt.1/2X1-1/4 On standard drive axle On wide drive axle Seal-housing Collar-seal ret. 0-Ring-4¼ OD Shim-housing,.002 Shim-housing,.003 Shim-housing,.005 Shim-housing,.020 Shim-housing,.020 Shim-housing,.022 Breather,1/4 Plug-2-11/16	AR AR 1 1 1 1 2 2 10 12 2 2 AR AR AR AR 1 1	

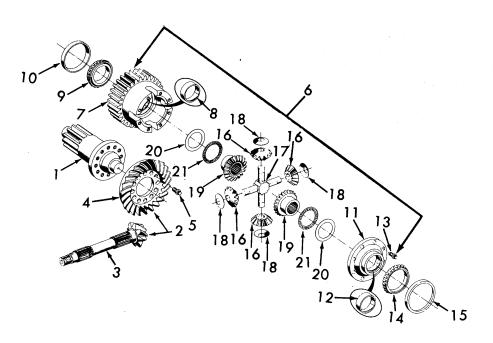

BULL	PINION	SHAFT	AND	DIFF.	ERENI	L'LAL (CAGE
			- 11				

Ref. No.	Part No.	DESCRIPTION		Ref. No.	Part No.	DESCRIPTION	No. Pcs.
1	35A9485	Shaft-bull pinion,12T.	1	11	36A7807	*Cover-w/bush.RH	1
2	20-6007679	Ring Gear & Pinion	1	12	35A8492	*Bushing-ream to fit	1
*		Inc. Ref.#3 & 4:		13	35A12566	*Bo1t-12pt.3/8x3/4	8
3	35A7803	Pinion-8 teeth	1	14	35A8235	*Bearing-cage cover	1
4	35A7819	Ring Gear-25T.	1	15	35A8236	Cup-cage cover	1
5	20-3000435	Bolt-12pt.lock,7/16x7/8	12	16	35A9451	*Pinion-cage,12T.	4
6	20-7380067	Cage-assy.(Inc.*)	1	17	35A7809	*Shaft-pinions	1
7	20-6009338	*Cage-w/bsh.30T	1	18	20-3006635	*Washer-thrust	4
3	35A8492	*Bushing-ream to fit	1	19	35A9452	*Gear-bevel,18T.	2
9	35A8237	*Bearing-cage,LH	1	20	35A7814	*Race-brg.2-23/32	2
10	35A8238	Cup-cage,LH	1	21	35A7815	*Bearing-thrust	2