




Illustrated Parts Breakdown Manual

EZ LOADER

Model EZ12 (Pre-01/08)

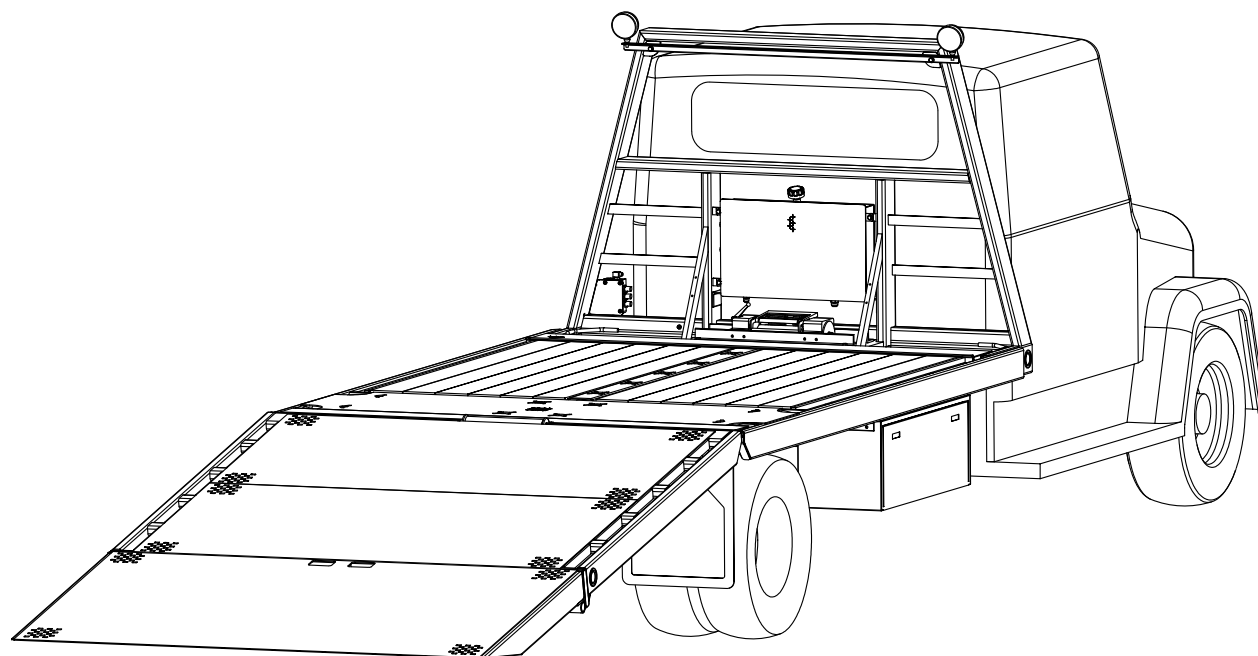

Xtreme Manufacturing
1415 West Bonanza Road
Las Vegas, NV 89106
(702) 858-2404
www.xtrememanufacturing.com

Copyright © 2008 By Xtreme Manufacturing

List of Effective Pages

This manual consists of 70 pages as listed below:

- Outside title page
- Inside title page
- Pages A through D
- Pages i through iv
- Pages 1-1 through 1-2
- Pages 2-1 through 2-10
- Pages 3-1 through 3-8
- Pages 4-1 through 4-14
- Pages 5-1 through 5-10
- Index 1-1 through Index 1-12
- Warranty 1 through Warranty 2
- Inside back cover
- Outside back cover

Design Change Notices

The following design change notices have been incorporated in this manual:

Title	Design Change Notice No.	Comments

THIS PAGE INTENTIONALLY LEFT BLANK

Table of Contents

<u>Chap./Par.</u>	<u>Title</u>	<u>Page</u>
	List of Effective Pages	A
	Service Bulletins	B
	Design Change Notices	C
	Alphabetical List of Parts Breakdowns	ii
	Numerical List of Parts Breakdowns	v
	Section 1 – General Information	1-1
	Section 2 – Chassis	2-1
	Section 3 – Decals.....	3-1
	Section 4 – Hydraulic System	4-1
	Section 5 – Electrical System	5-1
	Numerical and Alphabetical Indexes	Index 1