



XR2034

Operation & Safety Manual

XR2034

Introduction	3	Seat Belt	34
General	3	Rear View Mirrors	35
Replacement manuals	3	Controls and Indicators	35
Model/Serial Number Plate	3	Travel Select Lever	35
Orientation	3	Gear Select Switch	36
Safety	4	Parking Brake Switch	36
Safety Disclaimer	4	Load Capacity Charts	36
Signal Words	4	Hydraulic Oil Temperature Indicator	36
Safety Symbols	4	Low Brake Pressure Indicator	37
Employer Responsibility	7	Rear Axle Lock Indicator	37
Operator Responsibility	7	Hourmeter	37
Operator Qualifications	7	Voltage Gauge	37
Modifications	7	Fuel Gauge	38
Mounting/Dismounting	8	Oil Gauge	38
Work site Safety	8	Coolant Gauge	38
Before Starting Forklift	9	Work Light Switch	38
Operation Safety	10	Rear Axle Centering Indicator	39
Load Safety	13	Steering Select Switch	39
Attachments	13	Declutch Indicator	39
Shut Down Procedure	13	Declutch Switch	39
Forklift Maintenance	14	Boom Control	40
Dead Engine Towing	16	Attachment Tilt Switch	41
Parking Brake Release (Front Axle)	16	Frame Sway Control Handle	42
Re-activating Parking Brakes (Front Axle)	16	Auxiliary Attachment Control	42
Labels	18	Optional Controls and Indicators	42
Label Legend	18	Two Wheel Rear (2WR) Steering Switch	42
Left Side View	18	Boom Angle Indicator	43
Right Side View	18	Boom Extend Letters	43
Front View	19	Frame Level Indicator	43
Rear View	19	Operation	44
Cab View	19	Pre-Operation Inspection	44
Replacement Labels	21	Pre-Operation Inspection Checklist	46
Features	30	Functional Tests	47
Standard Equipment	30	Functional Test Checklist	47
Optional Equipment	30	Operator Maintenance	48
Specifications	31	Before Starting Forklift	49
Operator Cab	32	Starting Forklift	50
Ignition Switch	32	Normal Starting	50
Accessory Outlet	32	Cold Starting	50
Accelerator Pedal	32	Jump Starting	51
Service Brake Pedal	33	Forklift Travel	52
Steering Wheel	33	Steering Modes	52
Horn Button	33	Crab Steering	52
Operator Seat	33	Two Wheel Steering (2W)	52
Operator Seat Controls	33	Four Wheel Steering (4W)	52
Weight Suspension Lever	33	Two Wheel Rear Steering (2WR) (Optional)	52
Lumbar Support	34	Maximum Fork Sweep	52
Fore and Aft Adjustment Lever	34	Starting Travel	53
Backrest Angle Adjustment Lever	34	Shifting Gears	53
		Warning Indicators and Gauges	53
		Changing Travel Direction	54
		Stopping Travel	54
		Shut Down Procedure	54
		Refueling	55

Fuel Types	55
Attachments	55
Attachment Disclaimer	55
Fork Ratings	55
Standard Carriage Operation	56
Swing Carriage Operation	56
Quick Attach System	56
Attachment Connection	56
Attachment Removal	57
Load Handling	58
Suspended Loads	58
Pick Up A Load	59
Carry A Load	59
Place A Load	59
Load Shift	59
Elevating Personnel	59
Frame Leveling	61
Load Capacity Charts	62
Using Load Capacity Charts	62
Reading Load Capacity Charts	62
Standard Carriage Load Capacity Chart	63
Preventive Maintenance	64
Establishing A Maintenance Program	64
Maintenance Schedules	64
Boom Emergency Lower Down Valve	66
Do Not Operate – Accident Prevention Tags	66
New or Additional Operators	66
Lockout / Tagout	68
Lockout/Tagout Procedure	68
Removing Forklift From Service	68
Returning Forklift To Service	68
“Do Not Operate” Tags	69

Introduction

General

This Operation and Safety Manual provides the information needed to safely operate the XR2034 Reach Forklift.

This manual should be considered a permanent part of the forklift and kept in the plastic, protective case located in the operator's cab.

Notice

BEFORE operating the forklift, read this manual completely and carefully to understand the safety instructions and the operation of controls and safety equipment. You must comply with all DANGER, WARNING, and CAUTION notices. They are for your benefit.

Warning

Improper operation of this forklift could result in death or serious injury.

BEFORE starting the engine, do the following:

- Read this Operation and Safety Manual.
- Read all safety Labels on the forklift.
- Clear the area of other persons.

Learn and practice safe use of forklift controls in a safe, clear area, BEFORE you operate this forklift on a work site.

It is your responsibility to observe applicable laws and regulations and to follow manufacturer's instructions on forklift operation and maintenance.

Replacement manuals

Replacement manuals for the XR2034 Reach Forklifts can be obtained by contacting:

Xtreme Manufacturing
Phone: (800) 497-1704

Model/Serial Number Plate

When contacting the manufacturer, please have the forklift model and serial numbers available. The model/serial number plate is located on the left side, inside the operator's cab.

For easy reference, record the model and serial numbers in the space provided.

Model Number: _____

Serial Number: _____



Figure 1-1. Model/Serial Number Plate.

Orientation

Right side, left side, front, and rear are directional references given from the operator's seat while facing in a forward direction.

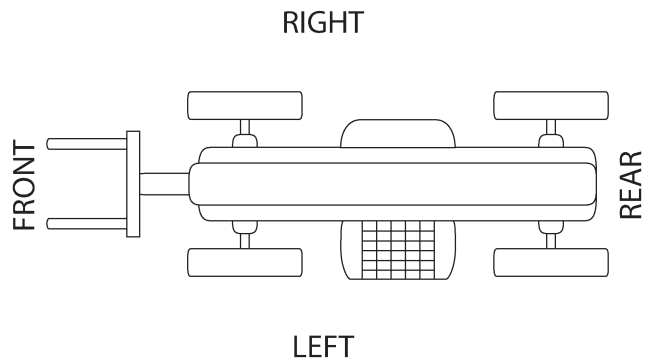


Figure 1-2. Forklift Direction Orientation.

Safety

Safety Disclaimer



Figure 2-1. Think Safety.

Xtreme Manufacturing reserves the right to make technical changes for product improvement. This manual may contain illustrations and photographs, for demonstration purposes, which slightly deviate from the actual product.

Safety information provided in this manual is a basic guide and an attempt to prevent accidents. Xtreme Manufacturing cannot anticipate every circumstance that might involve a potential hazard. Warnings in this manual and on the forklift are NOT all-inclusive.

You are responsible for safe operation of the forklift and all attachments. You must satisfy yourself that the techniques, operating procedures, work methods, or tools you use are safe; especially those not specifically mentioned by Xtreme Manufacturing.

The safety of everyone around the forklift depends significantly on your knowledge and understanding of all correct and safe operating practices and procedures. You can help prevent accidents by remaining alert and recognizing potentially hazardous situations.

Follow State and Federal health and safety rules and/or local regulations for operating and maintaining the forklift.

- This manual does not replace any laws and regulations.
- The operator is required to comply with all applicable laws and regulations.

Signal Words

Signal words are the word or words that call attention to the safety sign and designate a degree or level of hazard seriousness. The signal words used in this manual are DANGER, WARNING, and CAUTION.

⚠ Danger

DANGER (Red) used with the safety alert symbol indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

⚠ Warning

WARNING (Orange) used with the safety alert symbol indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

⚠ Caution

CAUTION (Yellow) with the safety alert symbol indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.

Caution

CAUTION (Yellow) used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.

Safety Symbols

⚠ Warning

Safety symbols are provided to remind the operator of hazardous situations. Xtreme Manufacturing provides these symbols in an attempt to inform all operators, regardless of reading and language skills, of as many potential hazards as possible. These symbols cover many, but not all, potential dangers and hazards associated with operating the forklift.

Make safety a high priority while operating the forklift. Learn and follow all safety messages in this manual and on forklift Labels to prevent death, serious injury, or equipment damage. The following two pages include a list of some of the safety symbols that may be used on this forklift.



General Safety Alert Symbol



Read Operator Manual Before Operating This Forklift



Read Maintenance Manual Before Working On This Forklift



DO NOT OPERATE! Forklift Down For Service Or Maintenance



Read Material Safety Data Sheets (MSDS) For Chemicals And Fluids



Know First Aid Instructions And/ Or Locations On Work site



Perform Operator Inspection Before Starting This Forklift



DO NOT Operate If Using Alcohol, Drugs, Or Medications



Personal Protective Equipment Hardhat



Personal Protective Equipment Gloves



Personal Protective Equipment Safety Shoes



Personal Protective Equipment Safety Glasses



Personal Protective Equipment Ear Protectors



Lead Acid Batteries Create Explosive Gases




No Smoking Keep Lit Cigarettes Away




Keep Flames And Ignition Sources Away



Warning! Hydraulic Oil Under Pressure

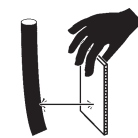

Use A Board Or Cardboard To Check Hydraulic Leaks. DO NOT Use Your Hand!

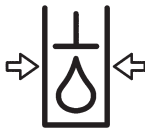


Hydraulic System Under Pressure



Hot Oil! DO NOT Open Unless Cap Is Cool To Touch




Warning! Rotating Fan Blades Can Cut

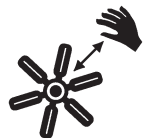

Keep Hands A Safe Distance From Rotating Fan Blades



Warning! Rotating Belts Can Cut Or Entangle

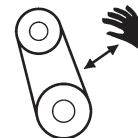

Keep Hands A Safe Distance From Rotating Belts



Make Sure All Safety Labels Are Attached And Legible



Replace Worn And Illegible Safety Labels And Labels



Use Three Points of Contact When Entering and Exiting Forklift