



XR842

Operation & Safety Manual



(702) 636-2969
(800) 497-1704

1415 W. Bonanza Rd. Las Vegas, NV 89106
www.XtremeManufacturing.com

This is the cut pages sample. Download all 80 page(s) at: ManualPlace.com

Introduction	3	Seat Belt	36
General	3	Rear View Mirrors	37
Replacement manuals	3	Controls and Indicators	37
Model/Serial Number Plate	3	Travel Select Lever	37
Orientation	3	Gear Select Switch	38
Safety	4	Parking Brake Switch	38
Safety Disclaimer	4	Load Capacity Charts	38
Signal Words	4	Hydraulic Oil Temperature Indicator	38
Safety Symbols	4	Low Brake Pressure Indicator	39
Employer Responsibility	7	Rear Axle Lock Indicator	39
Operator Responsibility	7	Hourmeter	39
Operator Qualifications	7	Voltage Gauge	39
Modifications	7	Fuel Gauge	40
Mounting/Dismounting	8	Oil Gauge	40
Work Site Safety	8	Coolant Gauge	40
Before Starting Forklift	9	Work Light Switch	40
Operation Safety	10	Rear Axle Centering Indicator	41
Load Safety	13	Steering Select Switch	41
Attachments	13	Declutch Indicator	41
Shut Down Procedure	13	Declutch Switch	41
Forklift Maintenance	14	Boom Control	42
Dead Engine Towing	16	Attachment Tilt Switch	43
Parking Brake Release (Front Axle)	16	Frame Sway Control Handle	44
Re-activating Parking Brakes (Front Axle)	17	Auxiliary Attachment Control	44
Labels	18	Optional Controls and Indicators	45
Label Legend	18	Two Wheel Rear (2WR) Steering Switch	45
Left Side View	18	Boom Angle Indicator	45
Right Side View	18	Boom Extend Letters	45
Front View	19	Frame Level Indicator	45
Rear View	19	Operation	46
Cab View	19	Pre-Operation Inspection	46
Replacement Labels	21	Pre-Operation Inspection Checklist	48
Features	32	Functional Tests	49
Standard Equipment	32	Functional Test Checklist	49
Optional Equipment	32	Operator Maintenance	50
Specifications	33	Before Starting Forklift	51
Operator Cab.	34	Starting Forklift	51
Ignition Switch	34	Normal Starting	51
Accessory Outlet	34	Cold Starting	52
Accelerator Pedal	34	Jump Starting	52
Service Brake Pedal	35	Forklift Travel	53
Steering Wheel	35	Steering Modes	53
Horn Button	35	Crab Steering	53
Operator Seat	35	Two Wheel Steering (2W)	53
Operator Seat Controls	35	Four Wheel Steering (4W)	54
Weight Suspension Lever	35	Two Wheel Rear Steering (2WR) (Optional)	54
Lumbar Support	36	Maximum Fork Sweep	54
Fore and Aft Adjustment Lever	36	Starting Travel	54
Backrest Angle Adjustment Lever	36	Shifting Gears	55
		Warning Indicators and Gauges	55
		Stopping Travel	56
		Changing Travel Direction	56
		Shut Down Procedure	56
		Refueling	57

Fuel Types	57
Attachments	57
Attachment Disclaimer	57
Fork Ratings	57
Standard Carriage Operation	58
Swing Carriage Operation	58
Quick Attach System	59
Attachment Connection	59
Attachment Removal	62
Load Handling	63
Suspended Loads	64
Pick Up A Load	64
Carry A Load	64
Place A Load	64
Load Shift	65
Elevating Personnel	65
Frame Leveling	66
Load Capacity Charts	67
Using Load Capacity Charts	68
Reading Load Capacity Charts	68
Standard Carriage Load Capacity Chart	69
Preventive Maintenance	70
Establishing A Maintenance Program	70
Maintenance Schedules	70
Boom Emergency Lower Down Valve	72
Do Not Operate – Accident Prevention Tags	72
New or Additional Operators	72
Lockout / Tagout	74
Lockout/Tag out Procedure	74
Removing Forklift From Service	74
Returning Forklift To Service	74
“Do Not Operate” Tags	75

Introduction

General

This Operation and Safety Manual provides the information needed to safely operate the XR842 Reach Forklift.

This manual should be considered a permanent part of the forklift and kept in the plastic, protective case located in the operator's cab.

Notice

BEFORE operating the forklift, read this manual completely and carefully to understand the safety instructions and the operation of controls and safety equipment. You must comply with all DANGER, WARNING, and CAUTION notices. They are for your benefit.

Warning

Improper operation of this forklift could result in death or serious injury.

BEFORE starting the engine, do the following:

- Read this Operation and Safety Manual.
- Read all safety Labels on the forklift.
- Clear the area of other persons.

Learn and practice safe use of forklift controls in a safe, clear area, BEFORE you operate this forklift on a work site.

It is your responsibility to observe applicable laws and regulations and to follow manufacturer's instructions on forklift operation and maintenance.

Replacement manuals

Replacement manuals for the XR842 Reach Forklifts can be obtained by contacting:

Xtreme Manufacturing
Phone: (800) 497-1704

Model/Serial Number Plate

When contacting the manufacturer, please have the forklift model and serial numbers available. The model/serial number plate is located on the left side, inside the operator's cab.

For easy reference, record the model and serial numbers in the space provided.

Model Number: _____

Serial Number: _____



Figure 1-1. Model/Serial Number Plate.

Orientation

Right side, left side, front, and rear are directional references given from the operator's seat while facing in a forward direction.

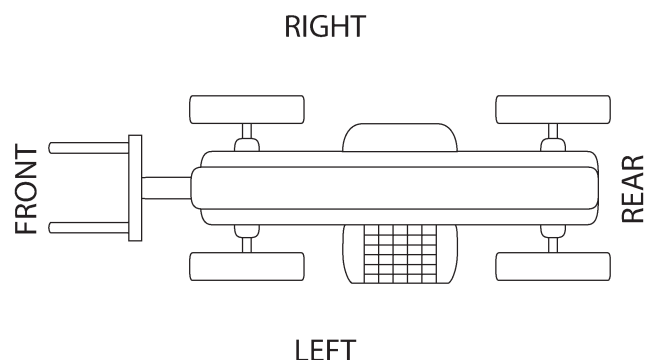 


Figure 1-2. Forklift Direction Orientation.

Safety

Safety Disclaimer



Figure 2-1. Think Safety.

Xtreme Manufacturing reserves the right to make technical changes for product improvement. This manual may contain illustrations and photographs, for demonstration purposes, which slightly deviate from the actual product.

Safety information provided in this manual is a basic guide and an attempt to prevent accidents. Xtreme Manufacturing cannot anticipate every circumstance that might involve a potential hazard. Warnings in this manual and on the forklift are NOT all-inclusive.

You are responsible for safe operation of the forklift and all attachments. You must satisfy yourself that the techniques, operating procedures, work methods, or tools you use are safe; especially those not specifically mentioned by Xtreme Manufacturing.

The safety of everyone around the forklift depends significantly on your knowledge and understanding of all correct and safe operating practices and procedures. You can help prevent accidents by remaining alert and recognizing potentially hazardous situations.

Follow State and Federal health and safety rules and/or local regulations for operating and maintaining the forklift.

- This manual does not replace any laws and regulations.
- The operator is required to comply with all applicable laws and regulations.

Signal Words

Signal words are the word or words that call attention to the safety sign and designate a degree or level of hazard seriousness. The signal words used in this manual are DANGER, WARNING, and CAUTION.

⚠ Danger

DANGER (Red) used with the safety alert symbol indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

⚠ Warning

WARNING (Orange) used with the safety alert symbol indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

⚠ Caution

CAUTION (Yellow) with the safety alert symbol indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.

Caution

CAUTION (Yellow) used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.

Safety Symbols

⚠ Warning

Safety symbols are provided to remind the operator of hazardous situations. Xtreme Manufacturing provides these symbols in an attempt to inform all operators, regardless of reading and language skills, of as many potential hazards as possible. These symbols cover many, but not all, potential dangers and hazards associated with operating the forklift.

Make safety a high priority while operating the forklift. Learn and follow all safety messages in this manual and on forklift Labels to prevent death, serious injury, or equipment damage. The following two pages include a list of some of the safety symbols that may be used on this forklift.



General Safety Alert Symbol



Read Operator Manual Before Operating This Forklift



Read Maintenance Manual Before Working On This Forklift



DO NOT OPERATE! Forklift Down For Service Or Maintenance



Read Material Safety Data Sheets (MSDS) For Chemicals And Fluids



Know First Aid Instructions And/ Or Locations On Work site



Perform Operator Inspection Before Starting This Forklift



DO NOT Operate If Using Alcohol, Drugs, Or Medications



Personal Protective Equipment Hardhat



Personal Protective Equipment Gloves



Personal Protective Equipment Safety Shoes



Personal Protective Equipment Safety Glasses



Personal Protective Equipment Ear Protectors



Lead Acid Batteries Create Explosive Gases



 
No Smoking Keep Lit Cigarettes Away




Keep Flames And Ignition Sources Away



Warning! Hydraulic Oil Under Pressure

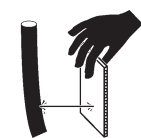

 Use A Board Or Cardboard To Check Hydraulic Leaks. DO NOT Use Your Hand!

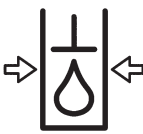


Hydraulic System Under Pressure



Hot Oil! DO NOT Open Unless Cap Is Cool To Touch



 
Warning! Rotating Fan Blades Can Cut

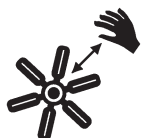

Keep Hands A Safe Distance From Rotating Fan Blades



 Warning! Rotating Belts Can Cut Or Entangle

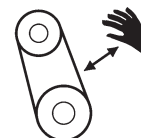

Keep Hands A Safe Distance From Rotating Belts



Make Sure All Safety Labels Are Attached And Legible



Replace Worn And Illegible Safety Labels And Labels



Use Three Points of Contact When Entering and Exiting Forklift

Safety

XR842



DO NOT Jump While Dismounting The Forklift



Fasten Seat Belt



DO NOT Use As A Personnel Carrier



DO NOT Allow Riders On Forklift Frame Or Fenders



DO NOT Allow Riders On Or In The Operator Cab



DO NOT Allow Riders On Auxiliary Attachments



Falling Off Of Attachment Can Result In Death Or Serious Injury



**Set Parking Brake To ON
Engage Parking Brake**



**Set Parking Brake To OFF
Disengage Parking Brake**



**Warning!
Forklift Roll Away Can Cause Death Or Serious Injury**



**Warning!
Forklift Tip Over Can Cause Death Or Serious Injury**



**DO NOT Jump!
If Forklift Tips, Keep Seat belt ON And Brace Yourself**



**Warning!
DO NOT Travel With Boom Raised**



 
DO NOT Raise Boom While Traveling On A Slope



Tip Over Hazard, Especially Traveling Up A Slope Without A Load



**Warning!
Electrocution Can Cause Death Or Serious Injury**

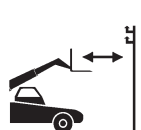

**Danger!
Keep A Safe Distance From Electrical Lines**



**Hot Surface!
Keep Hands Away**



DO NOT Allow Anyone Under A Raised Load



Pinch Points Hands



 
Pinch Points Body



**Warning!
Explosion Hazard**



DO NOT Use Ether As A Starting Aid

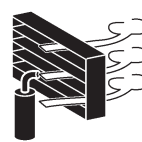

Have Adequate Ventilation If Operating This Forklift In An Enclosed Space