


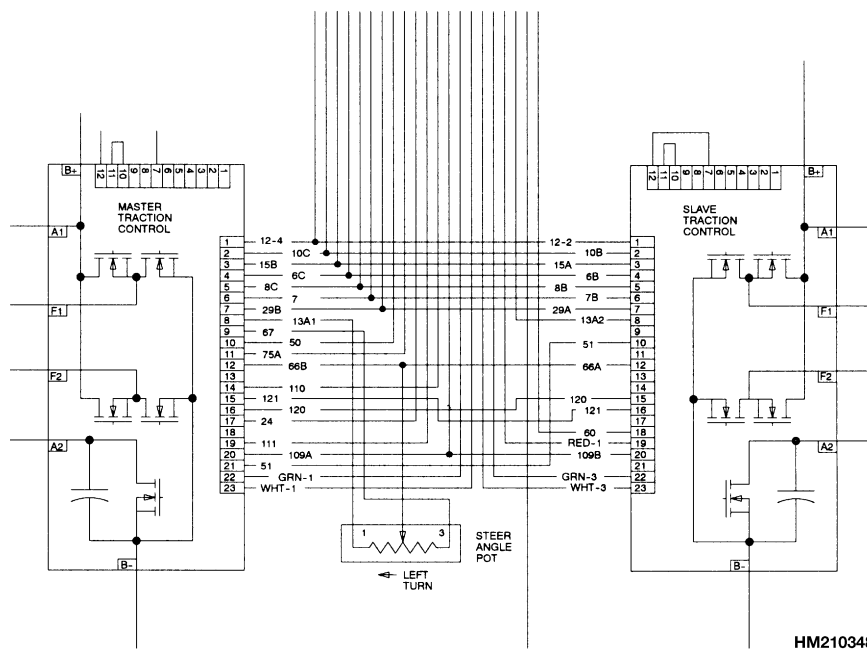

# DIAGRAMS

## ERP030/035/040TGN [E807]



# SAFETY PRECAUTIONS

## MAINTENANCE AND REPAIR

- When lifting parts or assemblies, make sure all slings, chains, or cables are correctly fastened, and that the load being lifted is balanced. Make sure the crane, cables, and chains have the capacity to support the weight of the load.
- Do not lift heavy parts by hand, use a lifting mechanism.
- Wear safety glasses.
- DISCONNECT THE BATTERY CONNECTOR before doing any maintenance or repair on electric lift trucks.
- Disconnect the battery ground cable on internal combustion lift trucks.
- Always use correct blocks to prevent the unit from rolling or falling. See HOW TO PUT THE LIFT TRUCK ON BLOCKS in the **Operating Manual** or the **Periodic Maintenance** section.
- Keep the unit clean and the working area clean and orderly.
- Use the correct tools for the job.
- Keep the tools clean and in good condition.
- Always use **YALE APPROVED** parts when making repairs. Replacement parts must meet or exceed the specifications of the original equipment manufacturer.
- Make sure all nuts, bolts, snap rings, and other fastening devices are removed before using force to remove parts.
- Always fasten a DO NOT OPERATE tag to the controls of the unit when making repairs, or if the unit needs repairs.
- Be sure to follow the **WARNING** and **CAUTION** notes in the instructions.
- Gasoline, Liquid Petroleum Gas (LPG), Compressed Natural Gas (CNG), and Diesel fuel are flammable. Be sure to follow the necessary safety precautions when handling these fuels and when working on these fuel systems.
- Batteries generate flammable gas when they are being charged. Keep fire and sparks away from the area. Make sure the area is well ventilated.

**NOTE:** The following symbols and words indicate safety information in this manual:



### **WARNING**

**Indicates a condition that can cause immediate death or injury!**



### **CAUTION**

**Indicates a condition that can cause property damage!**

**TABLE OF CONTENTS**

ERP030/035/040TGN (Prior to 8/01) .....	1
Figure 1. Wiring Schematic-Traction Control .....	1
Figure 2. Wiring Schematic-Transistor Lift Pump Control.....	2
Figure 3. Wiring Schematic-1-Speed Lift Pump Control.....	3
Figure 4. Wiring Schematic-2-Speed Lift Pump Control (Not Available on all Models) .....	4
Figure 5. Wiring Diagram-Seat Brake (Optional) .....	5
Figure 6. Wiring Diagram-Front Compartment .....	6
Figure 7. Wiring Diagram-Rear Compartment With Transistor Lift Pump Control .....	7
Figure 8. Wiring Diagram-Rear Compartment With One-Speed Lift Pump Control .....	8
Figure 9. Wiring Diagram-Rear Compartment With Two-Speed Lift Pump Control (Not Available on all Models) .....	9
Figure 10. Wiring Diagram-EE Option .....	10
ERP030/035/040TGN (After 8/01).....	11
Figure 11. Wiring Schematic-Traction Control .....	11
Figure 12. Wiring Schematic-Transistor Lift Pump Control.....	12
Figure 13. Wiring Schematic-1-Speed Lift Pump Control.....	13
Figure 14. Wiring Schematic-2-Speed Lift Pump Control (Not Available on all Models) .....	14
Figure 15. Wiring Schematic-Seat Brake (Optional).....	15
Figure 16. Wiring Diagram-Front Compartment .....	16
Figure 17. Wiring Diagram-Rear Compartment With Transistor Lift Pump Control .....	17
Figure 18. Wiring Diagram-Rear Compartment With One-Speed Lift Pump Control .....	18
Figure 19. Wiring Diagram-Rear Compartment With Two-Speed Lift Pump Control (Not Available On All Models) .....	19
Figure 20. Wiring Diagram-Rear Compartment With EE Connections.....	20
ERP030/035/040TGN (Options).....	21
Figure 21. Wiring Schematics.....	21
Figure 22. Wiring Diagram (Rear Compartment) .....	22
Figure 23. Wiring Diagram (Front Compartment) .....	23
ERP030/035/040TGN (Prior to 8/03) .....	24
Figure 24. Hydraulic Schematic (3 Function) .....	24
Figure 25. Hydraulic Schematic (4 Function) .....	25
ERP030/035/040TGN (After 8/03).....	26
Figure 26. Hydraulic Schematic (4 Function) .....	26

This section is for the following models:  
  
ERP030/035/040TGN [E807]