

YANMAR

OPERATION MANUAL

**4JHE • 4JH-TE
4JH-HTE • 4JH-DTE**

YANMAR

OPERATION MANUAL

MARINE DIESEL ENGINE

MODEL **4JHE**
4JH-TE
4JH-HTE
4JH-DTE

Thank you for purchasing your **YANMAR DIESEL ENGINE**

This manual describes the various engine parts and prescribes simple steps for normal engine maintenance.

Before starting up your new engine, we recommend that you read this manual carefully to insure proper handling and use. If you have any questions, please contact your nearest dealer or sales outlet.

Because of our continuing efforts to improve quality and performance, engine parts may sometimes be changed. This may result in some discrepancies in this manual.

This manual is concerned with the 4LH-TE model.

Although the 4LH-TE, 4LH-HTE, seem to be different on the outside. their handling is the same.

CAUTION

This safety alert symbol indicates important safety messages. To insure the safest possible operation, carefully read the message that follows.

IMPORTANT

This stop symbol indicates important operation information. To insure maximum performance, carefully read the message that follows.

Contents

I.	Specifications	1
	1-1. Engine specifications	1
	1-2. Marine gear specifications	1
II.	Names of parts	2
III.	Engine installation.	4
	3-1. Inspection after unpacking	4
	3-2. Preparation of the engine foundation plate	4
	3-3. Engine installation.	4
	3-4. Propeller, propeller shaft.	5
	3-5. Cooling water supply device	5
	3-6. Fuel oil supply device	8
	3-7. Remote control.	8
	3-8. Recommended battery capacity	9
IV.	After launching	10
V.	Fuel and lubricating oil	11
	5-1. Selection and handling of fuel oil	11
	5-2. Selection of lubricating oil	12
VI.	Starting the new engine for the first time	13
	6-1. Supply of fuel oil	13
	6-2. Supply of lubricating oil	13
	6-3. Bleeding air from the fuel system	15
	6-4. External inspection	15
	6-5. Checking the instrument panel alarm system.	15
	6-6. Turning	16
VII.	Method of operation	17
	7-1. Starting	17
	7-2. Cautions after starting the engine	18
	7-3. Cautions during operation.	18
	7-4. Stopping	20
VIII.	Storage	22
	8-1. Storing	22
	8-2. Removing engine from storage	22
IX.	Periodical inspection and maintenance	23
	9-1. Fuel oil system	24
	9-2. Lubricating oil system.	27
	9-3. Cooling water system	28
	9-4. Inspection of engine body.	29
	9-5. Washing the air intake silencer element	30
	9-6. Electrical equipment	30
	9-7. Inspecting the turbo-charger (Model RHB52, IHI make).	31
X.	Trouble shooting.	32
XI.	Fuel oil, lubricating oil and cooling water piping diagram	36
	11-1. 4JH-TE, 4JH-HTE, 4JH-DTE	36
	11-2. 4JHE	37
XII.	Electrical wiring diagram.	38
XIII.	Optional device	41