


YANMAR

OPERATION MANUAL

6LPA-STP2 6LPA-STZP2

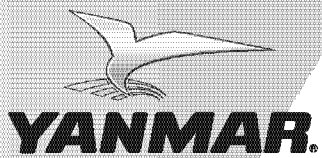

OPERATION MANUAL

MARINE DIESEL ENGINE

**6LPA-STP2
6LPA-STZP2**

Congratulations on your choice of
YANMAR product from YANMAR CO., LTD.

This Operation Manual describes the operation, maintenance
and inspection of the **6LPA-STP2/-STZP2** Yanmar marine
diesel engines.

Please read this manual carefully before use, and operate
your engine properly under the optimum conditions, should
you have any questions or concerns, please do not hesitate to
contact your nearest dealer.

California Proposition 65 Warning

Diesel engine exhaust and some of its
constituents are known to the State of
California to cause cancer, birth defects,
and other reproductive harm.

California Proposition 65 Warning

Battery posts, terminals, and related
accessories contain lead and lead com-
pounds, chemicals known to the State of
California to cause cancer and reproduc-
tive harm.
Wash hand after handling

YANMAR
MARINE DIESEL ENGINE
MODELS : **6LPA-STP2/-STZP2**
OPERATION MANUAL

Thank you for purchasing the YANMAR Marine Diesel Engine.

[INTRODUCTION]

- This Operation Manual describes the operation, maintenance and inspection of the **6LPA-STP2/-STZP2** Yanmar marine diesel engines.
- Read this Operation Manual carefully before operate the engine to ensure that the engine is used correctly and that it stays in the best possible condition.
- Keep this Operation Manual in a convenient place for easy access.
- If this Operation Manual is lost or damaged, order a new one from your dealer or distributor.
- Make sure this manual is transferred to subsequent owners. This manual should be considered a permanent part of the engine and remain it.
- Constant efforts are made to improve the quality and performance of Yanmar products, so some details included in this Operation Manual may differ slightly from your engine. If you have any questions about such difference, please contact your Yanmar Dealer or Distributor.
- For detailed information marine gears, refer to the Marine Gear Operation Manual.

Operation Manual (Marine Engine)	Models	6LPA-STP2/-STZP2
	Code No.	0A6LP-G00100

1. FOR SAFE OPERATION	1~4
1.1 Warning Symbols	1
1.2 Safety Precautions	2~3
1.3 Location of Product Safety Labels	4
2. EXPLANATION OF PRODUCT	5~16
2.1 Use & Driving System etc.	5
2.2 Engine Specifications.....	6~7
2.3 Names of Parts	8
2.4 Major Servicing Parts	9
2.5 Control Equipment	10~16
2.5.1 Control Panel (Optional)	10~15
2.5.2 Remote Control Handle	15~16
3. BEFORE OPERATION	17~24
3.1 Fuel Oil, Lube Oil and Cooling Water	17~19
3.1.1 Fuel Oil	17
3.1.2 Lube Oil	18
3.1.3 Cooling Water	18~19
3.2 Supplying Fuel.....	20
3.2.1 Filling the Fuel Tank	20
3.2.2 Bleeding the Fuel System.....	20
3.3 Supplying Engine Lube Oil	21
3.4 Supplying Marine Drive Oil	21
3.5 Supplying Cooling Water.....	22~23
3.6 Cranking	23
3.7 Checking the Lube Oil and Cooling Water	24
4. HOW TO OPERATE	25~34
4.1 Inspection Before Starting	25~26
4.2 Checking the Control Panel and Alarm Devices	27
4.3 Starting	27~28
4.3.1 Daily Starting	27
4.3.2 Starting Under Low Temperature Conditions	27
4.3.3 Restarting After Starting Failure	28
4.3.4 After the Engine has Started	28
4.4 Adjusting the Engine Speed	29
4.5 Clutch Operation for the Marine Drive	29
4.5.1 Forward, Neutral, Reverse	29
4.6 Check During Operation	30
4.7 Stopping the Engine	31
4.8 Operation Procedure	32
4.9 Long-Term Storage	33~34
4.9.1 Before storing for long periods of time.....	33~34
4.9.2 Checking the Engine for Reuse After a Long Storage Period	34

5. MAINTENANCE and INSPECTION	35~47
5.1 Periodic Inspections	36
5.1.1 Inspection and Maintenance of EPA Emission-Related Parts	37
5.2 Periodic Inspection Items	38
5.2.1 Inspection After Initial 50Hrs. Operation	38
5.2.2 Inspection Every 50 Hours	39~40
5.2.3 Inspection Every 125 Hours or 6 mos.	40
5.2.4 Inspection Every 250 Hrs. or 1 yr.	41~44
5.2.5 Inspection Every 500 Hrs. or 2 yrs.	45
5.2.6 Inspection Every 1000 Hrs. 4 yrs.	46~47
5.2.7 Inspection Every 1250 Hrs. or 5 yrs.	47
6. TROUBLE AND TROUBLESHOOTING	48~50
6.1 Simple problems and the appropriate countermeasures	48~49
6.2 Consulting Your Yanmar Dealer or Distributor	50
7. SYSTEM DIAGRAMS	51~55
7.1 Piping Diagram (Fuel Oil, Engine Lube Oil, Cooling Water System)	51~52
7.1.1 Model 6LPA-STP2	51
7.1.2 Model 6LPA-STZP2	52
7.2 Electric Wiring Diagram	53~55
7.2.1 For B-type Control Panel.....	53
7.2.2 For C/D-type x B-type Control Panel	54
7.2.3 For C/D-type x C-type Control Panel	55
8. EPA WARRANTY USA ONLY	56
8.1 Yanmar Co., Ltd. Limited Emission Control System Warranty - USA Only	56
8.1.1 Your Warranty Rights and Obligations	56
8.1.2 Warranty Period	56
8.1.3 Warranty Coverage	57
8.1.4 Exclusions	57
8.1.5 Owner's Responsibility	57
8.1.6 Customer Assistance	57