


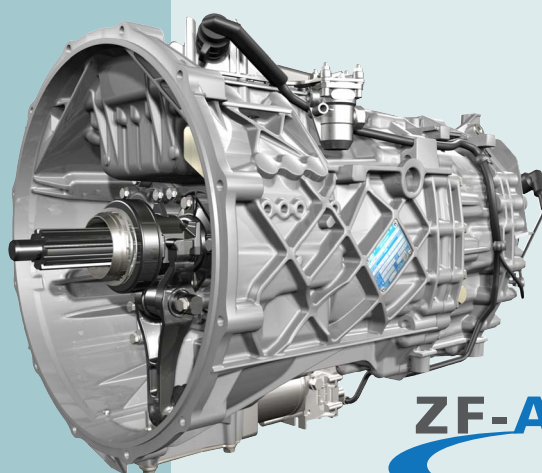


Technical Manual

for Installation, Function,
and Initial Start-Up



ZF-AS TRONIC

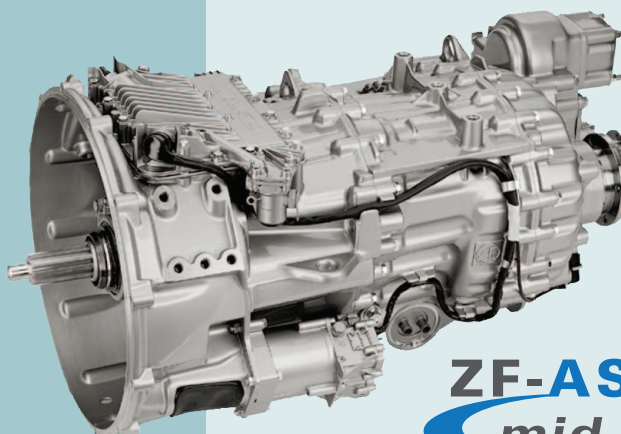

ZF-AS TRONIC
mid

Truck

1328 765 101h

Subject to alterations in design

Copyright by ZF

This Technical Manual is protected by copyright.

Printed in Germany

ZF Friedrichshafen AG, MC-C / 1999

Edition: 2007-10

ZF-AS Tronic and ZF-AS Tronic mid are automatic transmission systems.

To avoid

- Damage or failure of the transmission and vehicle,
- Functional limitations for the transmission system,
- Limitations in terms of operating quality,

the details on the function, installation, and initial start-up of the transmission system **MUST** be noted.

This technical manual serves as a technical guide for the ZF-AS Tronic system for both vehicle and vehicle body manufacturers as well as ZF staff.

This manual describes the standard ZF application. Customer-specific deviations must be agreed on in writing with ZF.

A ZF-AS Tronic application contains the following stages:

- Writing of customer specification for the transmission system by vehicle manufacturer and ZF,
- Documentation by ZF,
- Initial installation,
- First installation check and initial setup by ZF staff,
- Approval on the basis of the customer specification and parts list.

NOTE

If the specifications noted in this technical manual are not observed or if parts which are not approved by ZF or are not genuine ZF parts are used, this may result in damage as well as functional limitations for which ZF shall assume no responsibility.

If you have any questions, suggestions or possible improvements, please contact your Technical Sales department contact directly.

- 1 Brief Description of the ZF-AS Tronic
- 2 Transmission System and its Components
- 3 Function Description
- 4 Installation
- 5 Annex

Applicable Documents	13
List of Abbreviations	14
Overview of Amendments: 1328 765 101	15
1 Brief Description of the ZF-AS Tronic	
1.1 General	1-3
1.2 Interfaces	1-4
2 Transmission System and its Components	
2.1 System Design	2-3
2.2 Transmission and Shift System	2-4
2.2.1 Description of Transmission	2-4
2.2.2 Description of Shift System	2-6
2.2.3 Overview of Product Families	2-7
2.2.4 Product Family 1: Technical Data 12-Speed / Direct Drive	2-8
2.2.5 Product Family 1: Technical Data 12-Speed / Overdrive	2-9
2.2.6 Product Family 2: Technical Data 12-Speed / Direct Drive	2-10
2.2.7 Product Family 2: Technical Data 12-Speed / Overdrive	2-11
2.2.8 Product Family 3: Technical Data 12-Speed / Direct Drive	2-12
2.2.9 Product Family 3: Technical Data 12-Speed / Overdrive	2-13
2.2.10 Product Family 3: Technical Data 16-Speed / Direct Drive	2-14
2.2.11 Product Family 3: Technical Data 16-Speed / Overdrive	2-15
2.2.12 Product Family 4: Technical Data 12-Speed / Direct Drive	2-16
2.2.13 Product Family 4: Technical Data 12-Speed / Overdrive	2-17
2.3 Transmission Components	2-18
2.3.1 Transmission Actuator	2-18
2.3.2 Clutch Actuator	2-19
2.4 Peripheral Components	2-20
2.4.1 ZF Selector Lever With Integrated E-Module and Additional ZF Extension Module	2-20
2.4.1.1 ZF Selector Lever with Integrated E-module	2-20
2.4.1.2 ZF Extension Module	2-22

2.4.2	ZF Range Selector Module + ZF Extension Module	2-23
2.4.2.1	ZF Range Selector Module	2-23
2.4.2.2	ZF Extension Module	2-23
2.4.3	Display	2-24
2.5	Auxiliaries	2-27
2.5.1	Intarder	2-27
2.5.1.1	General	2-27
2.5.1.2	Mechanical Interface	2-27
2.5.1.3	Oil Grade and Oil Fill	2-27
2.5.1.4	Coolant Connection	2-27
2.5.1.5	Pneumatic Interface	2-27
2.5.1.6	Electrical Interface	2-28
2.5.1.7	Communication Interface	2-28
2.5.1.8	Speedo Signal	2-28
2.5.2	PTOs	2-28
2.5.2.1	Clutch-Dependent PTOs	2-28
2.5.2.2	Vehicle Driven PTOs	2-29
2.5.2.3	Engine-Dependent PTOs	2-29
2.5.2.4	Retrofitting	2-29
3	Description of Function	
3.1	Basic Function	3-3
3.1.1	Shift Engagement Characteristics / Ignition On	3-4
3.1.2	Gear Selection With Vehicle Stationary	3-4
3.1.2.1	Shifting from Neutral	3-4
3.1.2.2	Shifting From One Gear to Another	3-4
3.1.2.3	Shifting to Neutral	3-4
3.1.3	Setting Off	3-5
3.1.4	Gear Selection during Travel	3-7
3.1.4.1	Upshifts	3-7
3.1.4.2	Downshifts	3-8

3.1.5	Maneuvering	3-8
3.1.6	Protective Functions	3-10
3.1.6.1	Engine Protection Function	3-10
3.1.6.2	Clutch Overload Protection	3-10
3.1.7	Control of PTOs	3-11
3.1.7.1	PTO Activation	3-11
3.1.7.2	PTO Deactivation	3-12
3.1.8	Ignition Off	3-12
3.2	Automatic Drive Program	3-13
3.2.1	Activating Automatic Drive Program	3-14
3.2.2	Automatic Selection of Setting Off Gear	3-14
3.2.3	Automatic Gear Change	3-14
3.2.4	Deactivating Automatic Drive Program	3-16
3.3	ZF-AS Tronic Malfunction Concept	3-17
3.3.1	Principles	3-17
3.3.2	System Analyses Undertaken	3-17
3.3.3	Clutch Actuator Concept	3-18
3.3.4	Transmission Control Unit Concept	3-18
3.3.5	Interface Concept	3-19
3.3.6	Driving Modes Investigated	3-19
3.4	Error Responses	3-20
3.5	Diagnosis	3-21
3.5.1	Error Memory	3-21
3.5.2	On-Board Diagnosis (When Using the ZF Selector Lever)	3-21
3.5.3	Off-Board Diagnosis	3-21
4	Installation	
4.1	Transmission Installation Investigation	4-5
4.1.1	Standard Transmission Installation Drawings	4-5
4.1.2	PTO + Emergency Steering Pump Installation Drawings*	4-5
4.1.3	Input Shafts	4-5
4.1.4	Clutch Bell Housing	4-6

4.1.5	Clutch	4-6
4.1.6	Clutch Release Unit	4-8
4.1.7	Engine Connection	4-9
4.1.8	Suspension	4-10
4.1.9	Transmission Installation Angle	4-13
4.1.10	Propshaft Connection	4-14
4.1.11	Torsional vibrations	4-18
4.1.11.1	Permissible vibrations at transmission input	4-18
4.1.11.2	Uniformity of rotation	4-18
4.1.12	Bending Vibrations	4-19
4.1.13	Cover / Protective Floor Panels	4-19
4.1.14	Additional Brackets	4-19
4.1.15	Fording Ability	4-19
4.1.16	Accessibility	4-20
4.1.17	Additional Guidelines for Vehicle Body Manufacturer	4-21
4.1.18	Vehicle Wiring	4-21
4.2	Temperatures	4-22
4.2.1	Permissible Ambient Temperatures on Transmission	4-22
4.2.2	Permissible Oil Temperatures	4-22
4.2.3	Causes of Excess Oil Temperatures	4-22
4.2.4	Additional Transmission Cooling	4-23
4.2.5	Use in Sub-Zero Temperatures	4-24
4.2.6	Storing the Transmission	4-24
4.3	Filling With Oil	4-25
4.3.1	Oil Grade and Oil Change Interval	4-25
4.3.2	Oil Fill Quantity	4-25
4.3.3	Draining the Oil	4-26
4.3.4	Filling With Oil	4-26
4.3.5	Oil Level Check	4-26
4.3.6	General Information	4-27
4.3.7	Information about Bleeding the Transmission	4-27
4.3.8	Venting by Means of Hose Line in Dry Compartment	4-28

4.4	Electrics	4-29
4.4.1	System Layout and Circuit Diagrams	4-29
4.4.2	Description of Connectors	4-30
4.4.2.1	Connector on Transmission	4-30
4.4.2.2	Power Supply Connector to Vehicle	4-31
4.4.3	Power Supply Voltages	4-32
4.4.4	CAN Bus Installation	4-33
4.4.5	Quality Requirements of Wiring	4-35
4.4.6	Connector and Mating Connector Designations	4-36
4.4.7	Other Electrical Interfaces on the ZF-AS Tronic	4-37
4.4.7.1	Neutral Switch (S12)	4-37
4.4.7.2	Speedo Sensor	4-37
4.4.8	CAN Signals	4-37
4.4.9	EMC Compatibility	4-38
4.5	Pneumatics	4-39
4.6	Auxiliaries	4-41
4.6.1	ZF-Intarder	4-41
4.6.2	Third Party Retarder	4-41
4.6.3	ZF Power Take Off Units (PTOs)	4-41
4.6.4	Third Party PTOs	4-42
4.6.5	Heat Exchanger	4-42
4.7	Transmission Installation on Assembly Belt	4-42
4.7.1	Transport	4-42
4.7.2	Supplying the Main Transmission	4-43
4.7.3	Corrosion Protection	4-43
4.7.4	Subsequent Paintwork	4-43
4.7.5	Assembly of Engine, Clutch, and Transmission	4-43
4.7.6	EOL Programming	4-44
4.7.7	Delivery Check	4-45