

Zf Ecosplit Operating Instruction

Full download: <http://manualplace.com/download/zf-ecosplit-operating-instruction/>

OPERATING INSTRUCTIONS

ZF-ECOSPLIT[®]

ZF synchromesh transmissions

16 S 151, 16 S 181

16 S 221, 16 S 251

1315 758 101e

Subject to alterations in design

Copyright by ZF

This document is protected by copyright. Any reproduction and dissemination in whatever form – even in adapted, paraphrased or extracted form – in particular as a reprint, photomechanical or electronic reproduction or as storage in data processing equipment or data networks without approval by the holder of the copyright is prohibited and will be prosecuted under civil and criminal law.

Printed in Germany

ZF Friedrichshafen AG, MKS-K / 1992

Edition: 10.2001

Preface

Your vehicle is equipped with a synchromesh transmission of the **ZF-ECOSPLIT model range**.

The more familiar you are with the Ecosplit transmission, the more economically you will be able to drive with it. These operating instructions inform you of how to make the best use of the technical advantages of the ZF transmission. Therefore, please carefully read these operating instructions and any special instructions provided by the vehicle manufacturer before driving the vehicle for the first time.

To ensure safe and reliable operation, please comply with all maintenance instructions. Skilled ZF After-Sales Service personnel are available to maintain your transmission and to assist you with any problems.

We wish you safe and pleasant driving with your ZF transmission

ZF Friedrichshafen AG

Commercial Vehicles/Special Transmissions
Division

D-88038 Friedrichshafen

Germany

Tel.: + 49 7541 77-0

Fax: + 49 7541 77-90 80 00

Internet: www.zf.com