



1985

BMW 325e/318i

Electrical

Troubleshooting

Manual

BMW of North America, Inc.
Montvale, New Jersey

FOREWORD


In the interests of continuing technical development work we reserve the right to modify designs and equipment.

Printed in USA

©Copyright BMW of North America, Inc.

Not to be reproduced wholly or in part
without written permission of BMW of
North America, Inc.

PN 01 00 1 467 805

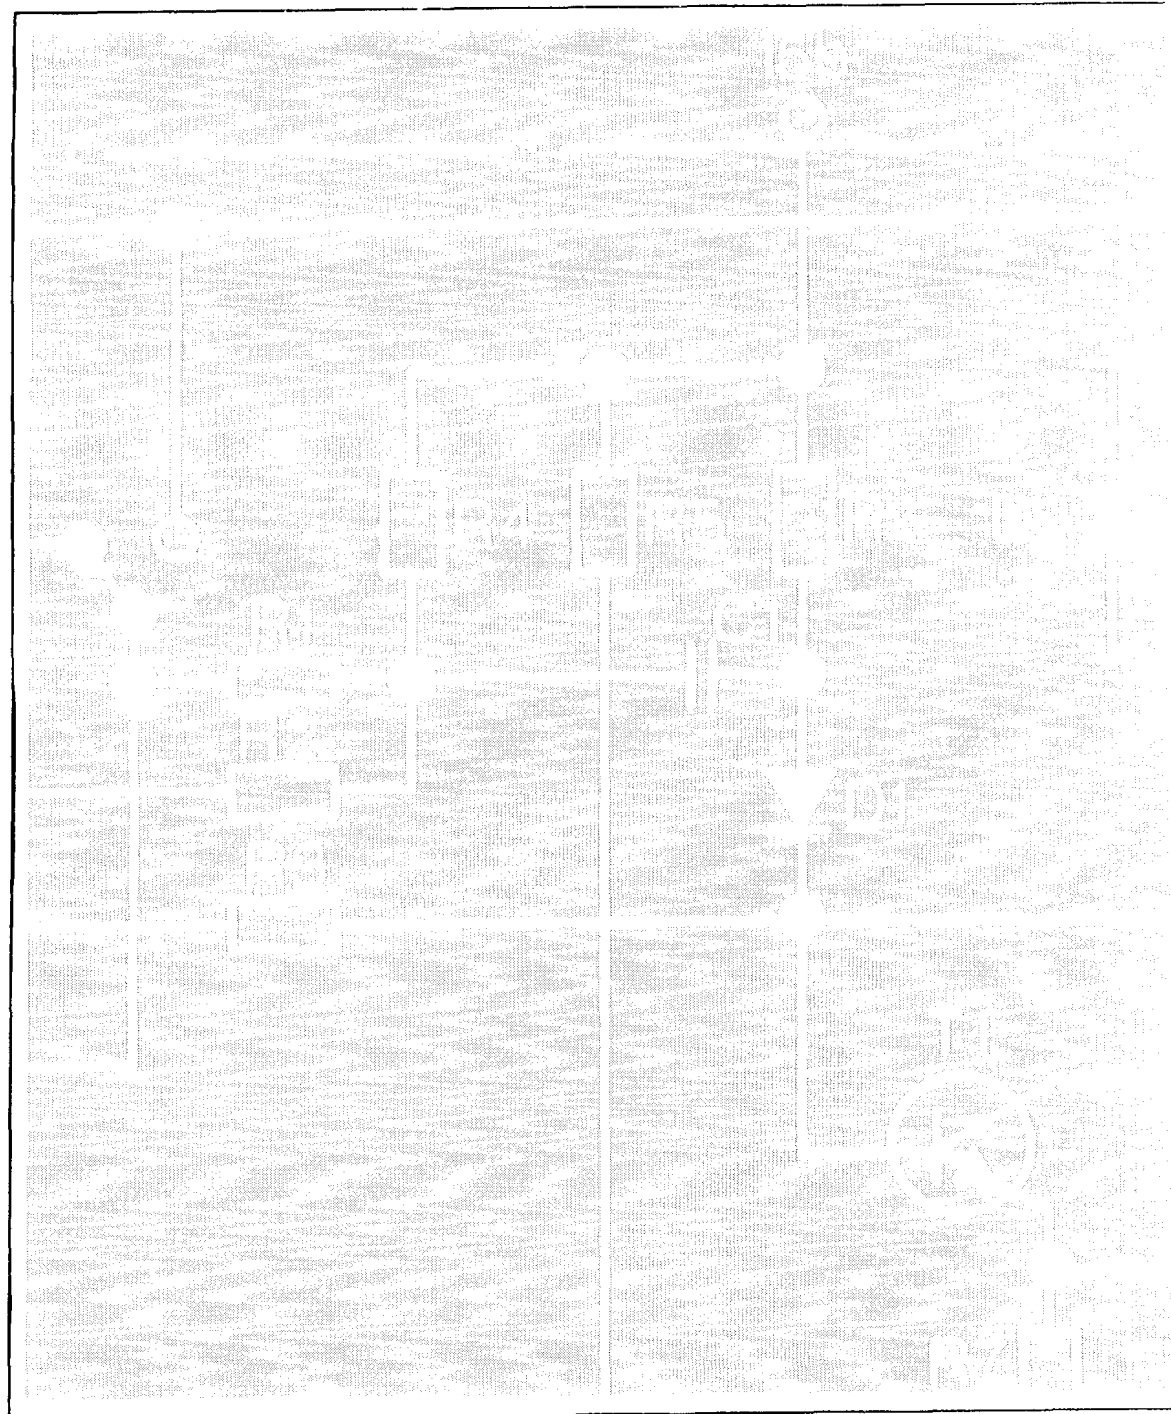

**1985
BMW 325e/318i
Electrical
Troubleshooting
Manual**

CONTENTS

Index	2
How To Use This Manual	3
Symbols.	4
Wire Size Conversion Chart	5
Systematic Troubleshooting	6
Section A: 325e Schematic Diagrams	
325e Index	100
325e Schematic Diagrams	101
Section B: 318i Schematic Diagrams	
318i Index.	100
318i Schematic Diagrams.	101
Section C: Component	
Locations.	201

The purpose of this manual is to show electrical schematics in a manner that makes electrical troubleshooting easier. Electrical components which work together are shown together on one schematic. The Wiper-Washer schematic, for example, shows all of the electrical components in one diagram. At the top of the page is the fuse (positive) that powers the circuit. The flow of current is shown through all wires, connectors, switches, and motors to ground (negative) at the bottom of the page.

Within the schematic, all switches and sensors are shown "at rest," as though the Ignition Switch were off. For identification, component names are underlined and placed next to or above each component. Notes are included, describing how switches and other components work.


The power distribution schematic shows the current feed through all the connections from the Battery and Alternator to each fuse and the Ignition and Light Switches. If the Power Distribution schematic is combined with any other circuit schematic, a complete picture is made of how that circuit works. The Ground Distribution schematics show how several circuits are connected to common grounds.

All wiring between components is shown exactly as it exists in the vehicle; however, the wiring is not drawn to scale. To aid in understanding electrical operation, wiring inside complicated components has been simplified. The "Solid State" label designates electronic components.


WIRE SIZE CONVERSION CHART	
METRIC (CROSSECTIONAL AREA IN MM ²)	AWG (AMERICAN WIRE GAUGE)
.5	20
.75	18
1	16
1.5	14
2	14
2.5	12
4	10
6	8
8	8
16	4
20	4
25	2
32	2

WIRE INSULATION	
ABBREVIATIONS	COLOR
BK	BLACK
BR	BROWN
RD	RED
YL	YELLOW
GN	GREEN
BU	BLUE
VI	VIOLET
GY	GRAY
WT	WHITE
PK	PINK

4 SYMBOLS



ENTIRE COMPONENT SHOWN




PART OF A COMPONENT SHOWN




COMPONENT WITH SCREW TERMINALS




SOLID STATE (INCLUDES ONLY ELECTRONIC PARTS)









COMPONENT CASE IS DIRECTLY ATTACHED TO METAL PART OF CAR (GROUNDED)

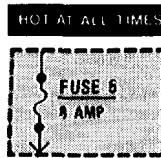

INDICATES THAT FUSE 5 IS ALWAYS SUPPLIED WITH POWER

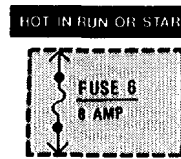

INDICATES THAT FUSE 6 IS SUPPLIED WITH POWER WITH THE IGNITION SWITCH IN THE RUN OR START POSITIONS

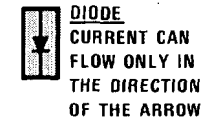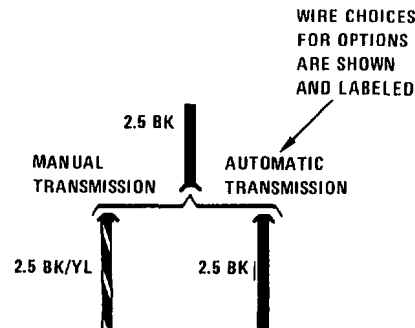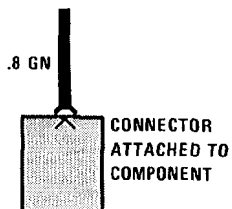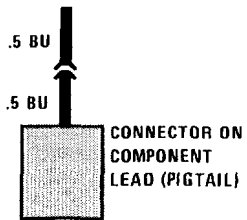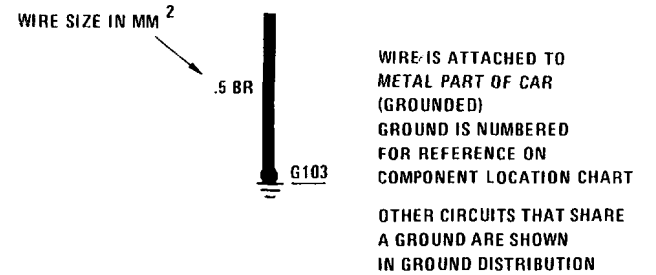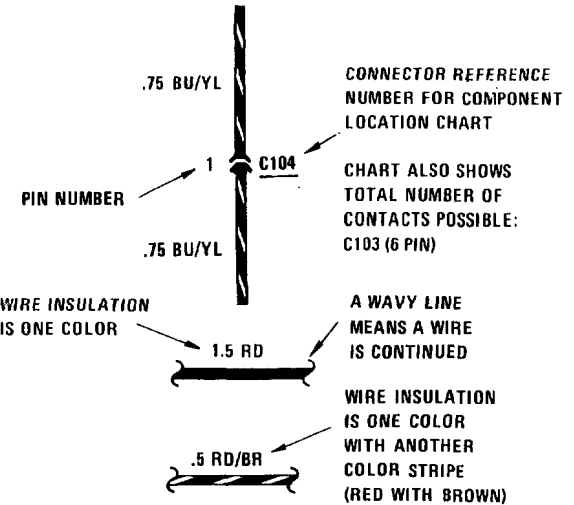

DIODE CURRENT CAN FLOW ONLY IN THE DIRECTION OF THE ARROW

CIRCUIT REFERENCE - A WIRE WHICH CONNECTS TO ANOTHER CIRCUIT




ACTIVE CHECK CONTROL



ONE POLE,
TWO POSITION
SWITCH



SWITCHES THAT
MOVE TOGETHER
DASHED LINE SHOWS
A MECHANICAL
CONNECTION
BETWEEN SWITCHES

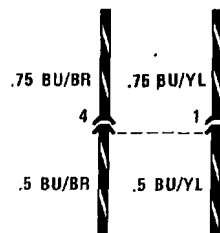


TWO CONNECTIONS
(PINS) IN THE SAME
CONNECTOR
DASHED LINE SHOWS
PARTS OF THE
SAME CONNECTOR





WHEN COIL IS
ENERGIZED, SWITCH
IS PULLED CLOSED

RELAY SHOWN
WITH NO
CURRENT
FLOWING
THROUGH
THROUGH
COIL






RELAY SHOWN
WITH RESISTOR
ACROSS COIL
RESISTOR ACROSS COIL
IS FOR NOISE
SUPPRESSION

RELAY SHOWN
WITH RESISTOR
ACROSS COIL

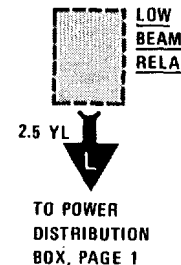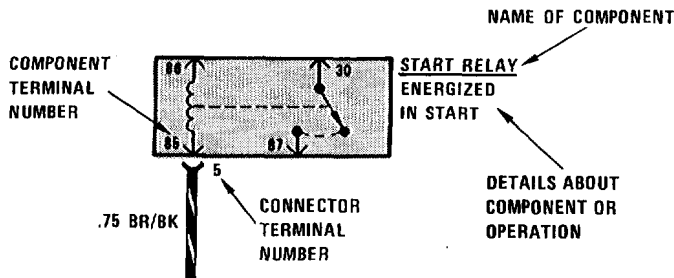

CURRENT PATH
IS CONTINUED
AS LABELED.
THE ARROW SHOWS
DIRECTION OF CURRENT
FLOW AND IS REPEATED
WHERE CURRENT
PATH CONTINUES.

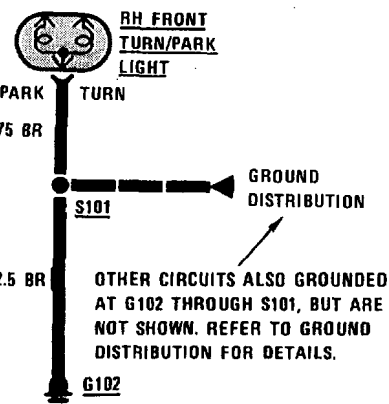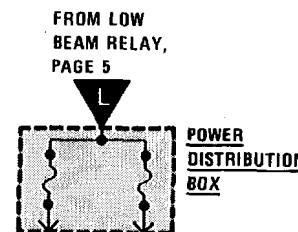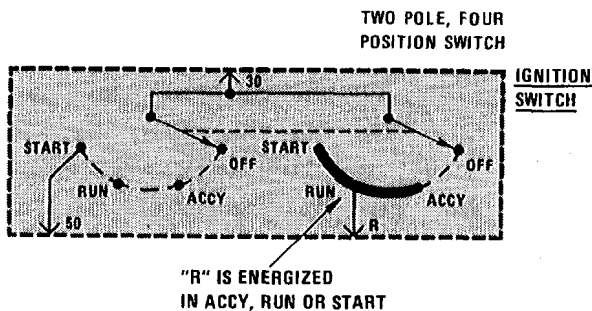

6 SYSTEMATIC TROUBLESHOOTING

TROUBLESHOOTING PROCEDURE

1. Verify the Problem

Operate the problem circuit to check the accuracy of the complaint. Note the symptoms of the inoperative circuit.

2. Analyze the Problem

Refer to the schematic of the problem circuit in the ETM. Determine how the circuit is supposed to work by tracing the current path(s) from the power feed through the circuit components to ground. Then based on the symptoms you noted in step 1 and your understanding of circuit operation, identify one or more possible causes of the problem.

3. Isolate the Problem

Make circuit tests to prove or disprove the preliminary diagnosis made in step 2. Keep in mind that a logical simple procedure is the key to efficient troubleshooting. Test for the most likely cause of failure first. Try to make tests at points which are easily accessible.

4. Repair the Problem

Once the specific problem is identified, make the repair using the proper tools and safe procedures.

5. Check the Problem

Operate the circuit to check for satisfactory circuit operation. Good repair practice calls for rechecking all circuits you have worked on.

TROUBLESHOOTING TOOLS


Isolating the problem (Step 3 of TROUBLESHOOTING PROCEDURES) requires the use of a **voltmeter** and/or **ohmmeter**. A voltmeter measures voltage at selected points in a circuit. An ohmmeter measures a circuit's resistance to current flow. It has an internal battery that provides current to the circuit under test. Disconnect the car battery when using an ohmmeter because the battery voltage will cause the ohmmeter to give false readings. Also, do not use an ohmmeter on solid-state components. The voltage that the ohmmeter applies to the circuit could damage these components.

TROUBLESHOOTING TESTS

Voltage Test

This test measures voltage in a circuit. By taking measurements at several points (terminals or connectors) along the circuit, you can isolate the problem.

To take a voltage measurement, connect the negative lead of the voltmeter to the battery's negative terminal or other known good ground. Then connect the positive lead of the voltmeter to the point you want to test. The voltmeter will measure the voltage present at that point in the circuit.

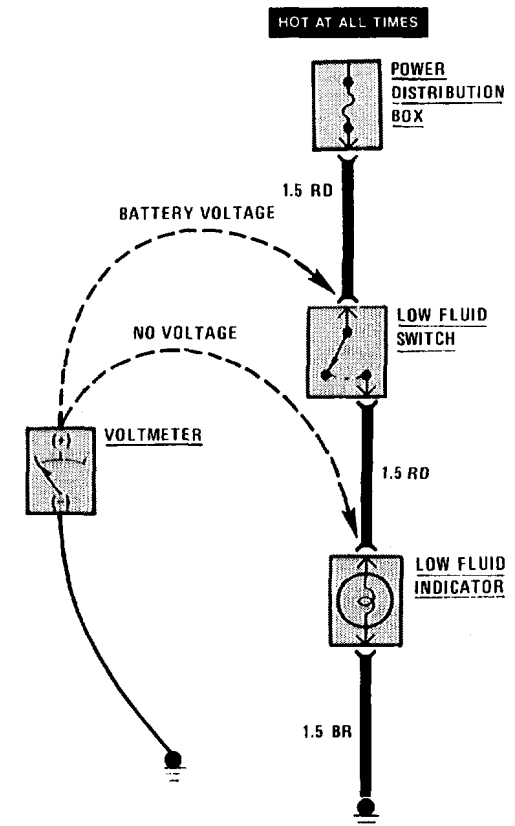


Voltage Test

Voltage Drop Test

Wires, connectors, and switches are designed to conduct current with a minimum loss of voltage. A voltage drop of more than one volt indicates a problem.


To test for voltage drop, connect the voltmeter leads to connectors at either end of the circuit's suspected problem area. The positive lead should be connected to the connector closest to the power source. The voltmeter will show the voltage drop between these two points.

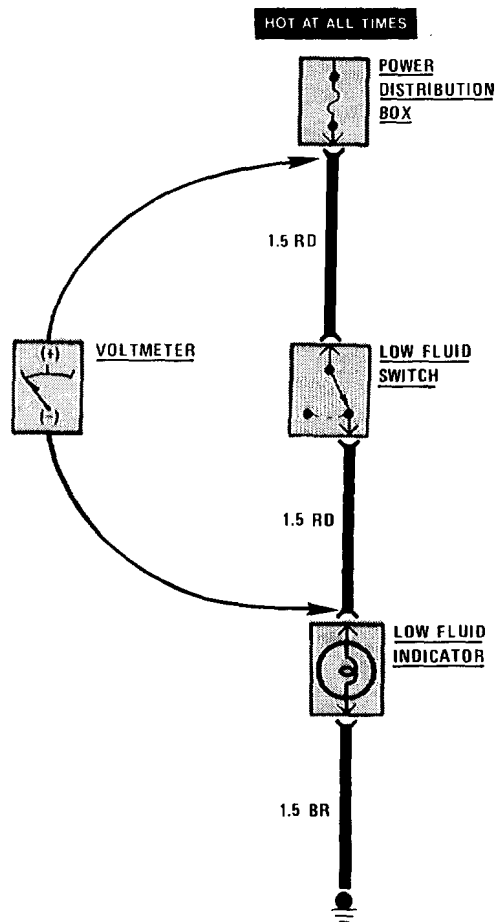

Voltage Drop Test

Continuity Test

To perform a continuity test, first disconnect the car battery. Then adjust the ohmmeter to read zero while holding the leads together. Connect the ohmmeter leads to connector or terminals at either end of the circuit's suspected problem area. The ohmmeter will show the resistance across that part of the circuit.

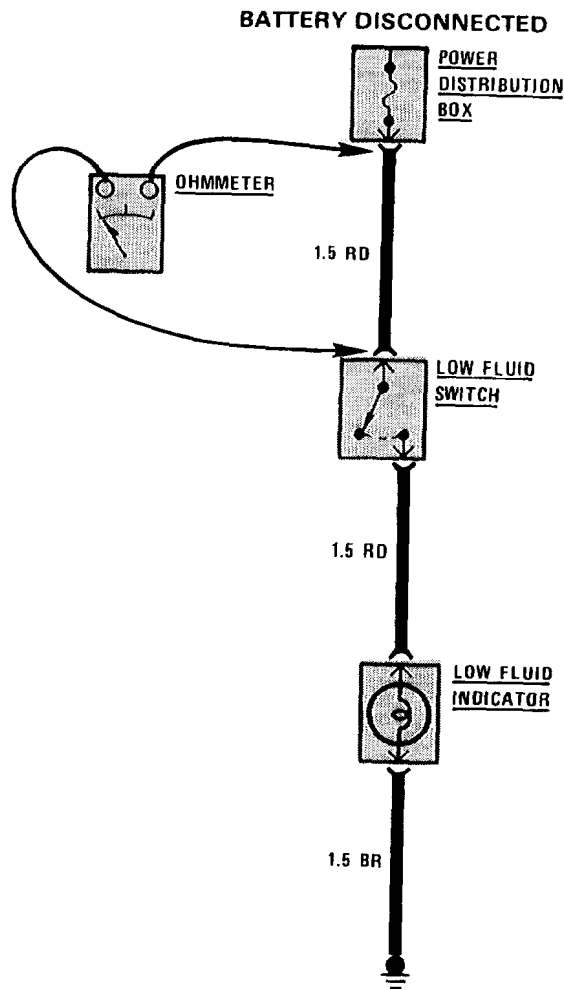


Continuity Test

Short Test Using Voltmeter

Remove the blown fuse and disconnect the load. Connect the voltmeter leads to the fuse terminals. The positive lead should be connected to the terminal closest to the power source.

Starting near the POWER DISTRIBUTION BOX, move the wire harness back and forth and watch the voltmeter reading. If the voltmeter registers a reading, there is a short to ground in the wiring. Somewhere in the area of the harness being moved, the wire insulation is worn away and the circuit is grounding.

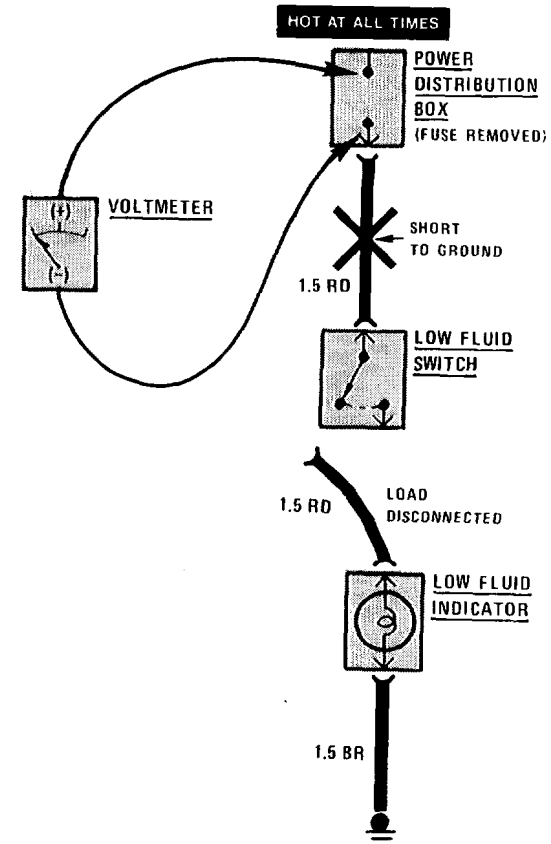


Short Test Using Voltmeter

8 SYSTEMATIC TROUBLESHOOTING

Short Test Using Ohmmeter

Disconnect the battery. Adjust the ohmmeter to read zero while holding the leads together. Remove the blown fuse and disconnect the load. Connect one lead of the ohmmeter to the fuse terminal that is closest to the load. Connect the other lead to a known good ground.

Starting near the POWER DISTRIBUTION BOX, move the wire harness back and forth and watch the ohmmeter reading. Low or no resistance indicates a short to ground in the wiring. Infinitely high resistance indicates no short.

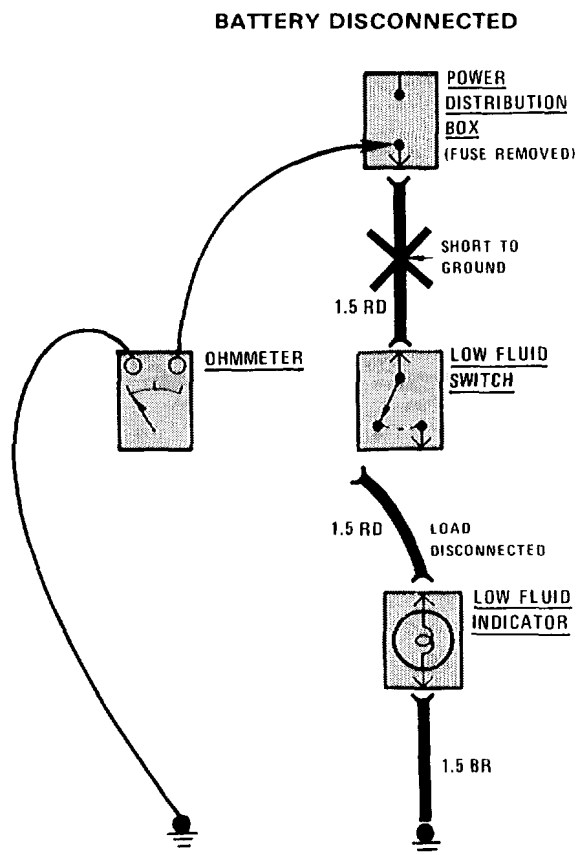

Short Test Using Ohmmeter


Section A

325e

Schematic Diagrams

Index—Alphabetical Listing of Electrical Circuits (325e)

	PAGE		PAGE		PAGE
Active Check Control	135	— Compressor Controls	153	— Hazard Warning	140
Air Conditioning		— Fresh/Recirculating Air Control	154	— Headlights (Control)	138
— Blower Controls	152	— Hot Water Control	155	— Headlights (Power)	139
— Compressor Controls	153	Horns	146	— Interior (2 Door)	149
— Fresh/Recirculating Air Control	154	Idle Speed Control	122	— Interior (4 Door)	150
— Hot Water Control	155	Ignition	123	— Instrument Cluster	151
Auto-Charging Flashlight	148	Ignition Key Warning	134	— License	143
Auxiliary Fan	156	Indicators	126	— Rear Marker	143
Brake Warning System	130	— Active Check Control Alarm	137	— Stop Lights	144
Central Locking		— “Brake Lights” Fault	144	— Tail	142
— (2 Door)	160	— “Brake Lining” Wear	130	— Turn	140
— (4 Door)	162	— “Brake Warning”	130	— Trunk	143
Charging System	118	— “Charge”	118	Light Switch Details	115
Cigar Lighter	148	— “Coolant” Level Fault	137	On-Board Computer	132
Connectors		— “Engine Oil” Fault	137	Power Antenna	164
— Accessory	102	— Fasten Seatbelts	134	Power Distribution	104
— Diagnostic	101	— Fog Lights	138	Power Distribution Box	103
Cruise Control	144	— High Beam	139	Power Mirrors	
Engine Block Diagram	119	— Inspector	129	— Dual Motor	166
Fuel Control	125	— LH Turn	141	— Single Motors	165
Fuel Delivery	124	— “License Plate” Fault	143	Power Windows	
Fuel Economy Gauge	128	— “Low Beam” Fault	135	— (2 Door)	157
Fuel Gauge	127	— Low Fuel Warning	133	— (4 Door)	158
Fuse Details		— Oil Pressure Warning	127	Radio	164
— Fuse 4	114	— Oil Service	129	Rear Defogger	147
— Fuse 5	114	— “Park Brake”	130	Seatbelt Warning	134
— Fuse 6	114	— Rear Lights Fault	142	Service Internal Indicator	129
— Fuse 8	108	— RH Turn	141	Speedometer	126
— Fuse 9	113	— “Washer Fluid” Fault	137	Splice Location Index	171
— Fuse 10	109	Lights		Start	
— Fuse 12	108	— A/C Control	151	— Automatic	116
— Fuse 19	108	— Ashtray	151	— Manual	117
— Fuse 20	110	— Back Up	146	Sunroof	167
— Fuse 21	111	— Brake	144	Tachometer	128
— Fuse 27	112	— Cigar Lighter	151	Temperature Gauge	127
Gauges	127	— Dash	151	Warnings	
Ground Distribution	168	— Fog	138	— Ignition Key	134
Heating		— Front Park	142	— Seatbelt	134
— Blower Controls	152	— Front Side Marker	142	Washer Jet Heaters	131
		— Glove Box	148	Wiper/Washer	131

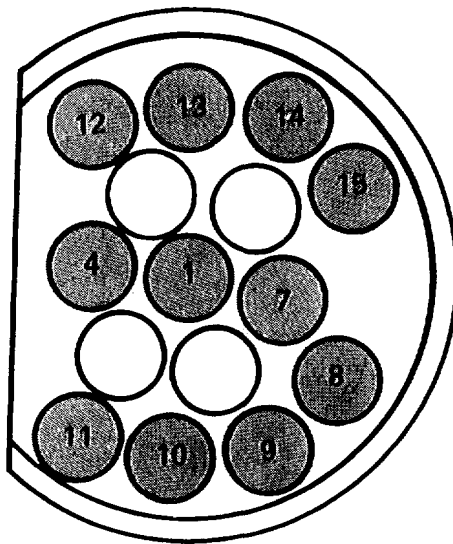

DIAGNOSTIC CONNECTOR FACE

PIN	WIRE SIZE	WIRE COLOR	CIRCUIT AND COMPONENT CONNECTED
1	1.5	BR	Ground Distribution, G103
4	.5	BR/VI	Gauges/Warning Indicators, Coolant Temperature Sender
7	.5	WT/BU	Service Interval Indicator, Service Interval Processor (Reset)
8	.5	YL	Ignition, TDC Sensor.
9		SHIELD	Ignition, TDC Sensor.
10	.5	BK	Ignition, TDC Sensor.
11	2.5	BK/YL	Start, Start Signal. (50)
12	.75	BU	Charge System, Alternator (D+)
13	1	GN	Ignition, Ignition Coil
14	2.5	RD	Charge System, Alternator (30)
15	1.5	GN/YL	Idle Speed Control, Idle Speed Control Unit.

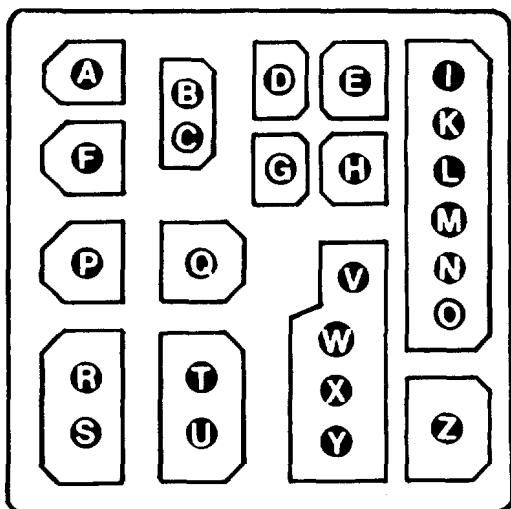


Figure 1-C302 (Accessory Connector)
 Front View—Under LH Side
 of Dash Ahead of Pedal Assembly

CIRCUITS USING C301 (ACCESSORY CONNECTOR)

TERMINAL	CIRCUIT	TERMINAL	CIRCUIT
A	Not Used	N	Not Used
B	Not Used	O	Not Used
C	Not Used	P	Not Used
D	Central Locking	Q	Power Windows & Sunroof
E	Not Used	R	Cruise Control
F	Not Used	S	Cruise Control
G	Not Used	T	Not Used
H	On-Board Computer	U	Not Used
I	Not Used	V	Radio
J	Not Used	W	Not Used
K	Not Used	X	Radio
L	Not Used	Y	Radio
M	Not Used	Z	Power Antenna

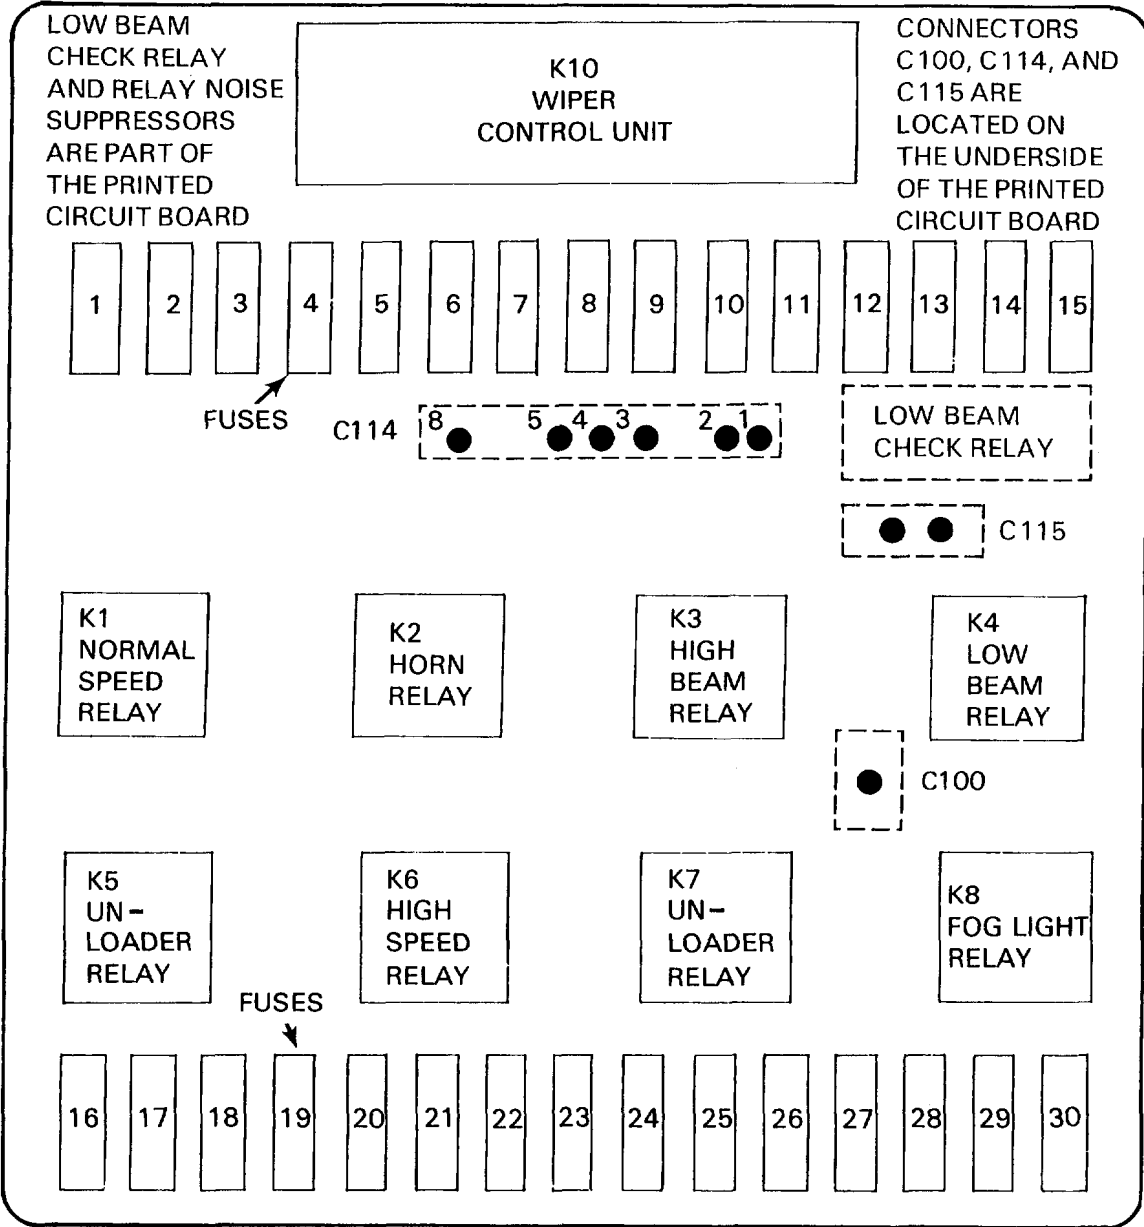


Figure 1 - Behind Left Front Shock Tower

103A FUSE DATA


FUSE NO.	SIZE/ COLOR	CIRCUIT NAME
1	7.5A (BR)	Headlights (also fuses 2, 13, 14).
2	7.5A (BR)	Headlights (also fuses 1, 13, 14).
3	15A (LT BU)	Auxiliary Fan (also fuses 18, 19).
4	15A (LT BU)	Lights: Turn/Hazard Warning (also fuse 24); Active Check Control (also fuses 6, 10, 21, 22, 23).
5	30A (LT GN)	Wiper/Washer.
6	7.5A (BR)	Stoplights/Cruise Control (also fuse 10); Active Check Control (also fuses 4, 10, 21, 22, 23); Cruise Control.
7	15A (LT BU)	Horn.
8	30A (LT GN)	Rear Defogger (also fuse 23).
9	15A (LT BU)	Idle Speed Control (also fuse 10).
10	7.5A (BR)	Seatbelt Warning (also fuse 21); Service Interval Indicator (also fuse 21); Tachometer/Fuel Economy Gauges (Also fuse 21); Gauges/Indicators; Brake Warning System; Back Up Lights; On-Board Computer (also fuses 12, 21, 27); Start; Idle Speed Control (also fuse 9); Active Check Control (also fuse 21); Stoplights/Cruise Control (also fuse 6).
11	15A (LT BU)	Fuel Delivery.
12	7.5A (BR)	Radio (also fuse 21); Speedometer/Indicators (also fuse 8); On-Board Computer (also fuse 10, 21, 27).
13	7.5A (BR)	Headlights (also fuses 1, 2, 14).
14	7.5A (BR)	Headlights (also fuses 1, 2, 13).
15		Not Used.
16		Not Used.
17	15A (LT BU)	Sunroof.
18	30A (LT GN)	Auxiliary Fan (also fuses 3, 19).
19	7.5A (BR)	Auxiliary Fan (also fuses 3, 18); Interior Lights (also fuses 21, 27); Power Mirrors.

FUSE NO.	SIZE/ COLOR	CIRCUIT NAME
20	30A (LT GN)	Heater/Air Conditioning (also fuse 28).
21	7.5A (BR)	Auto-Charging Flashlight; Glove Box Light; Ignition Key Warning/Seatbelt Warning (also fuse 10); Interior Lights (also fuses 14, 22, 27); Radio (also fuses 12); Trunk Light; Active Check Control (also fuses 4, 6, 10, 22, 23); Service Interval Indicator (also fuse 10); On-Board Computer (also fuses 10, 12, 27); Fuel Delivery; Tachometer/Fuel Economy Gauge (also fuse 10).
22	7.5A (BR)	Active Check Control (also fuses 4, 6, 10, 21, 23); Lights: Front Park/Tail (also fuse 23); Lights: Front Side Marker (also fuse 23).
23	7.5A (BR)	Lights: Dash Lights: Front Park/Tail (also fuse 22); Lights: Front Side Marker (also fuse 22); Lights: Rear Marker/License; Active Check Control (Also fuses 4, 6, 10, 21, 22); Rear Defogger (also fuse 8).
24	15A (LT BU)	Lights: Turn/Hazard Warning (also fuse 4).
25		Not Used.
26		Not Used.
27	30A (LT GN)	Interior Lights (also fuses 19, 21); Central Locking; On-Board Computer (also fuses 10, 12, 21).
28	30A (LT GN)	Cigar Lighter; Power Antenna.
29	7.5A (BR)	Fog Lights (also fuse 30).
30	7.5 (BR)	Fog Lights (also fuse 29).

BLANK


104 POWER DISTRIBUTION

(For Component Location See Page 213)

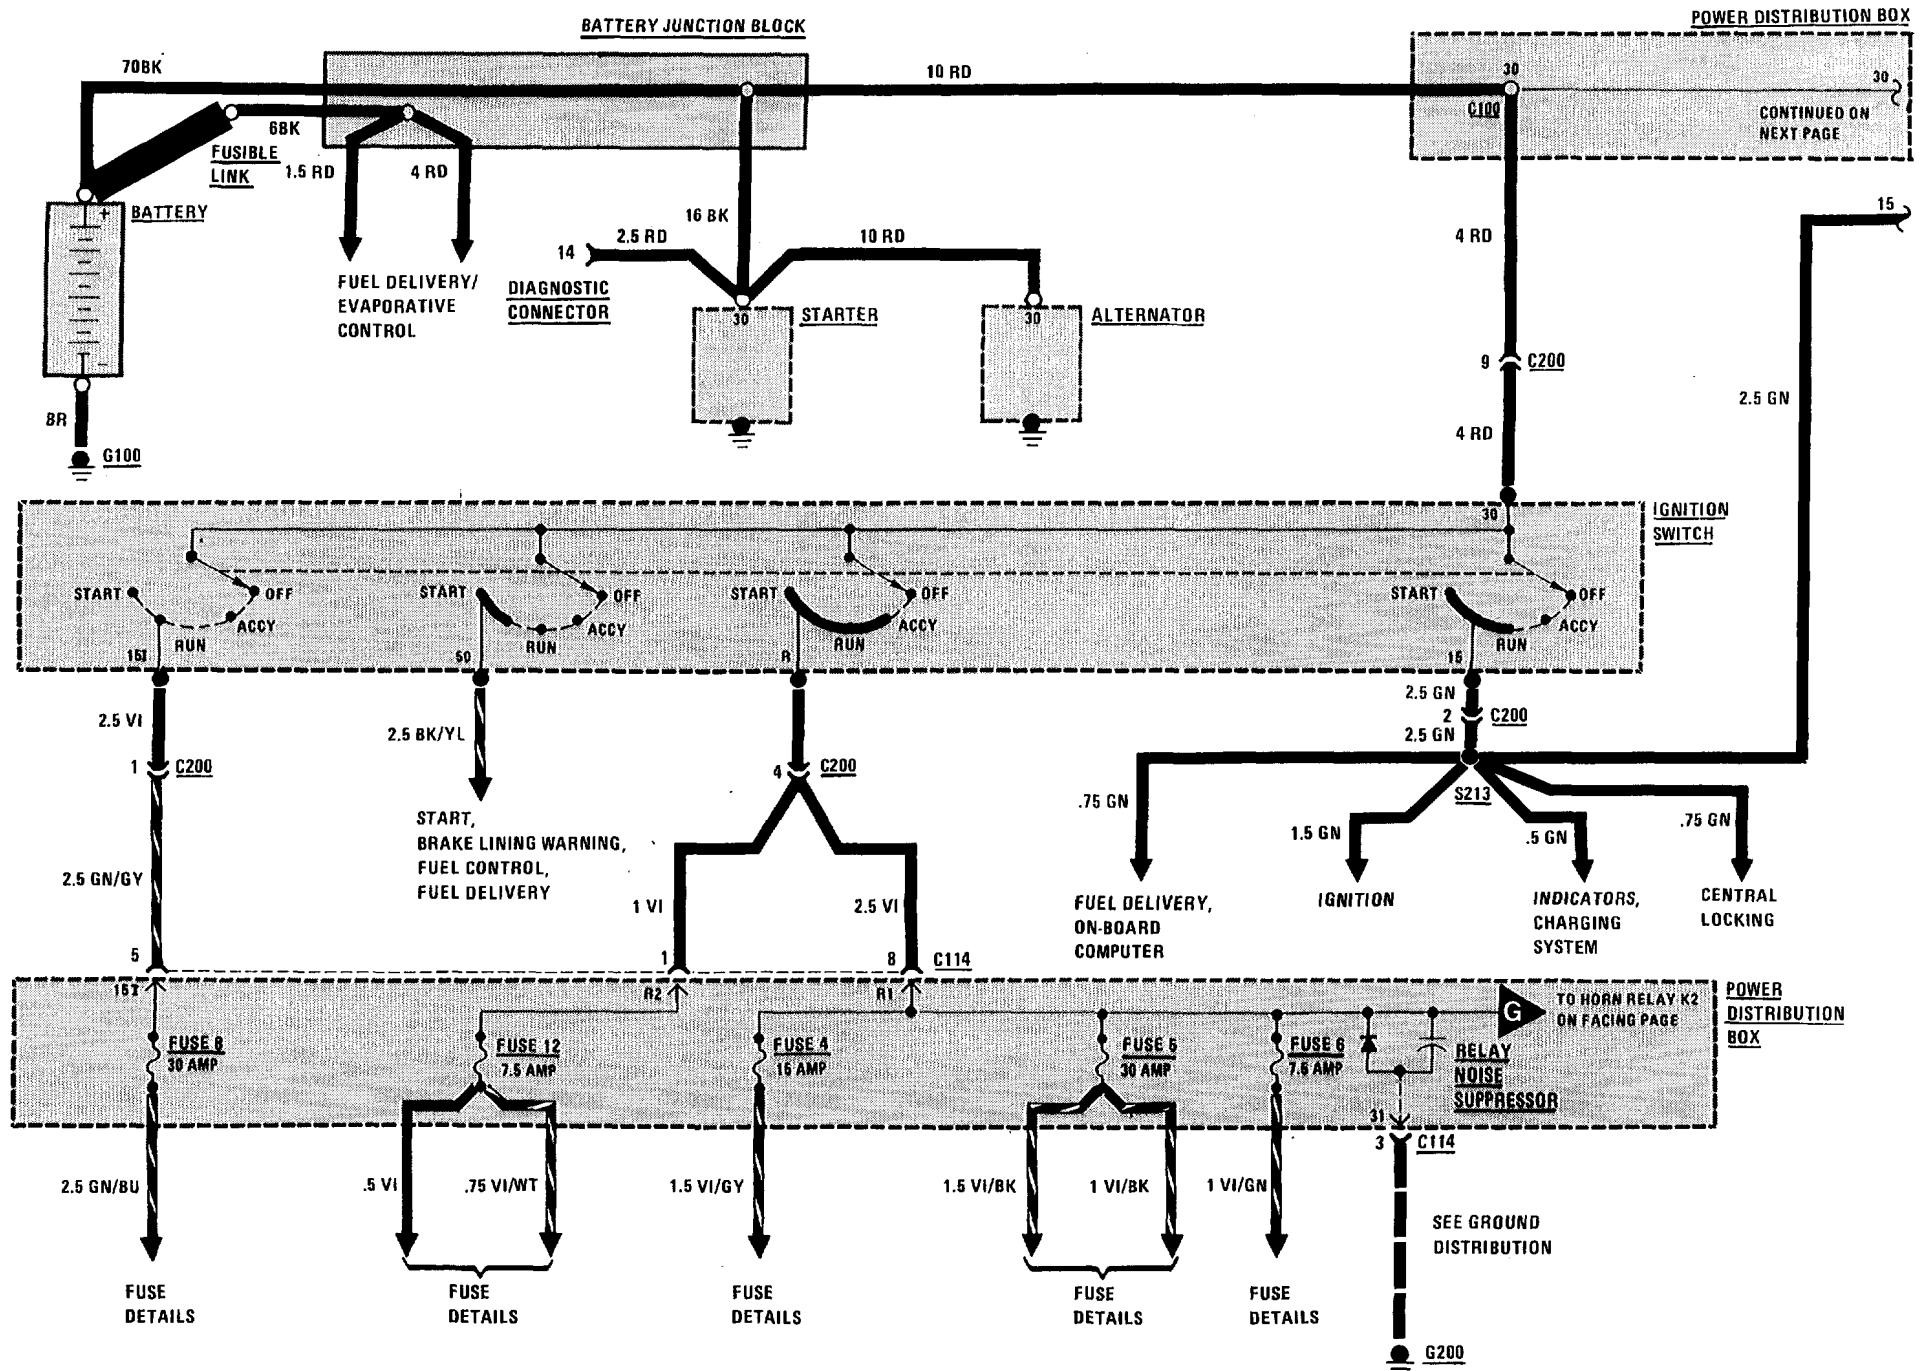


(For Component Location See Page 213)

POWER DISTRIBUTION BOX

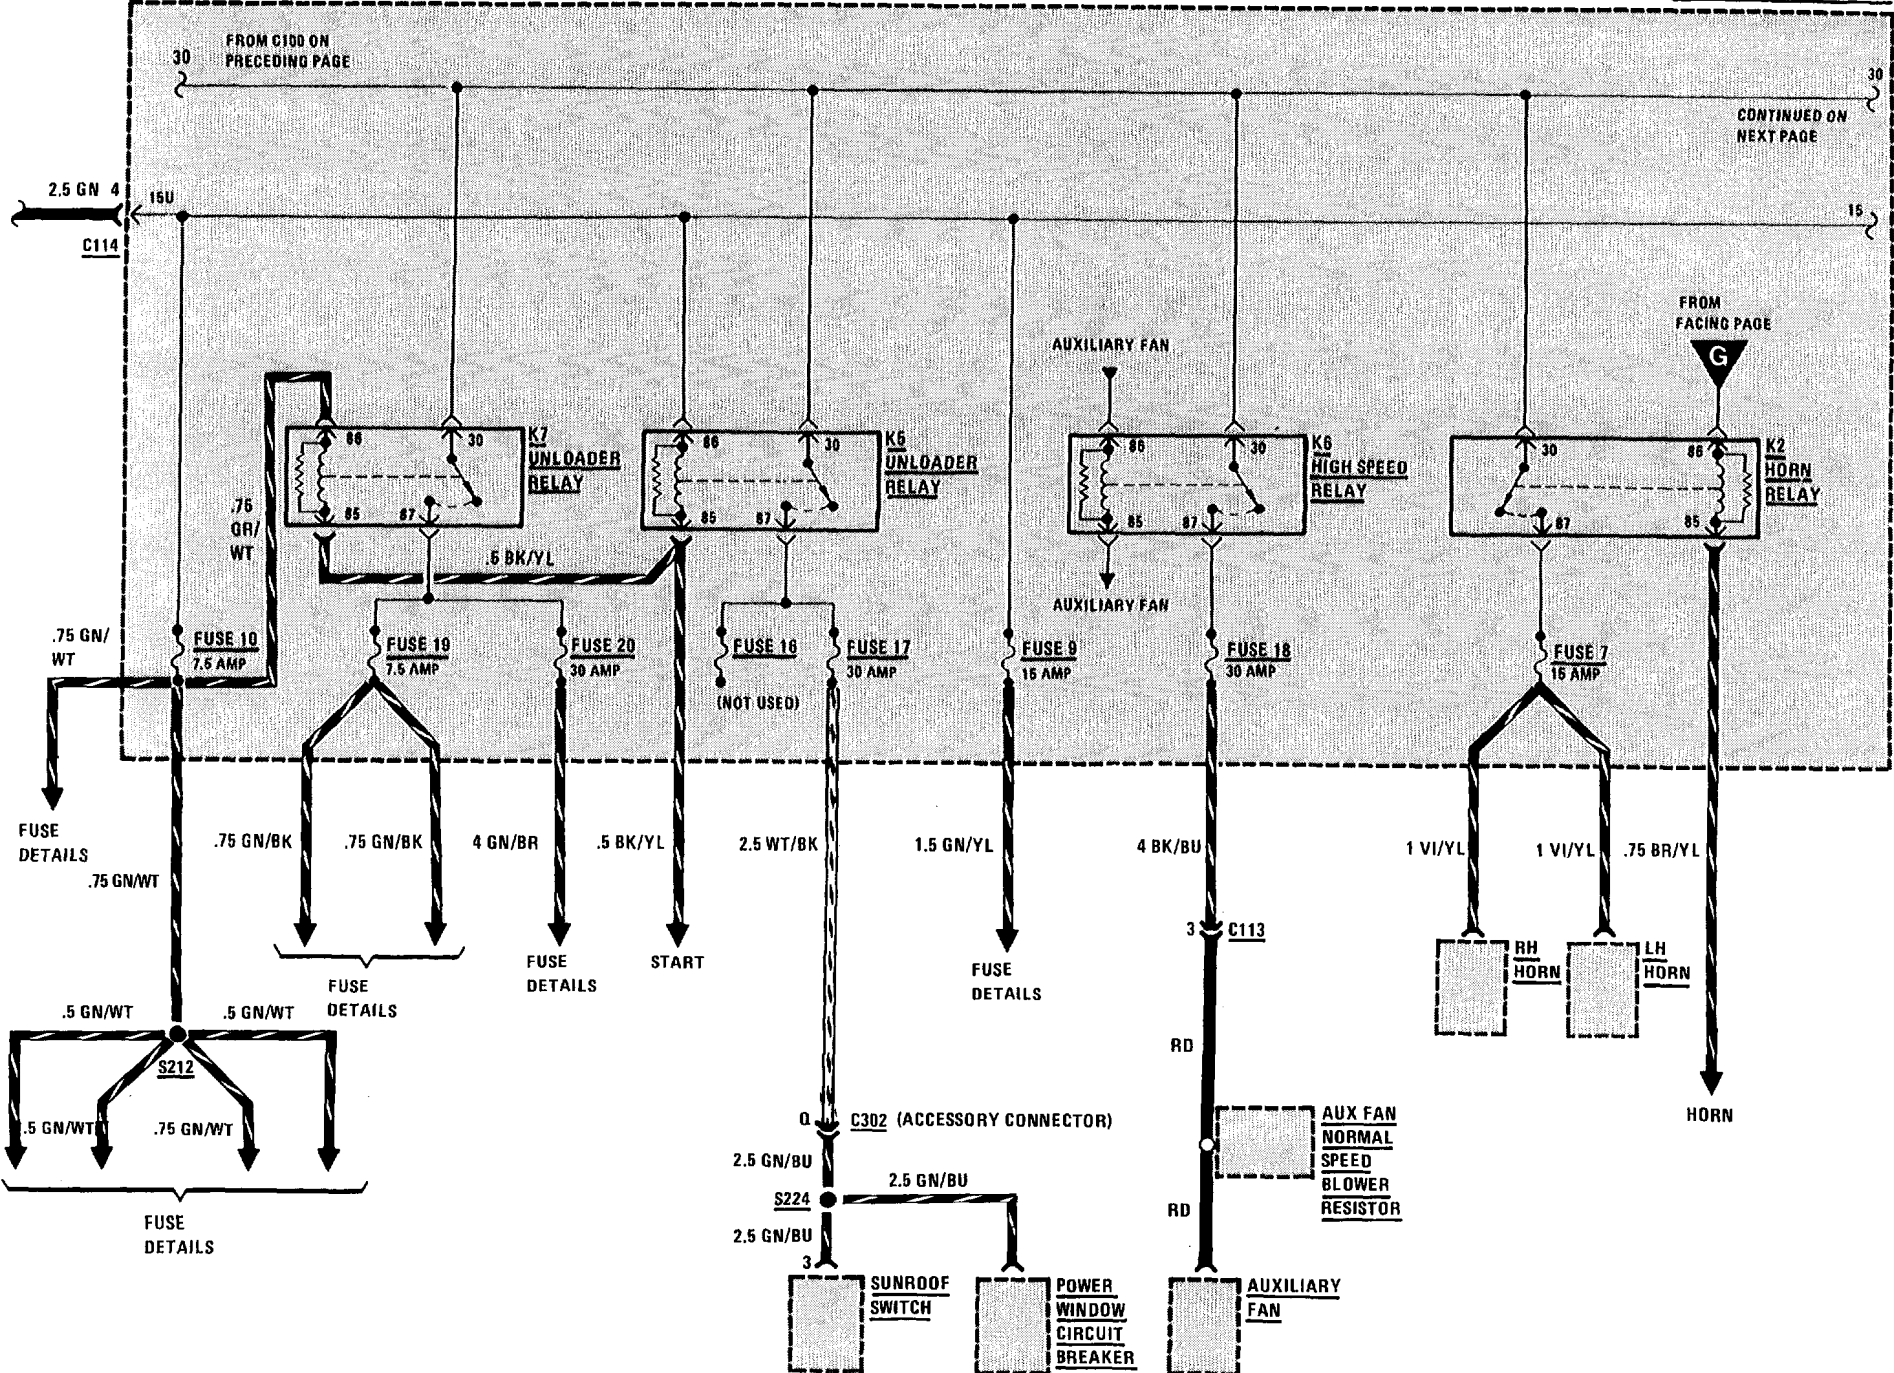

106 POWER DISTRIBUTION

(For Component Location See Page 213)

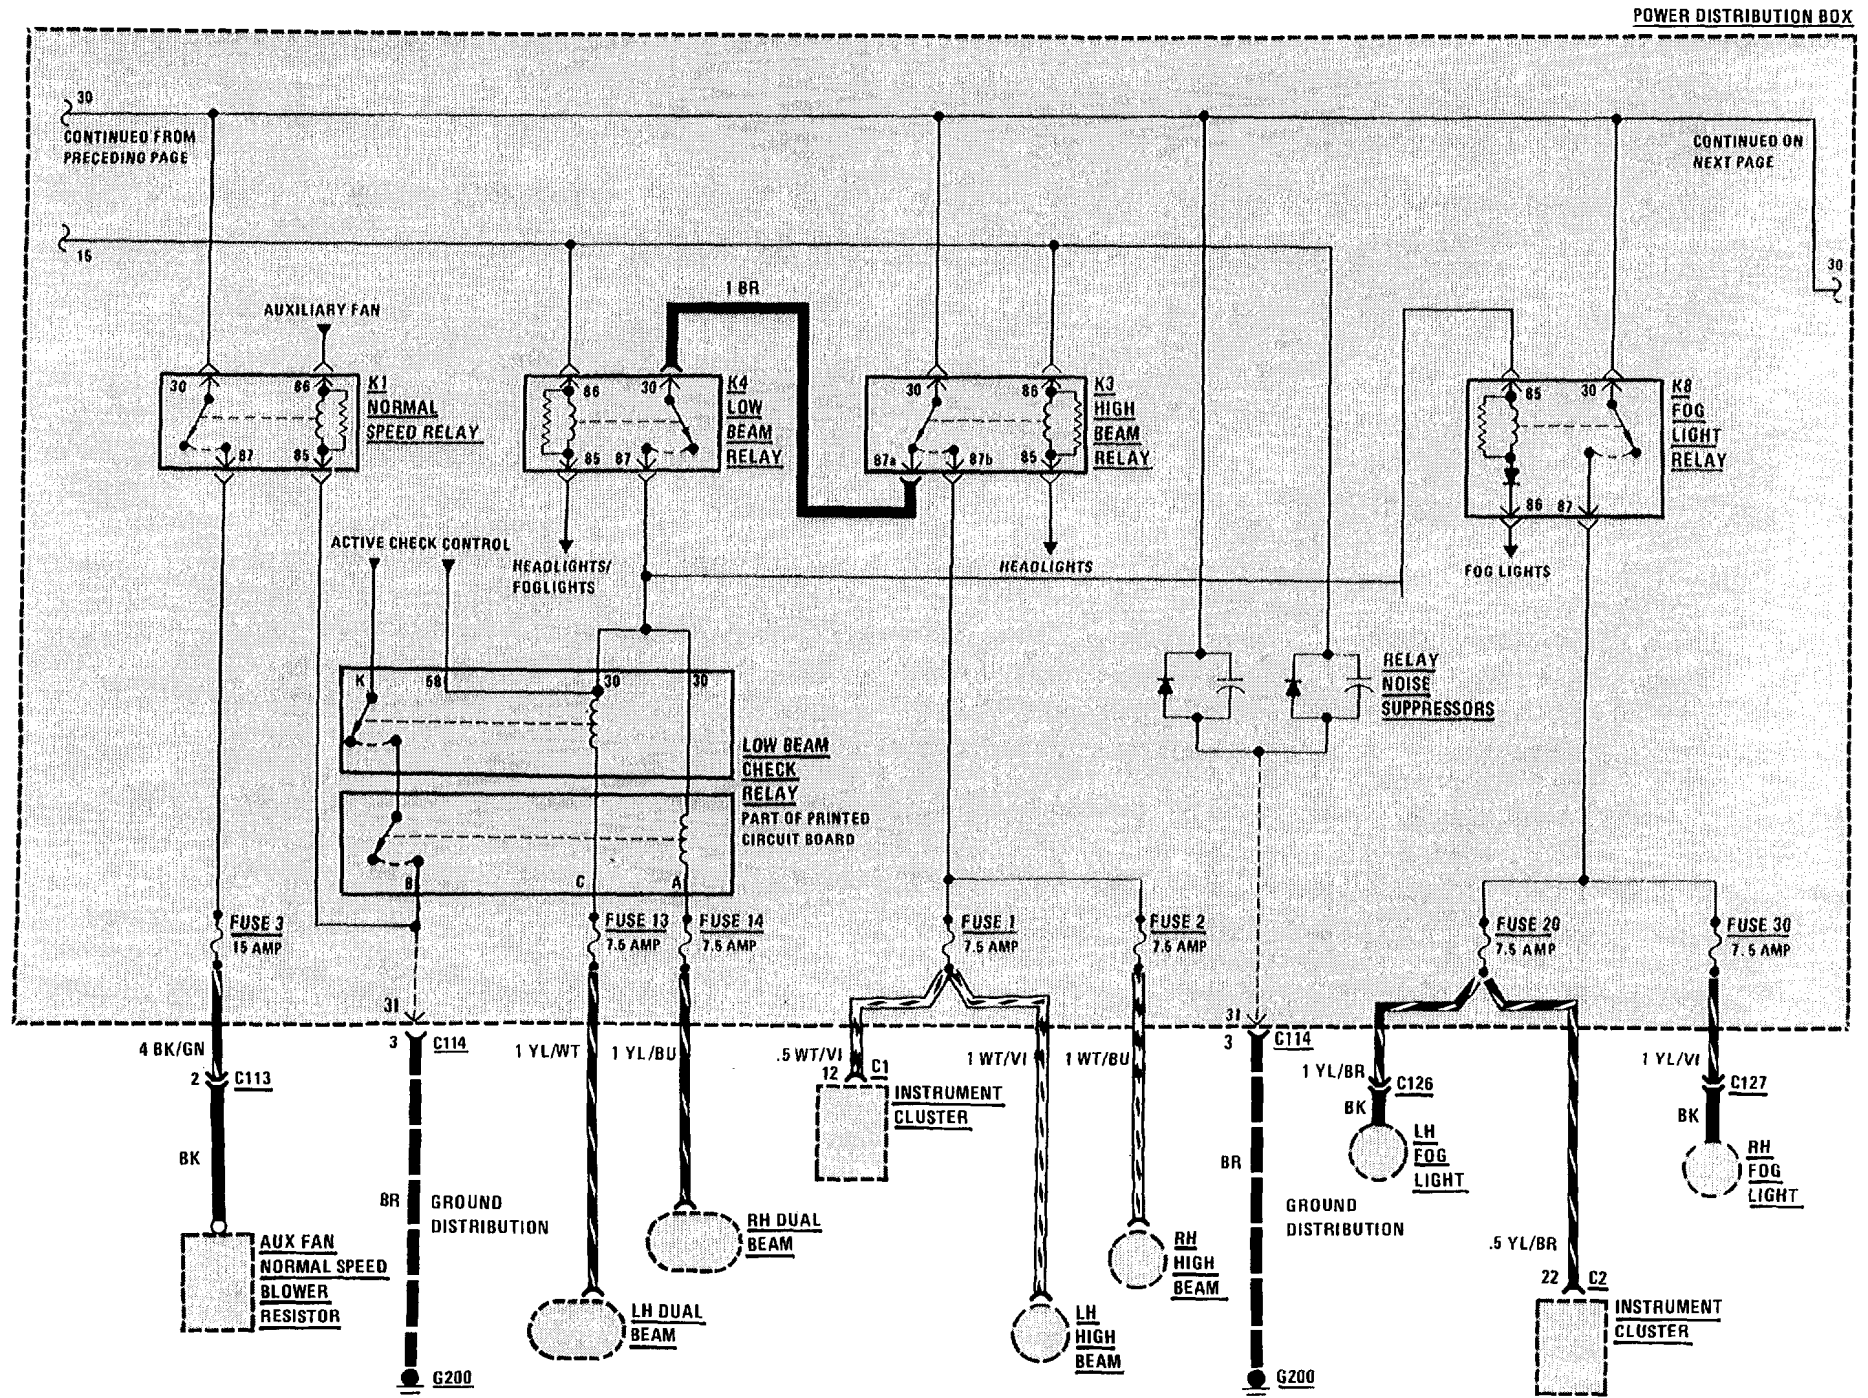

(For Component Location See Page 213)

POWER DISTRIBUTION BOX

