
1992

BMW 318ic

Electrical

Troubleshooting

Manual

FINAL EDITION

BMW of North America, Inc.
Woodcliff Lake, New Jersey

FOREWORD


In the interests of continuing technical development work we reserve the right to modify designs and equipment.

Printed in USA

©Copyright BMW of North America, Inc.

Not to be reproduced wholly or in part without written permission of BMW of North America, Inc


PN 91 00 0 000 022

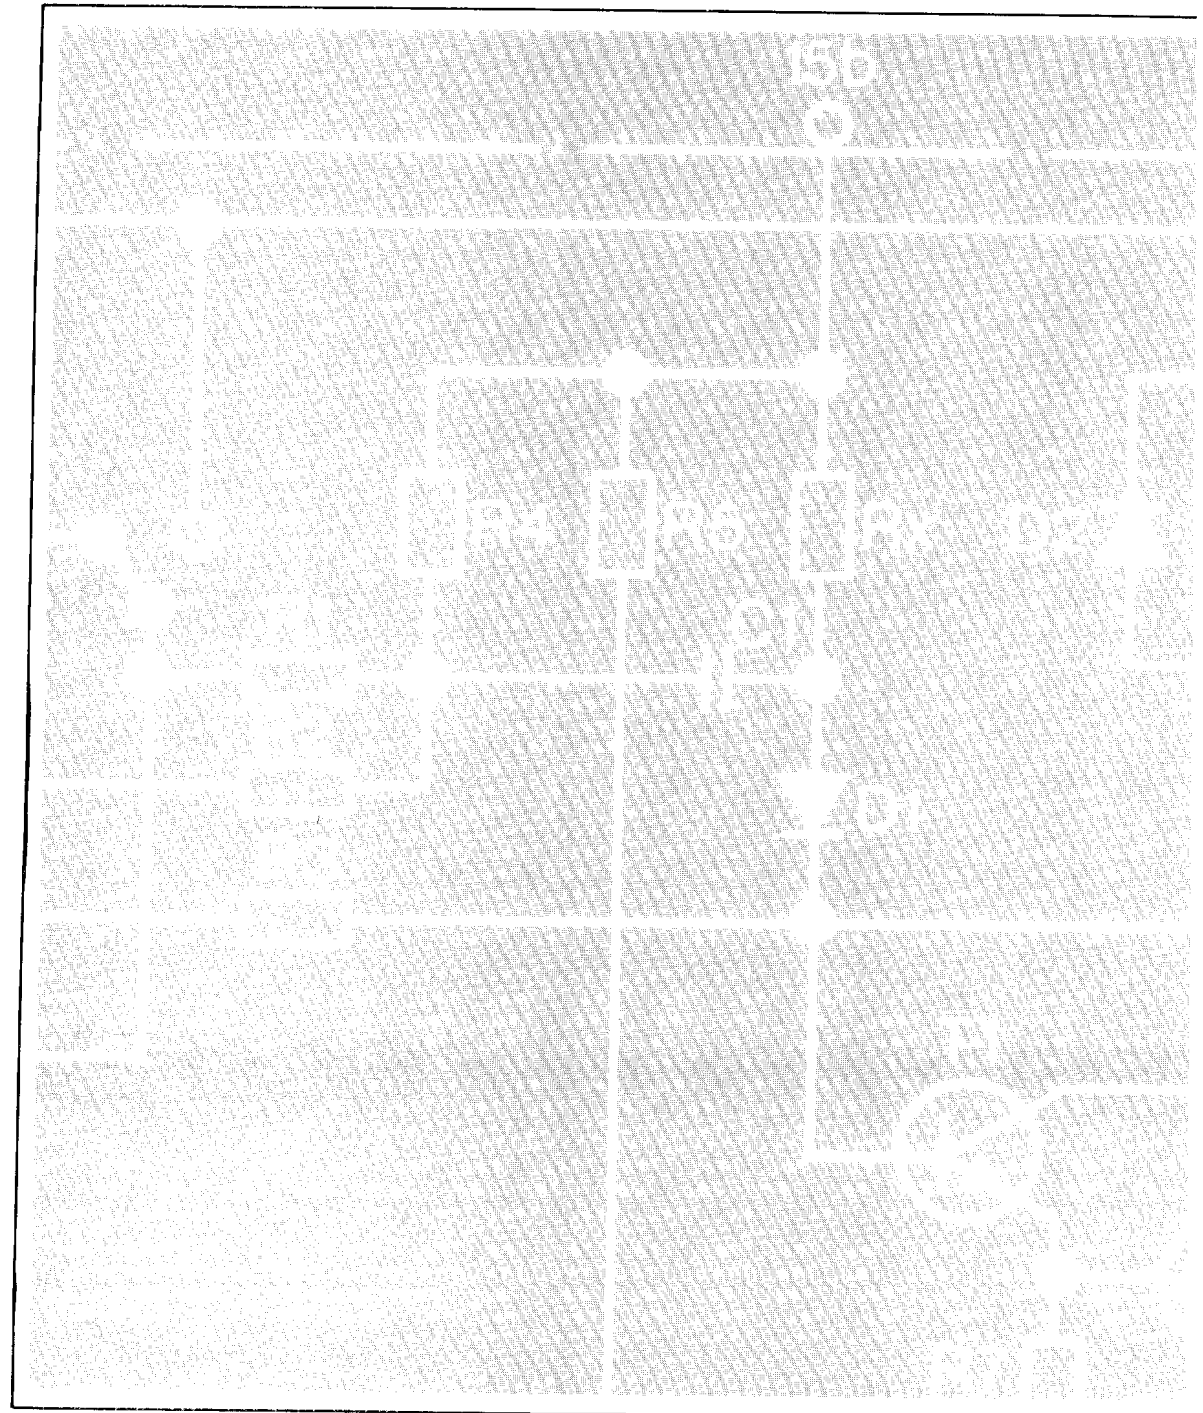

**1992
BMW 318ic
Electrical
Troubleshooting
Manual**

CONTENTS

Index	2
How To Use This Manual	3
Wire Size Conversion Chart	3
Symbols	4
Systematic Troubleshooting	6
Power Distribution Box	0670-0
Fuse Data	0670-1
Component Location Views	7000-0
Splice Location Views	8000-0
Connector Views	8500-0
Component Location Chart	9000-0

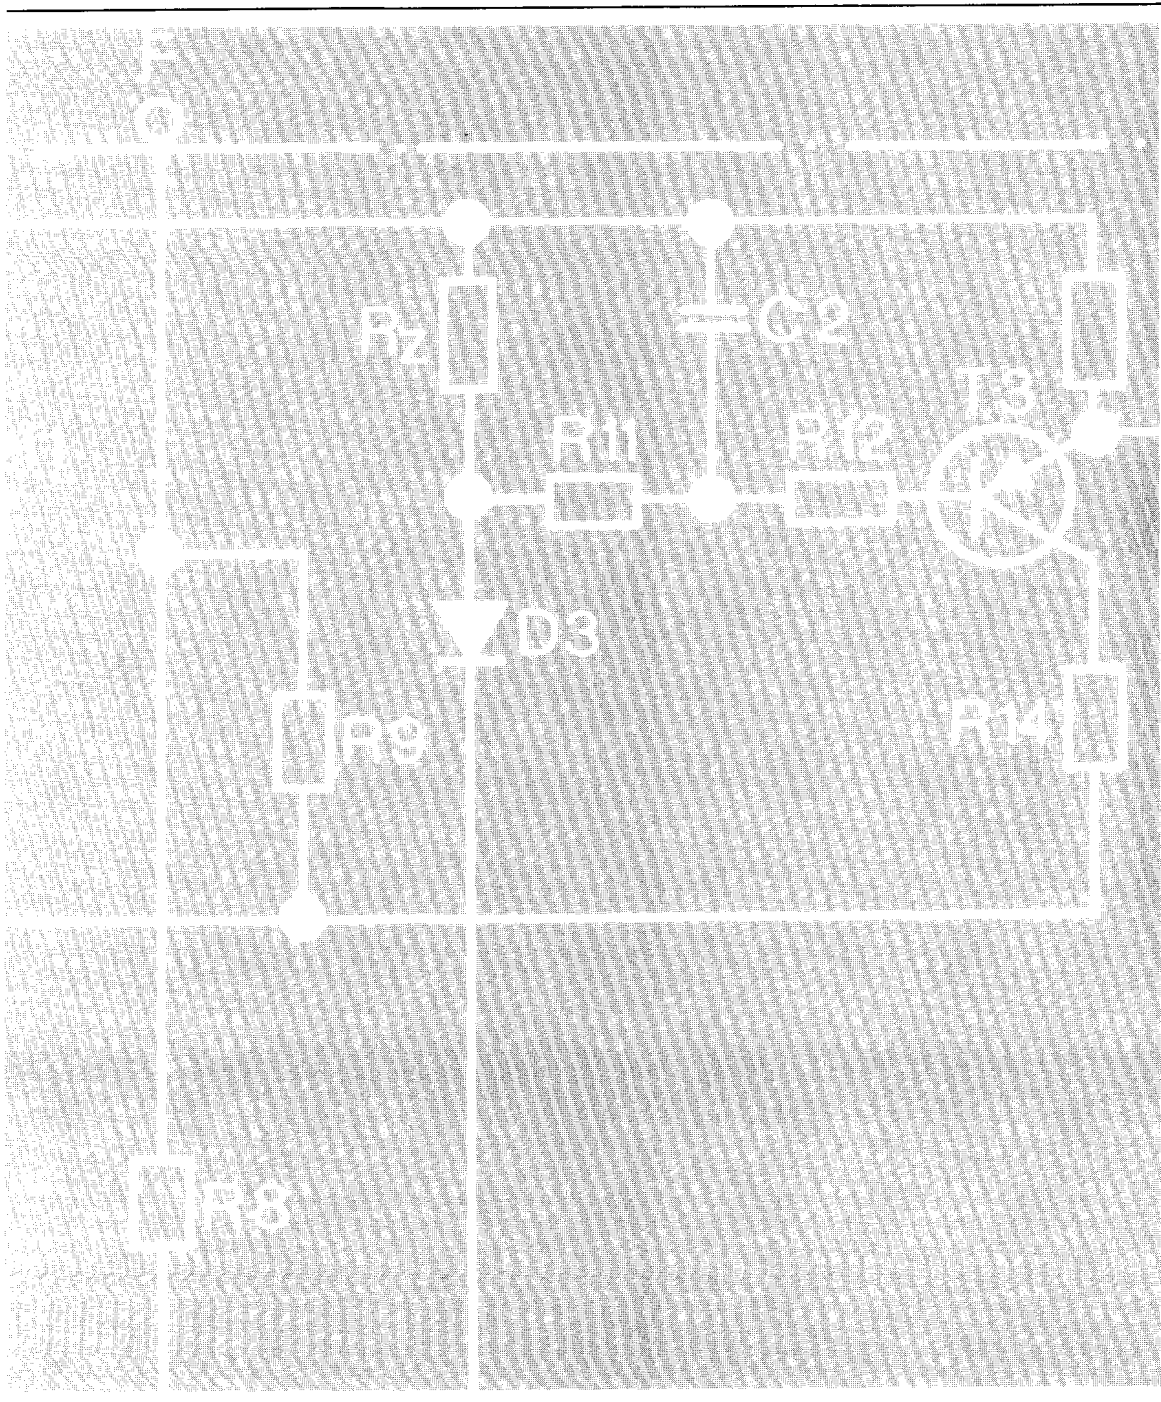

Index — Alphabetical Listing of Electrical Circuits

	PAGE		PAGE		PAGE
A/C Air Delivery Control	6421-0	— G202	0670-13	— License	6320-C
A/C Blower Controls	6413-0	— G300	0670-15	— Map Reading Light	6100-1
A/C Compressor Controls	6452-0	Heated Seats	5200-0	— Park	6314-C
A/C Temperature Control	6411-0	Horn	6100-0	— Rear Side Marker	6320-C
Antilock Braking System (ABS)	3450-0	Ignition Key Warning	6131-0	— Stop	6325-C
Auto-Charging Flashlight	6100-1	Indicators		— Tail	6314-C
Auxiliary Fan	6454-0	— Anti-Lock	3450-0	— Trunk	6320-C
Auxiliary Fuse	0670-2	— “Brake Lining” Wear	3435-0	— Turn/Hazard	6313-1
Brake Warning System	3435-0	— “Brake Fluid” Warning	3435-0	Light Switch Details	6300-C
Charge	1230-0	— Charge	6210-0	Multifunction Clock	6581-C
Cigar Lighter	6100-1	— Fasten Seatbelts	6131-0	Power Antenna	6500-C
Connector Views	8500-0	— Fog Lights	6312-0	Power Distribution	0670-C
Fuel Economy Gauge	6210-3	— High Beam	6312-1	Power Distribution Box	0670-C
Fuel Gauge	6210-1	— Inspection	6210-2	Power Mirrors	5116-C
Fuse Data Chart	0670-1	— LH Turn	6313-1	Power Windows	5133-C
Fuse Details		— Low Fuel Warning	6210-1	Radio With Sound System	6500-C
— Fuse 4	0670-6	— Oil Pressure Warning	6210-1	Radio Without Sound System	6500-2
— Fuse 5	0670-6	— Oil Service	6210-2	Rear Defogger	6100-2
— Fuse 6	0670-6	— “Park Brake”	3435-0	Seatbelt and SRS Warning Module	
— Fuse 8	0670-7	— RH Turn	6313-1	— Fasten Seatbelts Indicator	6131-C
— Fuse 10	0670-8	Injection Electronics	1360-0	— Supplemental Restraint System (SRS) Indicator	3234-C
— Fuse 12	0670-7	Instrument Cluster	6210-0	Seatbelt Tensioner Generator	3234-0
— Fuse 19	0670-7	Lights		Service Interval Indicator	6210-2
— Fuse 20	0670-9	— A/C Control Power	6300-1	Speedometer	6210-C
— Fuse 21	0670-10	— Ashtray	6300-1	Splice Location Views Index	8000-C
— Fuse 27	0670-11	— Back Up	6322-0	Start	1240-C
Gauges	6210-1	— Dash	6300-1	Supplemental Restraint System (SRS)	
Ground Distribution		— Fog	6312-0	Supplemental Restraint System (SRS)	3234-C
— G103	0670-12	— Front Side Marker	6314-0	Tachometer	6210-3
— G104	0670-13	— Front Turn/Park	6314-0	Temperature Gauge	6210-1
— G106	0670-13	— Glove Box	6100-1	Warnings	
— G200	0670-13	— Hazard Switch	6313-0	— Ignition Key/Seatbelt	6131-C
	0670-14	— Headlights	6312-0	Wiper/Washer	6160-C
	0670-15	— Instrument Cluster	6300-1		
— G201	0670-14	— Interior	6330-0		

The purpose of this manual is to show electrical schematics in a manner that makes electrical troubleshooting easier. Electrical components which work together are shown together on one schematic. The Wiper-Washer schematic, for example, shows all of the electrical components in one diagram. At the top of the page is the fuse (positive) that powers the circuit. The flow of current is shown through all wires, connectors, switches, and motors to ground (negative) at the bottom of the page.

Within the schematic, all switches and sensors are shown "at rest," as though the Ignition Switch were off. For identification, component names are underlined and placed next to or above each component. Notes are included, describing how switches and other components work.

The power distribution schematic shows the current feed through all the connections from the Battery and Alternator to each fuse and the Ignition and Light Switches. If the Power Distribution schematic is combined with any other circuit schematic, a complete picture is made of how that circuit works. The Ground Distribution schematics show how several circuits are connected to common grounds.

All wiring between components is shown exactly as it exists in the vehicle; however, the wiring is not drawn to scale. To aid in understanding electrical operation, wiring inside complicated components has been simplified. The "Solid State" label designates electronic components.

WIRE SIZE CONVERSION CHART	
METRIC (CROSS-SECTIONAL AREA IN MM ²)	AWG (AMERICAN WIRE GAUGE)
.5	20
.75	18
1	16
1.5	14
2	14
2.5	12
4	10
6	8
8	8
16	4
20	4
25	2
32	2

WIRE INSULATION	
ABBREVIATIONS	COLOR
BK	BLACK
BR	BROWN
RD	RED
YL	YELLOW
GN	GREEN
BU	BLUE
VI	VIOLET
GY	GRAY
WT	WHITE
PK	PINK
OR	ORANGE


4 SYMBOLS



ENTIRE COMPONENT SHOWN




PART OF A COMPONENT SHOWN

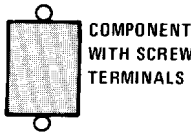


COMPONENT WITH SCREW TERMINALS




SOLID STATE (INCLUDES ONLY ELECTRONIC PARTS)

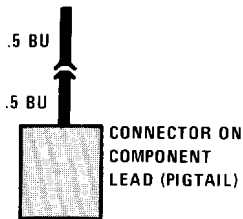


CONNECTOR ON COMPONENT LEAD (PIGTAIL)

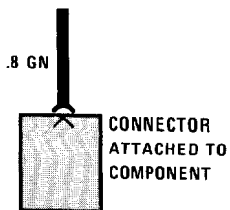


CONNECTOR ATTACHED TO COMPONENT

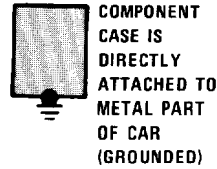


COMPONENT CASE IS DIRECTLY ATTACHED TO METAL PART OF CAR (GROUNDED)

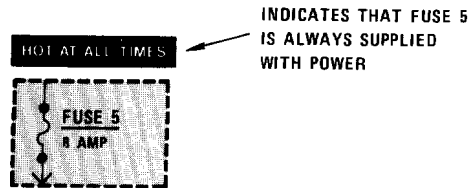



INDICATES THAT FUSE 5 IS ALWAYS SUPPLIED WITH POWER

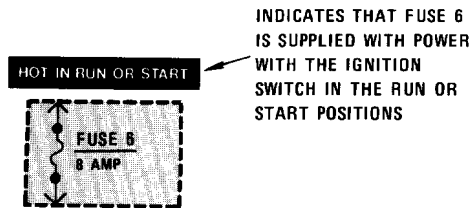

INDICATES THAT FUSE 6 IS SUPPLIED WITH POWER WITH THE IGNITION SWITCH IN THE RUN OR START POSITIONS

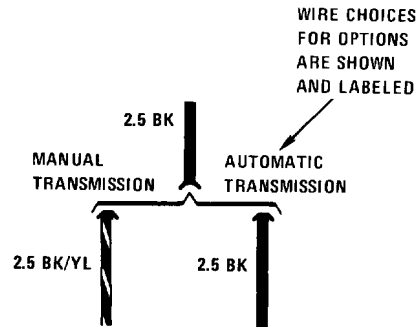

WIRE CHOICES FOR OPTIONS ARE SHOWN AND LABELED

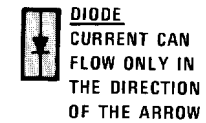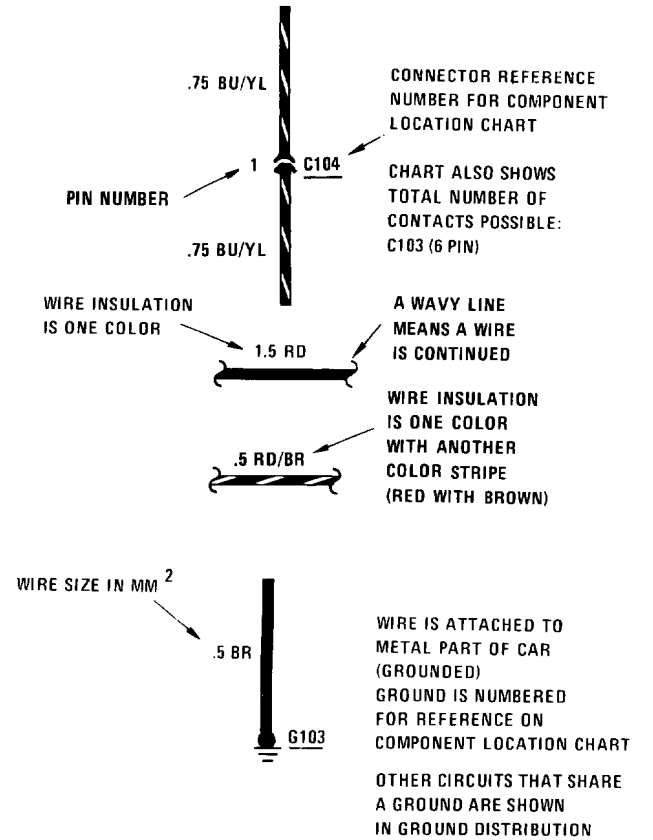


DIODE CURRENT CAN FLOW ONLY IN THE DIRECTION OF THE ARROW


CIRCUIT REFERENCE - A WIRE WHICH CONNECTS TO ANOTHER CIRCUIT




ACTIVE CHECK CONTROL



ONE POLE,
TWO POSITION
SWITCH

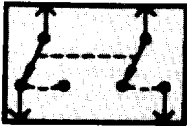


SWITCHES THAT
MOVE TOGETHER
DASHED LINE SHOWS
A MECHANICAL
CONNECTION
BETWEEN SWITCHES

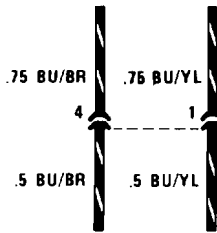

TWO CONNECTIONS
(PINS) IN THE SAME
CONNECTOR

DASHED LINE SHOWS
PARTS OF THE
SAME CONNECTOR




WHEN COIL IS
ENERGIZED, SWITCH
IS PULLED CLOSED

RELAY SHOWN
WITH NO
CURRENT
FLOWING
THROUGH
COIL




RESISTOR ACROSS COIL
IS FOR NOISE
SUPPRESSION

RELAY SHOWN
WITH RESISTOR
ACROSS COIL

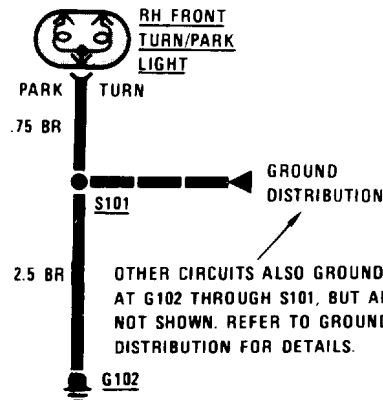

OTHER CIRCUITS ALSO GROUNDED
AT G102 THROUGH S101, BUT ARE
NOT SHOWN. REFER TO GROUND
DISTRIBUTION FOR DETAILS.

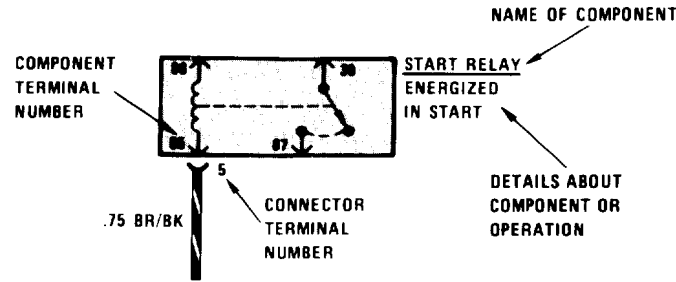


NAME OF COMPONENT

COMPONENT
TERMINAL
NUMBER

START RELAY
ENERGIZED
IN START

DETAILS ABOUT
COMPONENT OR
OPERATION


CONNECTOR
TERMINAL
NUMBER

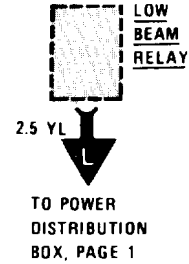

LOW
BEAM
RELAY

TO POWER
DISTRIBUTION
BOX, PAGE 1


CURRENT PATH
IS CONTINUED
AS LABELED.
THE ARROW SHOWS
DIRECTION OF CURRENT
FLOW AND IS REPEATED
WHERE CURRENT
PATH CONTINUES.

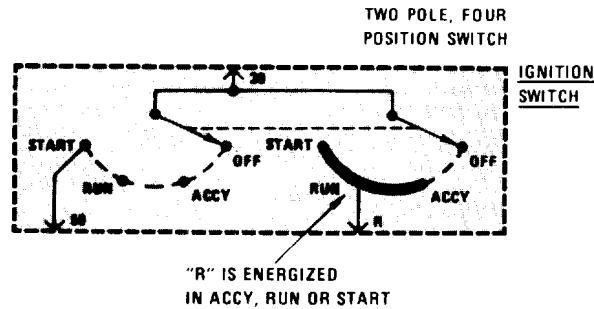

TWO POLE, FOUR
POSITION SWITCH

IGNITION
SWITCH

"R" IS ENERGIZED
IN ACCY, RUN OR START

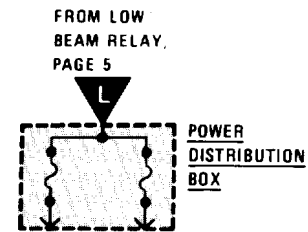

FROM LOW
BEAM RELAY,
PAGE 5

POWER
DISTRIBUTION
BOX



LIGHT
EMITTING
DIODE



INDUCTIVE
SENSOR

6 SYSTEMATIC TROUBLESHOOTING

TROUBLESHOOTING PROCEDURE

1. Verify the Problem

Operate the problem circuit to check the accuracy of the complaint. Note the symptoms of the inoperative circuit.

2. Analyze the Problem

Refer to the schematic of the problem circuit in the ETM. Determine how the circuit is supposed to work by tracing the current path(s) from the power feed through the circuit components to ground. Then based on the symptoms you noted in step 1 and your understanding of circuit operation, identify one or more possible causes of the problem.

3. Isolate the Problem

Make circuit tests to prove or disprove the preliminary diagnosis made in step 2. Keep in mind that a logical simple procedure is the key to efficient troubleshooting. Test for the most likely cause of failure first. Try to make tests at points which are easily accessible.

4. Repair the Problem

Once the specific problem is identified, make the repair using the proper tools and safe procedures.

5. Check the Problem

Operate the circuit to check for satisfactory circuit operation. Good repair practice calls for rechecking all circuits you have worked on.

TROUBLESHOOTING TOOLS


Isolating the problem (Step 3 of TROUBLESHOOTING PROCEDURES) requires the use of a **voltmeter** and/or **ohmmeter**. A voltmeter measures voltage at selected points in a circuit. An ohmmeter measures a circuit's resistance to current flow. It has an internal battery that provides current to the circuit under test. Disconnect the car battery when using an ohmmeter because the battery voltage will cause the ohmmeter to give false readings. Also, do not use an ohmmeter on solid-state components. The voltage that the ohmmeter applies to the circuit could damage these components.

TROUBLESHOOTING TESTS

Voltage Test

This test measures voltage in a circuit. By taking measurements at several points (terminals or connectors) along the circuit, you can isolate the problem.

To take a voltage measurement, connect the negative lead of the voltmeter to the battery's negative terminal or other known good ground. Then connect the positive lead of the voltmeter to the point you want to test. The voltmeter will measure the voltage present at that point in the circuit.

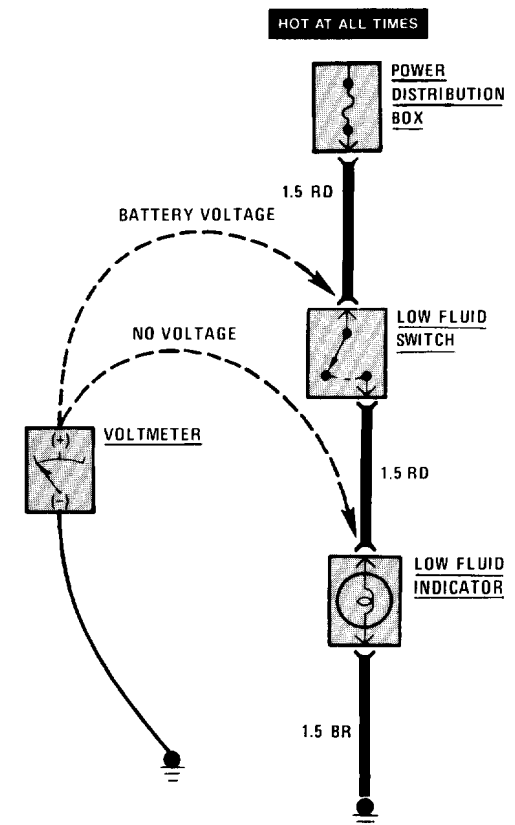


Voltage Test

Voltage Drop Test

Wires, connectors, and switches are designed to conduct current with a minimum loss of voltage. A voltage drop of more than one volt indicates a problem.


To test for voltage drop, connect the voltmeter leads to connectors at either end of the circuit's suspected problem area. The positive lead should be connected to the connector closest to the power source. The voltmeter will show the voltage drop between these two points.

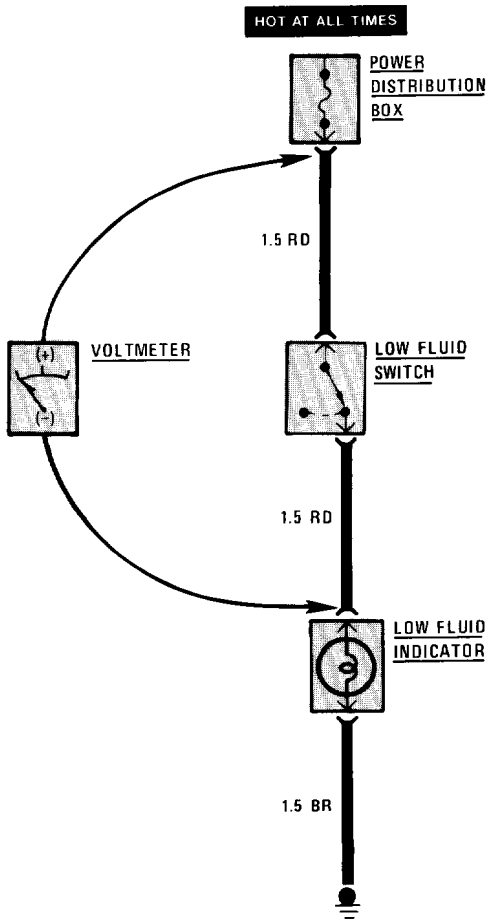

Voltage Drop Test

Continuity Test

To perform a continuity test, first disconnect the car battery. Then adjust the ohmmeter to read zero while holding the leads together. Connect the ohmmeter leads to connector or terminals at either end of the circuit's suspected problem area. The ohmmeter will show the resistance across that part of the circuit.

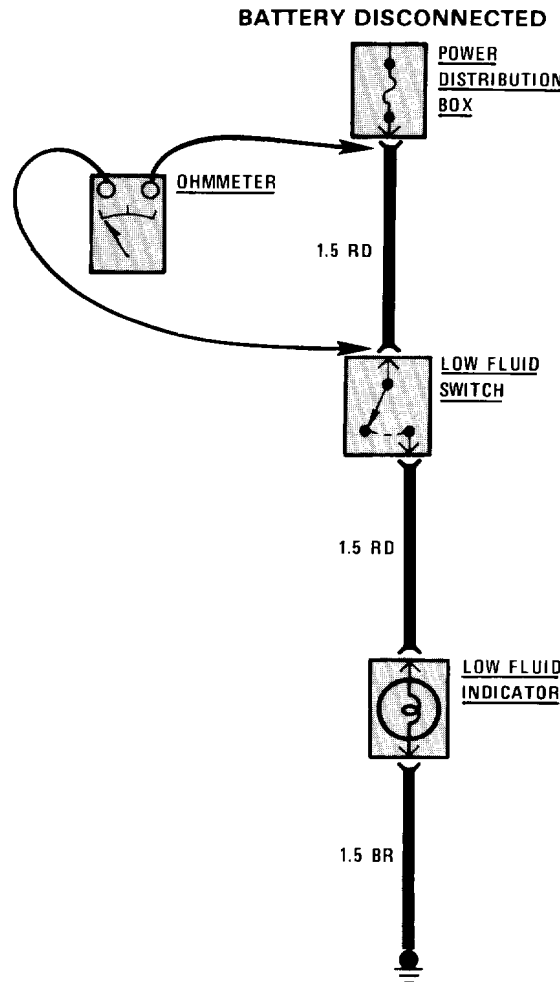


Continuity Test

Short Test Using Voltmeter

Remove the blown fuse and disconnect the load. Connect the voltmeter leads to the fuse terminals. The positive lead should be connected to the terminal closest to the power source.

Starting near the POWER DISTRIBUTION BOX, move the wire harness back and forth and watch the voltmeter reading. If the voltmeter registers a reading, there is a short to ground in the wiring. Somewhere in the area of the harness being moved, the wire insulation is worn away and the circuit is grounding.

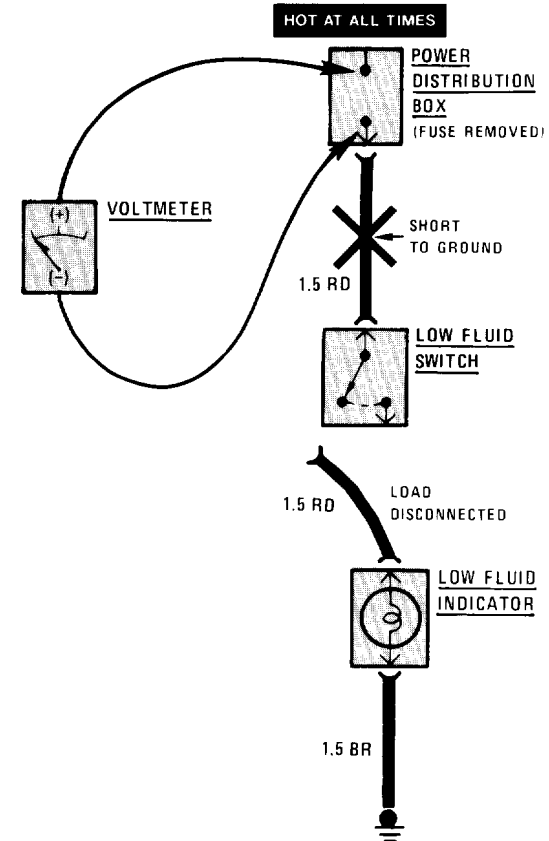


Short Test Using Voltmeter

8 SYSTEMATIC TROUBLESHOOTING

Short Test Using Ohmmeter

Disconnect the battery. Adjust the ohmmeter to read zero while holding the leads together. Remove the blown fuse and disconnect the load. Connect one lead of the ohmmeter to the fuse terminal that is closest to the load. Connect the other lead to a known good ground.

Starting near the POWER DISTRIBUTION BOX, move the wire harness back and forth and watch the ohmmeter reading. Low or no resistance indicates a short to ground in the wiring. Infinitely high resistance indicates no short.

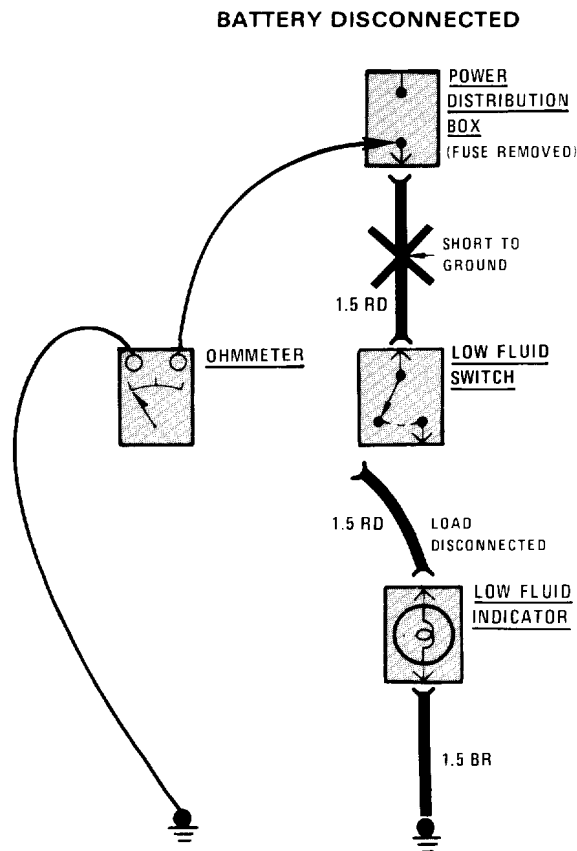

Short Test Using Ohmmeter