

Shop Manual

BULLDOZER

D37EXi -23

D37PXi -23

D39EXi -23

D39PXi -23

SERIAL NUMBERS

D37EXi-80179

D37PXi-80179

D39EXi-90404

D39PXi-90404

and up

KOMATSU

BULLDOZER

D37EXI-23
D37PXI-23
D39EXI-23
D39PXI-23

Model Serial Number

D37EXI-23	80179 and up
D37PXI-23	80179 and up
D39EXI-23	90404 and up
D39PXI-23	90404 and up

00 Index and foreword

00 Index and foreword

Index

Index (ALL-0310-001-A-00-A)

00 Index and foreword	00-1
Index	00-2
Foreword, safety and general information	00-15
Important safety notice	00-15
How to read the shop manual	00-22
Explanation of terms for maintenance standard	00-24
Handling equipment of fuel system devices	00-26
Handling of intake system parts	00-27
Handling of hydraulic equipment	00-28
Method of disconnecting and connecting of push-pull type coupler	00-30
Handling of electrical equipment	00-33
How to read electric wire code	00-41
Precautions when performing operation	00-44
Practical use of KOMTRAX	00-49
Standard tightening torque table	00-50
List of abbreviation	00-56
Conversion table	00-61
01 Specification	01-1
Table of contents	01-2
Specifications	01-3
Specification drawing	01-3
Specifications	01-7
Weight table	01-27
Table of fuel, coolant, and lubricants	01-35
10 Structure and function	10-1
Table of contents	10-2
Engine and cooling system	10-3
Engine related parts	10-3
VFT	10-5
EGR system piping drawing	10-9
EGR system circuit diagram	10-11
EGR valve	10-12
EGR cooler	10-14
KCCV layout drawing	10-16
KCCV ventilator	10-18
KDOC muffler	10-22
Cooling system	10-24
Cooling fan motor	10-26
Oil cooler bypass and HST charge safety valve	10-33
Power train	10-38
Power train system	10-38
Damper	10-41
Hydraulic component layout of HST	10-42
Steering and brake control	10-43
HST pump	10-45
HST motor	10-57
Charge pump	10-72
Solenoid valve	10-73
Final drive	10-83
Undercarriage and frame	10-87
Main frame	10-87
Track frame and idler cushion	10-88
Hydraulic system	10-90
Hydraulic component layout of work equipment	10-90
Work equipment control system	10-92
Hydraulic tank	10-94
CLSS	10-96

Work equipment and cooling fan pump	10-99
Control valve	10-110
Ripper PPC valve.....	10-126
Angle control EPC valve	10-131
Accumulator	10-136
Work equipment	10-138
Blade	10-138
Ripper.....	10-139
Piston valve.....	10-140
Cab and its attachments.....	10-141
ROPS cab.....	10-141
Cab mount	10-143
Electrical system	10-144
Electrical control system	10-144
Machine monitor system.....	10-180
KOMTRAX system.....	10-201
System component parts	10-204
Sensor.....	10-227
20 Standard value tables.....	20-1
Table of contents	20-2
Standard service value table.....	20-3
Standard value table for engine	20-3
Standard value table for machine	20-4
Standard value table for electrical system.....	20-21
30 Testing and adjusting	30-1
Table of contents	30-2
Related information on testing and adjusting	30-4
Tools for testing and adjusting	30-4
Sketch of tools for testing and adjusting	30-7
Engine and cooling system.....	30-11
Testing engine speed	30-11
Testing exhaust gas color	30-13
Testing and adjusting valve clearance.....	30-15
Testing compression pressure.....	30-17
Testing blowby pressure	30-20
Testing engine oil pressure	30-21
Testing fuel pressure	30-22
Testing fuel return rate and leakage	30-23
Bleeding air from fuel system	30-26
Testing fuel circuit for leakage	30-27
Handling cylinder cutout mode operation.....	30-28
Handling no-injection cranking operation.....	30-29
Testing of installed condition of cylinder heads and manifolds	30-30
Testing engine piping for damage and looseness	30-31
Replacing belt for alternator and air conditioner compressor	30-32
Writing compensation values at replacement of injector and engine controller	30-33
Power train.....	30-37
Testing and adjusting HST oil pressure.....	30-37
Testing outlet pressure of solenoid valve	30-42
Testing if machine travels straight	30-46
Simple test procedure for brake performance	30-47
Adjusting deceleration/brake pedal	30-48
Adjusting parking brake lever	30-51
Move disabled machine urgently	30-53
Undercarriage and frame.....	30-56
Adjusting idler clearance.....	30-56
Checking sprocket wear	30-57
Testing and adjusting track tension	30-58
Hydraulic system	30-59

Releasing remaining pressure in work equipment cylinder	30-59
Testing and adjusting work equipment oil pressure	30-60
Testing source pressure of control circuit	30-62
Testing outlet pressure of work equipment EPC valve and fan EPC valve	30-63
Isolating the parts causing hydraulic drift in blade and ripper	30-65
Testing internal oil leakage of work equipment cylinder	30-66
Testing fan speed	30-68
Testing fan circuit oil pressure	30-69
Bleeding air from hydraulic circuit	30-70
Work equipment	30-71
Adjusting work equipment lock lever	30-71
Adjusting play of blade center ball	30-73
Electrical system	30-74
Special functions of machine monitor	30-74
Special functions of iB monitor	30-150
Testing stroke sensor for lift cylinder	30-180
Testing stroke sensor for tilt cylinder	30-182
Testing stroke sensor for angle cylinder	30-183
Testing and adjusting reset sensor for lift cylinder	30-184
Testing and adjusting reset sensor for angle cylinder	30-185
Adjustment method when HST controller has been replaced	30-186
Adjustment method when ICT sensor controller has been replaced	30-189
Adjustment method when devices have been repaired or replaced	30-192
Adjusting rearview camera angle	30-194
Testing windshield wiper operation	30-195
Replacing windshield wiper blade	30-196
Handling voltage circuit of engine controller	30-197
Handling battery disconnect switch	30-198
Testing diodes	30-199
Pm clinic	30-200
Pm Clinic service (D37EXI-23,D37PXI-23)	30-200
Pm Clinic service (D39EXI-23,D39PXI-23)	30-201
40 Troubleshooting	40-1
Table of contents	40-2
Related information on troubleshooting	40-10
Troubleshooting points	40-10
Sequence of events in troubleshooting	40-12
Checks before troubleshooting	40-14
Inspection procedure before troubleshooting	40-16
Preparation for troubleshooting of electrical system	40-34
Classification and procedures for troubleshooting	40-37
Symptom and troubleshooting numbers	40-39
Information in troubleshooting table	40-42
Troubleshooting method for open circuit in wiring harness of pressure sensor system	40-44
Connector list and layout	40-46
Connector contact identification	40-59
T-branch box and T-branch adapter table	40-97
Fuse location table	40-102
Failure codes table	40-107
Troubleshooting by failure code (Display of code)	40-118
Failure code [6091NX] HST Oil Filter Clogging	40-118
Failure code [989L00] Engine Controller Lock Caution 1	40-120
Failure code [989M00] Engine Controller Lock Caution 2	40-121
Failure code [989N00] Engine Controller Lock Caution 3	40-122
Failure code [AA10NX] Air Cleaner Clogging	40-123
Failure code [AB00KE] Charge Voltage Low	40-125
Failure code [B@BAZG] Eng Oil Press Low	40-127
Failure code [B@BCNS] Eng Water Overheat	40-128
Failure code [B@CRNS] HST Oil Overheat	40-129

Failure code [B@CRZG] HST Charge Press Low	40-130
Failure code [CA115] Eng Ne and Bkup Speed Sens Error	40-131
Failure code [CA122] Chg Air Press Sensor High Error	40-132
Failure code [CA123] Chg Air Press Sensor Low Error	40-134
Failure code [CA131] Throttle Sensor High Error.....	40-136
Failure code [CA132] Throttle Sensor Low Error	40-138
Failure code [CA144] Coolant Temp Sens High Error	40-140
Failure code [CA145] Coolant Temp Sens Low Error	40-142
Failure code [CA153] Chg Air Temp Sensor High Error.....	40-144
Failure code [CA154] Chg Air Temp Sensor Low Error.....	40-146
Failure code [CA187] Sensor 2 Supply Volt Low Error	40-148
Failure code [CA221] Ambient Press Sensor High Error	40-150
Failure code [CA222] Ambient Press Sensor Low Error	40-152
Failure code [CA227] Sensor 2 Supply Volt High Error.....	40-154
Failure code [CA234] Eng Overspeed	40-155
Failure code [CA238] Ne Speed Sensor Supply Volt Error	40-156
Failure code [CA239] Ne Speed Sens Supply Volt High Error.....	40-157
Failure code [CA271] IMV/PCV1 Short Error	40-158
Failure code [CA272] IMV/PCV1 Open Error	40-159
Failure code [CA322] Inj #1(L#1) Open/Short Error	40-160
Failure code [CA324] Inj #3(L#3) Open/Short Error	40-162
Failure code [CA331] Inj #2(L#2) Open/Short Error	40-164
Failure code [CA332] Inj #4(L#4) Open/Short Error	40-166
Failure code [CA343] ECM Critical Internal Failure	40-168
Failure code [CA351] Injectors Drive Circuit Error	40-169
Failure code [CA352] Sensor 1 Supply Volt Low Error	40-170
Failure code [CA356] Mass Air Flow Sensor High Error	40-172
Failure code [CA357] Mass Air Flow Sensor Low Error	40-174
Failure code [CA386] Sensor 1 Supply Volt High Error.....	40-176
Failure code [CA435] Eng Oil Press Sw Error	40-177
Failure code [CA441] Battery Voltage Low Error	40-178
Failure code [CA442] Battery Voltage High Error.....	40-180
Failure code [CA449] Rail Press Very High Error.....	40-181
Failure code [CA451] Rail Press Sensor High Error.....	40-182
Failure code [CA452] Rail Press Sensor Low Error	40-184
Failure code [CA466] KVGT Motor Driver Position Error	40-186
Failure code [CA515] Rail Press Sens Sup Volt High Error	40-188
Failure code [CA516] Rail Press Sens Sup Volt Low Error	40-190
Failure code [CA553] Rail Press High Error	40-192
Failure code [CA555] Crankcase Press High Error 1	40-193
Failure code [CA556] Crankcase Press High Error 2	40-194
Failure code [CA559] Rail Press Low Error.....	40-195
Failure code [CA689] Eng Ne Speed Sensor Error.....	40-198
Failure code [CA691] Intake Air Temp Sens High Error.....	40-200
Failure code [CA692] Intake Air Temp Sens Low Error.....	40-202
Failure code [CA697] ECM Internal Temp Sensor High Error.....	40-204
Failure code [CA698] ECM Int Temp Sensor Low Error.....	40-205
Failure code [CA731] Eng Bkup Speed Sens Phase Error	40-206
Failure code [CA778] Eng Bkup Speed Sensor Error.....	40-208
Failure code [CA1117] Persistent Data Lost Error.....	40-212
Failure code [CA1695] Sensor 5 Supply Volt High Error.....	40-213
Failure code [CA1696] Sensor 5 Supply Volt Low Error	40-214
Failure code [CA1843] Crankcase Press Sens High Error.....	40-215
Failure code [CA1844] Crankcase Press Sens Low Error	40-217
Failure code [CA1896] EGR Valve Stuck Error.....	40-219
Failure code [CA1942] Crankcase Press Sens In Range Error	40-220
Failure code [CA1961] EGR_Motor Driver IC Over Temp Error.....	40-221
Failure code [CA2185] Throt Sensor Sup Volt High Error	40-222
Failure code [CA2186] Throt Sensor Sup Volt Low Error.....	40-223

Failure code [CA2249] Rail Press Very Low Error	40-224
Failure code [CA2272] EGR Valve Pos Sens Low Error	40-225
Failure code [CA2311] IMV Solenoid Error	40-227
Failure code [CA2349] EGR Valve Solenoid Open Error	40-228
Failure code [CA2353] EGR Valve Solenoid Short Error	40-230
Failure code [CA2357] EGR Valve Servo Error	40-232
Failure code [CA2555] Grid Htr Relay Volt Low Error	40-233
Failure code [CA2556] Grid Htr Relay Volt High Error	40-235
Failure code [CA2765] Inj Trim Data Error	40-237
Failure code [CA3419] Mass Air Flow Sensor Sup Volt High Error	40-238
Failure code [CA3421] Mass Air Flow Sensor Sup Volt Low Error	40-240
Failure code [CA3724] EGR/KVGT Motor Driver Power Low Error	40-242
Failure code [CA3918] KVGT Stuck Error	40-244
Failure code [CA3919] KVGT Motor Driver IC Over Temp Error	40-245
Failure code [CA3921] KVGT Servo Error 2	40-246
Failure code [CA3922] KVGT Motor Driver Open Error	40-247
Failure code [CA3923] KVGT Motor Driver Short Error	40-249
Failure code [D130KA] Neutral relay Open	40-251
Failure code [D130KB] Neutral relay Short circuit	40-253
Failure code [D130KY] Neutral relay: Hot Short	40-255
Failure code [D19JKZ] Personal Code Relay Abnormality	40-257
Failure code [D811MC] KOMTRAX Error	40-260
Failure code [D862KA] GPS Antenna Open Circuit	40-261
Failure code [D8ALKA] Operating Lamp Open Circuit (KOMTRAX)	40-262
Failure code [D8ALKB] Operating Lamp Short Circuit (KOMTRAX)	40-264
Failure code [D8AQKR] CAN2 Discon (KOMTRAX)	40-265
Failure code [DAF0MB] Monitor ROM Abnormality	40-267
Failure code [DAF0MC] Monitor Error	40-268
Failure code [DAF8KB] Camera Power Supply Short Circuit	40-269
Failure code [DAF9KQ] Model Selection Abnormality	40-270
Failure code [DAFGMC] GPS Module Error	40-271
Failure code [DAFLKA] Operating Lamp Open Circuit (Monitor)	40-272
Failure code [DAFLKB] Operating Lamp Short Circuit (Monitor)	40-274
Failure code [DAFQKR] CAN2 Discon (Monitor)	40-275
Failure code [DAJ000] HST controller: Abnormality in controller	40-276
Failure code [DAJ0KQ] HST controller: Type select signal	40-277
Failure code [DAJ0KT] HST controller: Abnormality in controller	40-278
Failure code [DAJ0MC] HST Con Error	40-279
Failure code [DAJ1KK] HST controller: Source voltage low	40-280
Failure code [DAJ2KK] HST controller: Output voltage low	40-282
Failure code [DAJ5KK] HST: Sensor volt 5V (0) Out of normal range	40-284
Failure code [DAJ6KK] HST: Sensor volt 5V (1) Out of normal range	40-286
Failure code [DAJLKA] Operating Lamp Open Circuit (HST Con)	40-288
Failure code [DAJLKB] Operating Lamp Short Circuit (HST Con)	40-290
Failure code [DAJPMA] Inconsistency of Option Selection (HST)	40-291
Failure code [DAJQKR] CAN2 Discon (HST Con)	40-292
Failure code [DAJRKR] CAN1 Discon (HST Con)	40-293
Failure code [DB2QKR] CAN2 Discon (Engine Con)	40-294
Failure code [DB2RKR] CAN1 Discon (Engine Con)	40-299
Failure code [DBR0KT] ICT Controller: Abnormality in controller	40-304
Failure code [DBR0MC] ICT Con Error	40-305
Failure code [DBR1KK] ICT controller: Source voltage low	40-306
Failure code [DBR2KK] ICT controller: Output voltage low	40-308
Failure code [DBR5KK] ICT: Sensor volt 5V (0) Out of normal range	40-310
Failure code [DBRLKA] Operating Lamp Open Circuit (ICT Con)	40-312
Failure code [DBRLKB] Operating Lamp Short Circuit (ICT Con)	40-314
Failure code [DBRPMA] Inconsistency of Option Selection (ICT)	40-315
Failure code [DBRQKR] CAN2 Discon (ICT Con)	40-316
Failure code [DBRRKR] CAN1 Discon (ICT Con)	40-319

Failure code [DBTSKR] LAN Discon (iB Monitor)	40-320
Failure code [DBUTKA] GNSS Antenna Open Circuit	40-322
Failure code [DD12KA] Shift up SW: Open	40-323
Failure code [DD12KB] Shift up SW: Short Circuit	40-325
Failure code [DD13KA] Shift down SW: Open	40-327
Failure code [DD13KB] Shift down SW: Short Circuit	40-329
Failure code [DD14KA] Parking lever SW: Open	40-331
Failure code [DD14KB] Parking lever SW: Short circuit	40-333
Failure code [DDKAKA] Blade float Sw: Open	40-335
Failure code [DDKAKB] Blade float Sw: Short circuit	40-337
Failure code [DDKFL4] Left Angle Sw: Signal mismatch	40-339
Failure code [DDKGL4] Right Angle Sw: Signal mismatch	40-341
Failure code [DDKHKA] iB Sw: Open	40-343
Failure code [DDKHKB] iB Sw: Short circuit	40-345
Failure code [DDNLKA] Weq lock Sw: Open	40-347
Failure code [DDNLKB] Weq lock Sw: Short circuit	40-349
Failure code [DDP6KA] Brake Pressure Sensor: Open	40-351
Failure code [DDP6KB] Brake Pressure Sensor: Hot Short	40-353
Failure code [DDP6MA] Brake pressure sensor: Malfunction	40-355
Failure code [DDU1FS] Parking lever Switch 2: Signal mismatch	40-357
Failure code [DDU1KA] Parking lever Sw2:Open	40-359
Failure code [DDU1KY] Parking lever Sw2:Hot Short	40-361
Failure code [DFA4KX] Blade lift lever: Main and Sub Error	40-363
Failure code [DFA4KZ] Blade lift lever: Main and Sub Error	40-364
Failure code [DFA4L8] Blade lift lever: Signal mismatch	40-365
Failure code [DFA5KA] Blade lift lever1: Open	40-366
Failure code [DFA5KB] Blade lift lever1: Hot Short	40-369
Failure code [DFA6KA] Blade lift lever2: Open	40-371
Failure code [DFA6KB] Blade lift lever2: Hot Short	40-373
Failure code [DFA7KX] Blade tilt lever: Main and Sub Error	40-375
Failure code [DFA7KZ] Blade tilt lever: Main and Sub Error	40-376
Failure code [DFA7L8] Blade tilt lever: Signal mismatch	40-377
Failure code [DFA8KA] Blade tilt lever1: Open	40-378
Failure code [DFA8KB] Blade tilt lever1: Hot Short	40-381
Failure code [DFA9KA] Blade tilt lever2: Open	40-383
Failure code [DFA9KB] Blade tilt lever2: Hot Short	40-386
Failure code [DGS1KA] HST oil temp sensor: Open	40-388
Failure code [DGS1KX] HST oil temp sensor:Out of normal range	40-390
Failure code [DH21KA] Weq pressure sensor: Open	40-391
Failure code [DH21KB] Weq pressure sensor: Hot Short	40-393
Failure code [DHA4KA] Air Cleaner Clog Sensor Open Circuit	40-395
Failure code [DHH7KA] LF HST Pressure Sensor: Open	40-397
Failure code [DHH7KB] LF HST Pressure Sensor: Hot Short	40-399
Failure code [DHH8KA] RF HST Pressure Sensor: Open	40-401
Failure code [DHH8KB] RF HST Pressure Sensor: Hot Short	40-403
Failure code [DHH9KA] LR HST Pressure Sensor: Open	40-405
Failure code [DHH9KB] LR HST Pressure Sensor: Hot Short	40-407
Failure code [DHHAKA] RR HST Pressure Sensor: Open	40-409
Failure code [DHHAKB] RR HST Pressure Sensor: Hot Short	40-411
Failure code [DK30KA] ST lever1: Open	40-413
Failure code [DK30KB] ST lever1: Hot Short	40-415
Failure code [DK30KX] ST lever: Main and Sub Error	40-417
Failure code [DK30KZ] ST lever: Main and Sub Error	40-418
Failure code [DK30L8] ST lever: Signal mismatch	40-419
Failure code [DK31KA] ST lever2: Open	40-420
Failure code [DK31KB] ST lever2: Hot Short	40-422
Failure code [DK40KA] Decel/Brake potentiometer: Open	40-424
Failure code [DK40KB] Decel/Brake potentiometer: Hot Short	40-427
Failure code [DK55KX] FR lever: Main and Sub Error	40-429

Failure code [DK55KZ] FR lever: Main and Sub Error	40-430
Failure code [DK55L8] FR lever: Signal mismatch	40-431
Failure code [DK56KA] FR lever1: Open	40-432
Failure code [DK56KB] FR lever1: Hot Short	40-434
Failure code [DK57KA] FR lever2: Open	40-436
Failure code [DK57KB] FR lever2: Hot Short	40-438
Failure code [DK80KA] IMU Sensor: Open	40-440
Failure code [DKS0L8] Blade lift Stroke sensor: Signal mismatch	40-442
Failure code [DKS1KA] Blade lift Stroke sensor A: Open	40-443
Failure code [DKS1KB] Blade lift Stroke sensor A: Hot Short	40-445
Failure code [DKS2KA] Blade lift Stroke sensor B: Open	40-447
Failure code [DKS2KB] Blade lift Stroke sensor B: Hot Short	40-449
Failure code [DKS3KA] Blade lift Reset sensor: Open	40-451
Failure code [DKS3KB] Blade lift Reset sensor: Hot Short	40-453
Failure code [DKS3MB] Blade lift Reset sensor: Signal mismatch	40-455
Failure code [DKS4L8] Blade tilt Stroke sensor: Signal mismatch	40-456
Failure code [DKS5KA] Blade tilt Stroke sensor A: Open	40-457
Failure code [DKS5KB] Blade tilt Stroke sensor A: Hot Short	40-459
Failure code [DKS6KA] Blade tilt Stroke sensor B: Open	40-461
Failure code [DKS6KB] Blade tilt Stroke sensor B: Hot Short	40-463
Failure code [DKS7MB] Blade tilt Reset sensor: Signal mismatch	40-465
Failure code [DKSCL8] Angle left Stroke sensor: Signal mismatch	40-466
Failure code [DKSDKA] Angle left Stroke sensor A: Open	40-467
Failure code [DKSDKB] Angle left Stroke sensor A: Hot Short	40-469
Failure code [DKSEKA] Angle left Stroke sensor B: Open	40-471
Failure code [DKSEKB] Angle left Stroke sensor B: Hot Short	40-473
Failure code [DKSFKA] Angle left Reset sensor: Open	40-475
Failure code [DKSFKB] Angle left Reset sensor: Hot Short	40-477
Failure code [DKSFMB] Angle left Reset sensor: Signal mismatch	40-479
Failure code [DLM0KX] HST Motor Speed Sensor: Left/Right Error	40-480
Failure code [DLM0MA] HST motor speed sensor: Malfunction	40-481
Failure code [DLM1KA] Left HST motor speed sensor: Open	40-482
Failure code [DLM1KB] Left HST motor speed sensor: Short circuit	40-484
Failure code [DLM1MA] Left HST motor speed sensor: Malfunction	40-486
Failure code [DLM2KA] Right HST motor speed sensor: Open	40-487
Failure code [DLM2KB] Right HST motor speed sensor: Short circuit	40-489
Failure code [DLM2MA] Right HST motor speed sensor: Malfunction	40-491
Failure code [DLM3KA] Fan Speed Sensor Open Circuit	40-492
Failure code [DLM3KB] Fan Speed Sensor Short Circuit	40-494
Failure code [DLM3MB] Fan control: Mismatch	40-496
Failure code [DN21FS] Decel/Brake pedal SW: Signal mismatch	40-497
Failure code [DR21KX] Camera 2 Picture Rev. Drive Abnormality	40-499
Failure code [DR31KX] Camera 3 Picture Rev. Drive Abnormality	40-500
Failure code [DV20KB] Back-up alarm : Short circuit	40-501
Failure code [DW4BKA] Parking brake solenoid: Open	40-503
Failure code [DW4BKB] Parking brake solenoid: Short circuit	40-505
Failure code [DW4BKY] Parking brake solenoid: Hot Short	40-507
Failure code [DW7BKA] Fan reverse solenoid: Open	40-509
Failure code [DW7BKB] Fan reverse solenoid: Short circuit	40-511
Failure code [DW7EKA] Slow brake solenoid: Open	40-512
Failure code [DW7EKB] Slow brake solenoid: Short circuit	40-514
Failure code [DW7EKY] Slow brake solenoid: Hot Short	40-516
Failure code [DWN5KA] Fan EPC: Open	40-518
Failure code [DWN5KB] Fan EPC: Short circuit	40-520
Failure code [DWN5KY] Fan EPC: Hot Short	40-521
Failure code [DXA4KA] LF HST pump EPC: Open	40-523
Failure code [DXA4KB] LF HST pump EPC: Short circuit	40-525
Failure code [DXA4KY] LF HST pump EPC: Hot Short	40-526
Failure code [DXA5KA] LR HST pump EPC:Open	40-528

Failure code [DXA5KB] LR HST pump EPC: Short circuit	40-530
Failure code [DXA5KY] LR HST pump EPC: Hot Short	40-532
Failure code [DXA6KA] RF HST pump EPC: Open	40-534
Failure code [DXA6KB] RF HST pump EPC: Short circuit	40-536
Failure code [DXA6KY] RF HST pump EPC: Hot Short	40-537
Failure code [DXA7KA] RR HST pump EPC: Open	40-539
Failure code [DXA7KB] RR HST pump EPC: Short circuit	40-541
Failure code [DXA7KY] RR HST pump EPC: Hot Short	40-542
Failure code [DXHRKA] Blade lift up EPC: Open	40-544
Failure code [DXHRKB] Blade lift up EPC: Short circuit	40-546
Failure code [DXHRKY] Blade lift up EPC: Hot short	40-547
Failure code [DXHSKA] Blade lift down EPC: Open	40-549
Failure code [DXHSKB] Blade lift down EPC: Short circuit	40-551
Failure code [DXHSKY] Blade lift down EPC: Hot short	40-552
Failure code [DXHTKA] Blade tilt left EPC: Open	40-554
Failure code [DXHTKB] Blade tilt left EPC: Short circuit	40-556
Failure code [DXHTKY] Blade tilt left EPC: Hot short	40-557
Failure code [DXHUKA] Blade tilt right EPC: Open	40-559
Failure code [DXHUKB] Blade tilt right EPC: Short circuit	40-561
Failure code [DXHUKY] Blade tilt right EPC: Hot short	40-562
Failure code [DXJ4KA] Weq lock Sol.: Open	40-564
Failure code [DXJ4KB] Weq lock Sol.: Short circuit	40-566
Failure code [DXJCKA] Blade angle left EPC: Open	40-568
Failure code [DXJCKB] Blade angle left EPC: Short circuit	40-569
Failure code [DXJCKY] Blade angle left EPC: Hot short	40-570
Failure code [DXJDKA] Blade angle right EPC: Open	40-572
Failure code [DXJDKB] Blade angle right EPC: Short circuit	40-573
Failure code [DXJDKY] Blade angle right EPC: Hot short	40-574
Failure code [DXK1KA] Left HST motor EPC: Open	40-576
Failure code [DXK1KB] Left HST motor EPC: Short circuit	40-578
Failure code [DXK1KY] Left HST motor EPC: Hot Short	40-579
Failure code [DXK2KA] Right HST motor EPC: Open	40-581
Failure code [DXK2KB] Right HST motor EPC: Short circuit	40-583
Failure code [DXK2KY] Right HST motor EPC: Hot Short	40-584
Troubleshooting of electrical system (E-mode)	40-586
E-1 Engine does not start (Engine does not crank)	40-586
E-2 Manual preheating system does not work	40-592
E-3 Automatic preheating system does not work	40-595
E-4 While preheating is working, preheating monitor does not light up	40-597
E-5 When starting switch is turned to ON position, machine monitor displays nothing	40-599
E-6 When starting switch is turned to ON position (with engine stopped), basic check monitor lights up	40-602
E-7 Air cleaner clogging monitor lights up in yellow while engine is running	40-603
E-8 Charge level monitor lights up in red while engine is running	40-604
E-9 Engine coolant temperature monitor lights up in red while engine is running	40-605
E-10 Engine oil pressure monitor lights up in red while engine is running	40-606
E-11 HST charge pressure monitor lights up in red while engine is running	40-607
E-12 Hydraulic oil temperature monitor lights up in red while engine is running	40-608
E-13 HST oil filter clogging monitor lights up in red while engine is running	40-609
E-14 Fuel level gauge does not indicate correct level	40-610
E-15 Engine coolant temperature gauge does not indicate correct temperature	40-613
E-16 Hydraulic oil temperature gauge does not indicate correct temperature	40-614
E-17 Operation mode does not change	40-615
E-18 Service mode cannot be selected	40-616
E-19 Operating customize switch does not display customize screen	40-617
E-20 Modifying setting on customize screen does not change setting of machine	40-618
E-21 Service meter is not displayed, while starting switch is in OFF position	40-619
E-22 Work equipment does not operate	40-620
E-23 Foot heater does not operate	40-622

E-24 Horn does not sound	40-627
E-25 Horn does not stop sounding	40-629
E-26 Backup alarm does not sound	40-630
E-27 Backup alarm does not stop sounding	40-631
E-28 Headlamp does not light up	40-632
E-29 Rear lamp does not light up	40-635
E-30 No wiper operates continuously or intermittently	40-638
E-31 Front wiper does not operate	40-640
E-32 Rear wiper does not operate	40-642
E-33 Left door wiper does not operate (failed in both continuous and intermittent operations)	40-644
E-34 Right door wiper does not operate (failed in both continuous and intermittent operations)	40-648
E-35 Front washer does not operate	40-652
E-36 Rear washer does not operate	40-654
E-37 Left door washer does not operate	40-656
E-38 Right door washer does not operate	40-658
E-39 KOMTRAX system does not operate normally	40-660
E-40 iB monitor shuts down after displaying the messages [GPS receiver not connected!] and [Slope sensor not connected!]	40-662
E-41 iB monitor displays the messages [GPS receiver not connected!] and [Slope sensor not connected!]	40-666
E-42 iB monitor displays the message [Waiting for radio link...]	40-669
E-43 iB monitor displays the message [IMU sensor not connected]	40-670
E-44 iB monitor displays the message [Waiting for satellites...]	40-671
E-45 iB monitor displays the message [Komatsu controller not connected!]	40-672
E-46 iB monitor displays the message [Cylinder Stroke Reading Abnormal]	40-674
E-47 iB monitor displays the message [Komatsu CAN Comms Abnormal]	40-675
E-48 iB monitor displays the message [Komatsu Machine Trouble]	40-676
E-49 iB monitor displays the message [Waiting to initialize...]	40-677
E-50 iB monitor displays the message [System Initializing...]	40-678
E-51 iB monitor displays the message [Initializing...]	40-679
E-52 iB monitor displays the message [Configuring GPS]	40-680
E-53 iB monitor displays the message [No GPS Localization...]	40-681
E-54 iB monitor displays the message [Low precisions...]	40-682
E-55 iB monitor displays the message [Heading Initializing]	40-683
E-56 iB monitor displays [Out of design area...]	40-684
E-57 iB monitor can not be turned on	40-685
E-58 iB monitor does not display intelligent Machine Control screen	40-686
E-59 iB monitor does not display bulldozer image	40-687
E-60 iB monitor does not display design surface	40-688
E-61 iB monitor touch panel does not respond	40-689
E-62 iB monitor touch panel is inaccurate	40-690
E-63 Cylinder stroke reset indication does not go out	40-691
E-64 AUTO is not displayed when auto/manual switch is pressed (AUTO indication goes out)	40-692
E-65 Blade automatic lower control does not start while AUTO is displayed	40-693
E-66 Blade automatic raise control does not start while AUTO is displayed	40-694
E-67 Blade automatic control function is not activated while AUTO is displayed (Blade automatic control stops)	40-695
E-68 When checking and adjusting the blade elevation, the value is different from actual machine	40-696
E-69 Finished surface is inaccurate (The average height of finished surface is lower than designed surface or blade does not touch the surface)	40-697
E-70 Finished surface is inaccurate (The finished surface is not smooth)	40-698
E-71 Finished surface is inaccurate (When finishing slope horizontally, steps are made in each direction)	40-699
E-72 Machine can not escape from shoes slip while blade automatic control is activated (Shoes frequently slips)	40-701

E-73 Machine speed does not increase while blade automatic control is activated	40-702
E-74 Blade tilt angle does not coincide with design surface	40-703
E-75 Blade tilts back while blade automatic control is activated	40-705
Troubleshooting of hydraulic and mechanical system (H-mode)	40-708
Information described in troubleshooting table (H-mode)	40-708
System chart of hydraulic and mechanical systems	40-709
Failure mode and cause table	40-711
H-1 Neither RH nor LH of tracks does not travel forward nor reverse (None of the travel system operates)	40-715
H-2 Either RH or LH of track does not travel forward nor reverse (Only RH or LH of travel system operates)	40-717
H-3 Either RH or LH of track travel only forward or reverse (Only forward or reverse of RH or LH of travel system does not operate)	40-718
H-4 Travel speed or power is low	40-720
H-5 Travel speed range does not change	40-721
H-6 Shock is large when machine starts or stops	40-722
H-7 Machine deviates largely	40-723
H-8 Machine drift on a slope is large	40-725
H-9 Engine stalls during travel or engine speed drops significantly	40-726
H-10 Unusual noise is heard from around HST pump or motor	40-727
H-11 All work equipment do not operate	40-728
H-12 All work equipment operates slowly or lacks power	40-730
H-13 Blade lift speed or power is low	40-732
H-14 Blade tilt speed or power is low	40-733
H-15 Blade angle speed or power is low	40-734
H-16 Time lag of blade lift is large	40-735
H-17 Hydraulic drift of lifted blade is large	40-736
H-18 Hydraulic drift of tilted blade is large	40-737
H-19 Unusual noise is heard from around work equipment pump or control valve	40-738
H-20 HST oil temperature (hydraulic oil temperature) rises too high	40-739
H-21 Fan speed is abnormal (too high or low, or fan do not rotate)	40-741
H-22 Unusual noise is heard from around fan	40-743
Troubleshooting of engine (S-mode)	40-744
Information described in troubleshooting table (S mode)	40-744
S-1 Engine does not crank when starting switch is turned to START position	40-745
S-2 Engine cranks but no exhaust smoke comes out	40-746
S-3 Fuel is being injected but engine does not start (misfiring: engine cranks but does not start)	40-747
S-4 Engine startability is poor	40-748
S-5 Engine does not pick up smoothly	40-750
S-6 Engine stops during operation	40-752
S-7 Engine runs rough or is unstable	40-754
S-8 Engine lacks power	40-755
S-9 Exhaust smoke is black	40-757
S-10 Engine oil consumption is excessive	40-759
S-11 Oil becomes contaminated quickly	40-760
S-12 Fuel consumption is excessive	40-761
S-13 Oil is in coolant (or coolant spurts or coolant level goes down)	40-762
S-14 Oil pressure drops	40-763
S-15 Fuel mixes into engine oil	40-764
S-16 Water mixes into engine oil (milky)	40-765
S-17 Coolant temperature rises too high (overheating)	40-766
S-18 Unusual noise is heard	40-767
S-19 Vibration is excessive	40-768
S-20 Air cannot be bled from fuel circuit	40-769
50 Disassembly and assembly	50-1
Table of contents	50-2
Related information on disassembly and assembly	50-4
How to read this manual	50-4

Coating materials list	50-6
Special tools list	50-10
Sketches of special tools	50-18
Engine and cooling system	50-33
Removal and installation of supply pump assembly	50-33
Removal and installation of fuel injector assembly	50-36
Removal and installation of cylinder head assembly	50-41
Removal and installation of radiator assembly	50-51
Removal and installation of aftercooler assembly	50-54
Removal and installation of hydraulic oil cooler assembly	50-57
Removal and installation of cooling fan drive assembly	50-59
Removal and installation of cooling fan motor assembly	50-61
Removal and installation of engine and HST pump assembly	50-63
Disassembly and assembly of damper assembly	50-67
Removal and installation of engine front oil seal	50-68
Removal and installation of engine rear oil seal	50-70
Removal and installation of engine hood assembly	50-72
Removal and installation of fuel tank assembly	50-75
Removal and installation of KCCV assembly	50-77
Removal and installation of VFT assembly	50-78
Removal and installation of EGR (Exhaust Gas Recirculation) cooler assembly	50-79
Removal and installation of EGR (Exhaust Gas Recirculation) valve assembly	50-81
Removal and installation of starting motor assembly	50-82
Removal and installation of belt for alternator and air conditioner compressor	50-83
Removal and installation of air cleaner assembly	50-85
Power train	50-87
Removal and installation of HST motor and final drive assembly	50-87
Disassembly and assembly of final drive	50-89
Undercarriage and frame	50-97
Removal and installation of idler and recoil spring assembly	50-97
Disassembly and assembly of idler	50-98
Disassembly and assembly of recoil spring	50-101
Disassembly and assembly of track roller assembly	50-105
Disassembly and assembly of carrier roller assembly	50-109
Separation and connection of track shoe assembly (Standard type track shoe)	50-111
Separation and connection of track shoe assembly (PLUS type track shoe)	50-113
Hydraulic system	50-114
Removal and installation of hydraulic tank assembly	50-114
Removal and installation of control valve assembly	50-116
Removal and installation of HST pump assembly	50-118
Disassembly and assembly of hydraulic cylinder assembly	50-120
Work equipment	50-128
Removal and installation of work equipment assembly	50-128
Removal and installation of blade assembly	50-132
Removal and installation of U-frame assembly	50-134
Cab and its attachments	50-137
Removal and installation of ROPS cab assembly	50-137
Removal and installation of wiper arm	50-142
Removal and installation of operator's cab glass (adhesion glass)	50-144
Removal and installation of operator's seat	50-150
Removal and installation of seat belt	50-151
Removal and installation of foot heater assembly	50-152
Disassembly and assembly of foot heater assembly	50-154
Removal and installation of air conditioner unit assembly	50-155
Removal and installation of air conditioner compressor assembly	50-160
Electrical system	50-162
Removal and installation of machine monitor assembly	50-162
Removal and installation of engine controller assembly	50-163
Removal and installation of HST controller assembly	50-164

Removal and installation of mass air flow and temperature sensor	50-165
Removal and installation of KOMTRAX terminal	50-166
Removal and installation of ICT sensor controller assembly	50-167
Removal and installation of iB monitor	50-168
Removal and installation of GNSS receiver	50-169
Removal and installation of iB GNSS antenna	50-170
Removal and installation of IMU sensor	50-173
60 Maintenance standard	60-1
Table of contents	60-2
Engine and cooling system	60-3
Engine mount	60-3
Cooling fan motor.....	60-4
Oil cooler bypass and HST charge safety valve.....	60-6
Power train.....	60-7
Damper.....	60-7
HST pump.....	60-8
HST motor.....	60-10
Charge pump.....	60-11
Solenoid valve	60-12
Final drive	60-13
Sprocket.....	60-14
Full-scale drawing of sprocket tooth profile	60-18
Undercarriage and frame.....	60-20
Track frame and idler cushion	60-20
Idler	60-23
Track roller	60-27
Carrier roller	60-31
Track shoe	60-33
Hydraulic system	60-38
Hydraulic tank.....	60-38
Work equipment and cooling fan pump	60-39
Control valve	60-42
Ripper PPC valve.....	60-49
Work equipment	60-51
Blade	60-51
Cutting edge and end bit.....	60-54
Ripper.....	60-55
Lift cylinder.....	60-57
Lift cylinder with stroke and reset sensor	60-58
Tilt cylinder with stroke sensor.....	60-59
Angle cylinder.....	60-60
Angle cylinder with stroke and reset sensor	60-61
Ripper cylinder.....	60-62
Cab and its attachments.....	60-63
Cab mount	60-63
Electrical system	60-64
System component parts	60-64
Sensor	60-65
80 Appendix.....	80-1
Table of contents	80-2
Air conditioner components	80-3
Precautions for refrigerant.....	80-3
Air conditioner component	80-4
Configuration and function of refrigeration cycle.....	80-7
Outline of refrigeration cycle.....	80-8
Air conditioner unit	80-10
Dual pressure switch	80-14
Pressure switch	80-15
Compressor.....	80-16

00 Index and foreword


Index

Condenser	80-17
Receiver drier	80-19
Procedure for testing and troubleshooting	80-20
Electrical circuit diagram	80-23
System diagram	80-24
Parts and connectors layout	80-26
Testing relays	80-31
Troubleshooting chart 1	80-33
Troubleshooting chart 2	80-34
Information described in troubleshooting table	80-36
A-1 Troubleshooting for condenser fan	80-37
A-2 Troubleshooting for compressor and refrigerant system (Air is not cooled)	80-40
A-3 Troubleshooting for blower motor system (No air comes out or air flow is abnormal)	80-44
A-4 Troubleshooting for temperature control	80-46
Troubleshooting with gauge pressure	80-49
Connection of service tool	80-52
Precautions for disconnecting and connecting hoses and tubes in air conditioner circuit	80-54
Handling of compressor oil	80-56
90 Diagrams and drawings	90-1
Table of contents	90-2
Hydraulic circuit diagram	90-3
Symbols in hydraulic circuit diagram	90-3
Hydraulic circuit diagram	90-7
Electric circuit diagram	90-9
Symbols in electric circuit diagram	90-9
Electrical circuit diagram	90-13
Index	1


Foreword, safety and general information (ALL-0370-001-A-00-A)

Important safety notice (ALL-1120-012-A-01-A)

(Rev. 2012/10)

- Appropriate servicing and repair are extremely important to ensure safe operation of the machine. The shop manual describes the effective and safe servicing and repair methods recommended by Komatsu. Some of these methods require the use of the special tools designed by Komatsu for the specific purpose.
- The symbol mark  is used for such matters that require special cautions during the work. The work indicated by the caution mark should be performed according to the instructions with special attention to the cautions. Should hazardous situation occur or be anticipated during such work, be sure to keep safe first and take every necessary measure.

General precautions

 **Inappropriate handling causes an extreme danger. Read and understand what is described in the operation and maintenance manual before operating the machine. Read and understand what is described in this manual before starting the work.**

- Before performing any greasing or repairs, read all the safety labels stuck to the machine. For the locations of the safety labels and detailed explanation of precautions, see the operation and maintenance manual.
- Locate a place in the repair workshop to keep the tools and removed parts. Always keep the tools and parts in their correct places. Always keep the work area clean and make sure that there is no dirt, water or oil on the floor. Smoke only in the areas provided for smoking. Never smoke while working.
- When performing any work, always wear the safety shoes and helmet. Do not wear loose work clothes, or clothes with buttons missing.
 1. Always wear the protective eyeglasses when hitting parts with a hammer.
 2. Always wear the protective eyeglasses when grinding parts with a grinder, etc.
- When performing any work with two or more workers, always agree on the working procedure before starting. While working, always keep conversations of the work between your fellow workers and your self on any step of the work. During the work, hang the warning tag of "UNDER WORKING" in the operator's compartment.
- Only qualified workers must perform the work and operation which require license or qualification.
- Keep the tools in good condition. And learn the correct way to use the tools, and use the proper ones among them. Before starting the work, thoroughly check the tools, lift truck, service vehicle, etc.
- If welding repairs is required, always have a trained and experienced welder with good

knowledge of welding perform the work. When performing welding work, always wear welding gloves, apron, shielding goggles, cap, etc.

- Before starting work, warm up your body thoroughly to start work under good condition.
- Avoid continuing work for long hours and take rests with proper intervals to keep your body in good condition. Take a rest in a specified safe place.

Safety points

1	Good arrangement
2	Correct work clothes
3	Observance of work standard
4	Practice of making and checking signals
5	Prohibition of operation and handling by unlicensed workers
6	Safety check before starting work
7	Wearing protective goggles (for cleaning or grinding work)
8	Wearing shielding goggles and protectors (for welding work)
9	Good physical condition and preparation
10	Precautions against work which you are not used to or you are used to too much

Preparation

- Before adding oil or making any repairs, place the machine on a firm and level ground, and apply the parking brake and chock the wheels or tracks to prevent the machine from moving.
- Before starting work, lower the work equipment (blade, ripper, bucket, etc.) to the ground. If it is not possible to lower the equipment to the ground, insert the lock pin or use blocks to prevent the work equipment from falling. And be sure to lock all the work equipment control levers and hang a warning tag on them.
- When performing the disassembling or assembling work, support the machine securely with blocks, jacks, or stands before starting the work.
- Remove all of mud and oil from the steps or other places used to get on and off the machine completely. Always use the handrails, ladders of

steps when getting on or off the machine. Never jump on or off the machine. When the scaffold is not provided, use steps or stepladder to secure your footing.

Precautions during work

- For the machine equipped with the battery disconnect switch, check that the system operating lamp is turned off before starting the work. Then, turn the battery disconnect switch to OFF (○) position and remove the switch key. For the machine not equipped with the battery disconnect switch, remove the cable from the battery before starting the work. Be sure to remove the negative end (-) of the battery cable first.
- Release the remaining pressure in the circuits completely before the work when the parts in the circuits of oil, fuel, coolant and air are disconnected or removed. When the cap of the oil filter, drain plug or oil pressure pickup plug is removed, loose them slowly to prevent the oil from spurting out.
- When removing or installing the checking plug or the piping in the fuel circuit, wait 30 seconds or longer after the engine is shut down and start the work after the remaining pressure is released from the fuel circuit.
- Immediately after the engine is shut down, the coolant and oil in the circuits are hot. Be careful not to get scalded by the hot coolant and oil. Start the work after checking that the coolant and oil are cooled down sufficiently.
- Start the work after the engine is shut down. Be sure to shut down the engine when working on or around the rotating parts in particular. When checking the machine without shutting down the engine (measuring oil pressure, rotational speed, oil or coolant temperature), take extreme care not to get caught in the rotating parts or the working equipment.
- The hoist or crane must be used to sling the components weighing 25 kg or heavier. Check the slings (wire rope, nylon sling, chain and hook) for damage before the work. Use the slings with ample capacity and install them to the proper places. Operate the hoist or crane slowly to prevent the component from hitting any other part. Do not work with any part still raised by the hoist or crane.
- When removing the part which is under internal pressure or reaction force of the spring, always leave 2 bolts in diagonal positions. Loosen those 2 bolts gradually and alternately and release the pressure, then, remove the part.
- When removing the part, be careful not to break or damage the electrical wiring. The damaged wiring may cause electrical fires.
- When removing piping, prevent the fuel or oil from spilling out. If any fuel or oil drips onto the floor, wipe it off immediately. Fuel or oil on the floor can cause you to slip and can even cause fires.
- As a general rule, do not use gasoline to wash parts. Do not use gasoline to clean the electrical parts, in particular.
- Reinstall the parts removed to their original places. Replace the damaged parts and the parts which must not be used with new ones. When installing the hoses and wiring harnesses, be careful that they are not damaged by contacting with other parts when the machine is operated.
- When connecting the high pressure hoses and tubes, make sure that they are not twisted. The damaged high pressure hoses and tubes are very dangerous when they are installed. So, be extremely careful when connecting the high pressure pipings. In addition, check that their connections are correct.
- When assembling or installing the parts, be sure to tighten the bolts to the specified torque. When installing the protective parts such as guards, or the parts which vibrate violently or rotate at high speeds, be sure to check that they are installed correctly.
- When aligning 2 holes, never insert your fingers or hand into the holes. Align the holes with care so that your fingers are not caught in the hole.
- When measuring hydraulic pressure, check that the measuring tools are correctly installed.
- Pay attention to safety when removing and installing the tracks of the track type machines. When removing the track, it separates suddenly. The workers should not stand at either end of the track.
- If the engine is operated for a long time in a closed place which is not ventilated well, you may suffer from gas poisoning. Accordingly, open the windows and doors to ventilate the place well.


Precautions for slinging work and making signals

- Only one appointed worker must make signals and co-worker must communicate with each other frequently. The appointed signaler must make specified signals clearly at the place where the signaler is well seen from the operator's seat and where the signaler can see the working condition easily. The signaler must always stand in front of the load and guide the operator safely.
 1. Do not stand under the load.
 2. Do not step on the load.
- Check the slings before starting sling work.

- Keep putting on the gloves during sling work. (Put on the leather gloves, if available.)
- Measure the weight of the load by the eye and check its center of gravity.
- Use the proper sling according to the weight of the load and method of slinging. If too thick wire ropes are used to sling a light load, the load may slip and fall.
- Do not sling a load with 1 wire rope only. If do so, the load may rotate or the sling gets loose and the sling may slip off. Install 2 or more wire ropes symmetrically.


⚠ Slinging with one rope may cause turning of the load during hoisting, untwisting of the rope, or slipping of the rope from its original slinging position on the load, which can result in a dangerous accident.

- Hanging angle must be 60 degrees or smaller as a rule.
- When hanging a heavy load (25kg or heavier), the hanging angle of the rope must be narrower than that of the hook.
- ★ When slinging a load with 2 ropes or more, the larger the hanging angle is, the larger the tension of each rope. The figure below shows the variation of allowable load in kg when hoisting is made with 2 ropes, each of which is allowed to sling up to 9.8 kN {1,000kg} a load vertically, at various hanging angles. When the 2 ropes sling a load vertically, up to 2000 kg of total weight can be suspended. This weight is reduced to 1000 kg when the 2 ropes make a hanging angle of 120 degrees. If the two ropes sling a 2000 kg load at a hanging angle of 150 degrees, each rope is subjected to a force as large as 4000 kg.

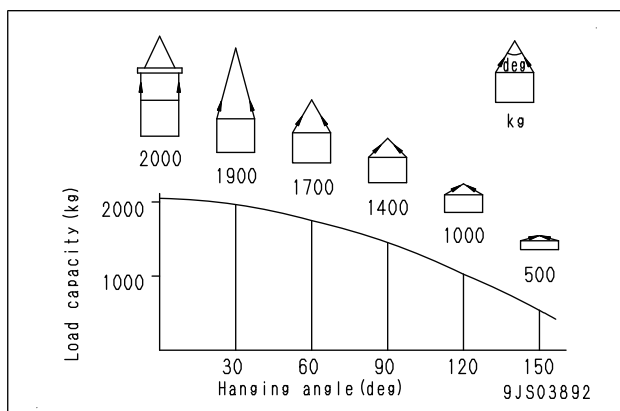

- When installing wire ropes to an angular load, apply pads to protect the wire ropes. If the load is slippery, apply proper material to prevent the wire rope from slipping.
- Use the specified eye bolts and fix wire ropes, chains, etc. to them with shackles, etc.

- Apply wire ropes to the middle part of the hook.
- ★ Slinging near the tip of the hook may cause the rope to slip off the hook during hoisting. The strength of the hook is maximum at its central part.

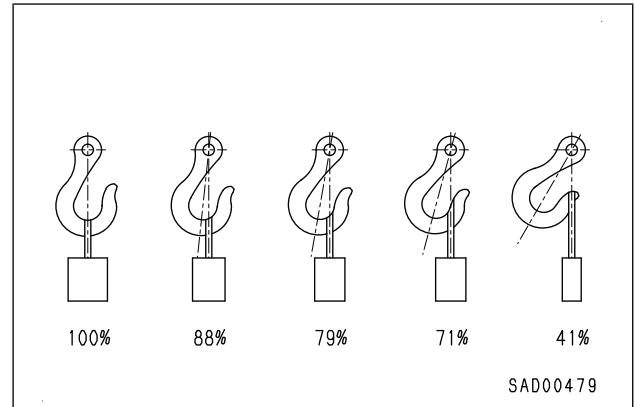


- Do not use twisted or kinked wire ropes.
- When slinging up a load, observe the following.
 1. Wind up the rope slowly until the wire rope tensions. When putting your hands on the wire ropes, do not grasp them but press them down from above. If you grasp them, your fingers may be caught.
 2. After the wire ropes are stretched, stop the crane and check the condition of the slung load, wire ropes, and pads.
 3. If the load is unstable or the wire rope or chains are twisted, lower the load and lift it up again.
 4. Do not lift up the load at an angle.
- When lowering a load, pay attention to the following.
 1. When lifting down a load, stop it temporarily at 30 cm above the floor, and then lower it slowly.
 2. Check that the load is stable, and then remove the sling.
 3. Remove kinks and dirt from the wire ropes and chains used for the sling work, and put them in the specified place.

Precautions for using mobile crane

- ★ Read the Operation and Maintenance Manual of the crane carefully in advance and operate the crane safely.

Precautions for using overhead traveling crane

- ⚠ The hoist or crane must be used to sling the components weighing 25 kg or heavier. A part weighing 25 kg or heavier in "disassembly and assembly" section is indicated with the symbol of .

00 Index and foreword

Foreword, safety and general information

- Before starting work, check the wire ropes, brake, clutch, controller, rails, over winding prevention device, ground fault circuit interrupter for electric shock prevention, crane collision prevention device, and energizing warning lamp, and check the following safety items.
- Observe the signals for sling work.
- Operate the hoist at a safe place.
- Be sure to check the directions of the direction indication plate (north, south, east and west) and the operating button.
- Do not sling a load at an angle. Do not move the crane while the slung load is swinging.
- Do not raise or lower a load while the crane is moving longitudinally or laterally.
- Do not drag a sling.
- When lifting up a load, stop it just after it leaves the ground and check safety, and then lift it up.
- Consider the travel route in advance and lift up a load to a safe height.
- Place the control switch in a position where it will not be an obstacle to work and passage.
- After operating the hoist, do not swing the control switch.
- Remember the position of the main switch so that you can turn off the power immediately in an emergency.
- Shut down the main switch when the hoist stops because of a blackout. When turning on a switch which is turned OFF by the ground fault circuit interrupter for electric shock prevention, check that the devices related to that switch are not in operating condition.
- If you find an obstacle around the hoist, stop the operation.
- After finishing the work, stop the hoist at the specified position and raise the hook to at least 2 meters above the floor. Do not leave the sling attached to the hook.

Selecting wire ropes

- Select adequate ropes depending on the weight of the parts to be hoisted, referring to the table below

Wire rope (JIS G3525, 6 x 37 - Type A)

(Standard Z twist wire ropes without galvanizing)

Nominal diameter of rope	Allowable load	
	kN	ton
mm		
10	8.8	0.9
12	12.7	1.3
14	17.3	1.7
16	22.6	2.3
18	28.6	2.9
20	35.3	3.6
25	55.3	5.6
30	79.6	8.1
40	141.6	14.4

Nominal diameter of rope	Allowable load	
	kN	ton
mm		
50	221.6	22.6
60	318.3	32.4

- ★ The allowable load is calculated as one sixth of the breaking load of the rope to be used (safety coefficient: 6).

Precautions for disconnecting and connecting hoses and tubes in air conditioner circuit

Disconnection

⚠ When replacing the air conditioner unit, air conditioner compressor, condenser or receiver drier, etc., collect the refrigerant (air conditioner gas: R134a) from the air conditioner circuit before disconnecting the air conditioner hoses.

- ★ Ask a qualified person for collecting, adding and filling operations of the refrigerant (air conditioner gas: R134a). (Only registered persons can work.)
- ★ Never release the refrigerant (air conditioner gas: R134a) to the atmosphere.

⚠ If refrigerant gas (air conditioner gas: R134a) gets in your eyes, you may lose your sight. And if it touches your skin, you may suffer from frostbite. Put on protective eyeglasses, gloves and working clothes with long sleeves while collecting the refrigerant or filling the air conditioner circuit with the refrigerant.

- When loosening the nuts fixing air conditioner hoses and tubes, be sure to use 2 wrenches; use one wrench to fix and use the other one to loosen the nut.

Connection

- When installing the hose for the air conditioner circuit, take care not to allow invasion of dirt, dusts and water into the hose.
- Check that the O-rings are fitted to the joints when connecting the air conditioner piping.
- Once an O-ring is used, it is deformed and deteriorated. Accordingly, do not reuse it.
- When removing the O-rings, use a soft tool so that the piping is not damaged.
- Check that the O-ring is not damaged or deteriorated.
- Apply compressor oil for refrigerant (R134a) to the O-ring.
 - ★ However, do not apply oil to the threaded portion of a bolt, nut or union.