

Operation & Maintenance Manual

SEAM002410T

PC200,200LC-6 PC210,210LC-6 MIGHTY PC220,220LC-6 PC230,230LC-6 MIGHTY HYDRAULIC EXCAVATOR

SERIAL NUMBERS PC200,200LC-102229
PC210,210LC-31425 and up
PC220,220LC-53562
PC230,230LC-10247

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU

1. FOREWORD

This manual provides rules and guidelines which will help you use this machine safely and effectively. Keep this manual handy and have all personnel read it periodically. If this manual has been lost or has become dirty and can not be read, request a replacement manual from Komatsu or your Komatsu distributor.

If you sell the machine, be sure to give this manual to the new owners.

Continuing improvements in the design of this machine can lead to changes in detail which may not be reflected in this manual. Consult Komatsu or your Komatsu distributor for the latest available information of your machine or for questions regarding information in this manual.

This manual may contain attachments and optional equipment that are not available in your area. Consult Komatsu or your Komatsu distributor for those items you may require.

WARNING

- **Improper operation and maintenance of this machine can be hazardous and could result in serious injury or death.**
- **Operators and maintenance personnel should read this manual thoroughly before beginning operation or maintenance.**
Keep this manual in the luggage box to the rear of the operator's seat, and have all personnel involved in working on the machine read the manual periodically.
- **Some actions involved in operation and maintenance of the machine can cause a serious accident, if they are not done in a manner described in this manual.**
- **The procedures and precautions given in this manual apply only to intended uses of the machine. If you use your machine for any unintended uses that are not specifically prohibited, you must be sure that it is safe for you and others. In no event should you or others engage in prohibited uses or actions as described in this manual.**
- **Komatsu delivers machines that comply with all applicable regulations and standards of the country to which it has been shipped. If this machine has been purchased in another country or purchased from someone in another country, it may lack certain safety devices and specifications that are necessary for use in your country. If there is any question about whether your product complies with the applicable standards and regulations of your country, consult Komatsu or your Komatsu distributor before operating the machine.**
- **The description of safety is given in SAFETY INFORMATION on page 0-4 and in SAFETY from page 1-1.**

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

CALIFORNIA

Proposition 65 Warning

Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Wash hands after handling.

EMISSION CONTROL WARRANTY

EMISSION CONTROL WARRANTY STATEMENT (APPLIES TO CANADA ONLY)

1. Products Warranted

Komatsu America International Company, Komatsu Mining Systems Inc. and Komatsu Utility Corporation (collectively "Komatsu") produce and/or market products under brand names of Komatsu, Dresser, Dressta, Haulpak and Galion. This emissions warranty applies to new engines bearing the Komatsu name installed in these products and used in Canada in machines designed for industrial off-highway use. This warranty applies only to these engines produced on or after January 1, 2000. This warranty will be administered by Komatsu distribution in Canada.

2. Coverage

Komatsu warrants to the ultimate purchaser and each subsequent purchaser that the engine is designed, built and equipped so as to conform, at the time of sale by Komatsu, with all U.S. Federal emission regulations applicable at the time of manufacture and that it is free from defects in workmanship or material which would cause it not to meet these regulations within five years or 3,000 hours of operation, whichever occurs first, as measured from the date of delivery of the engine to the ultimate purchaser.

3. Limitations

Failures, other than those resulting from defects in materials or workmanship, are not covered by this warranty. Komatsu is not responsible for failures or damage resulting from what Komatsu determines to be abuse or neglect, including, but not limited to: operation without adequate coolant or lubricants; over fueling; over speeding; lack of maintenance of lubricating, cooling or intake systems; improper storage, starting, warm-up, run-in or shutdown practices; unauthorized modifications of the engine. Komatsu is also not responsible for failures caused by incorrect fuel or by water, dirt or other contaminants in the fuel. Komatsu is not responsible for non-engine repairs, "downtime" expense, related damage, fines, all business costs or other losses resulting from a warrantable failure.

KOMATSU IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

This warranty, together with the express commercial warranties, are the sole warranties of Komatsu. **THERE ARE NO OTHER WARRANTIES, EXPRESS OR IMPLIED, OR OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.**

GARANTIE SUR LE CONTRÔLE DES ÉMISSIONS

ÉNONCÉ DE GARANTIE SUR LE CONTRÔLE DES ÉMISSIONS (APPLICABLE AU CANADA SEULEMENT):

1. Produits garantis:

Komatsu America International Company, Komatsu Mining Systems Inc. et Komatsu Utility Corporation (collectivement Komatsu) produisent et/ou font la mise en marché de produits portant les noms de marque Komatsu, Dresser, Dressta, Haulpak et Galion. Cette garantie sur les émissions s'applique à tous les nouveaux moteurs portant le nom Komatsu, installés dans ces produits et utilisés au Canada dans des machines conçues pour utilisation industrielle non-routière. Cette garantie s'applique seulement sur les moteurs produits à partir du 1er Janvier 2000. Cette garantie sera administrée par la distribution de Komatsu au Canada.

2. Couverture:

Komatsu garantit à l'acheteur ultime et chaque acheteur subséquent que le moteur est conçu, construit et équipé en toute conformité, au moment de la vente par Komatsu, avec toutes les Réglementations fédérales américaines sur les émissions applicables au moment de la fabrication et qu'il est exempt de défauts de construction ou de matériaux qui auraient pour effet de contrevenir à ces réglementations en dedans de 5 ans ou 3000 heures d'opération, mesuré à partir de la date de livraison du moteur au client ultime.

3. Limitations:

Les bris, autres que ceux résultant de défauts de matériaux ou de construction, ne sont pas couverts par cette Garantie. Komatsu n'est pas responsable pour bris ou dommages résultant de ce que Komatsu détermine comme étant de l'abus ou négligence, incluant mais ne se limitant pas à: l'opération sans lubrifiants ou agent refroidissants adéquats; la suralimentation d'essence; la survitesse; le manque d'entretien des systèmes de lubrification, de refroidissement ou d'entrée; de pratiques non-propices d'entreposage, de mise en marche, de réchauffement, de conditionnement ou d'arrêt; les modifications non-autorisées du moteur. De plus, Komatsu n'est pas responsable de bris causés par de l'essence inadéquate ou de l'eau, des saletés ou autres contaminants dans l'essence. Komatsu n'est pas responsable des réparations non-relées au moteur, des dépenses encourues suite aux temps d'arrêts, des dommages relatifs, amendes, et de tout autre coût d'affaires ou autres pertes résultant d'un bris couvert par la garantie.

KOMATSU N'EST PAS RESPONSABLE DES INCIDENTS OU DOMMAGES CONSÉQUENTS.

Cette garantie, ainsi que les garanties expresses commerciales, sont les seules garanties de Komatsu. **IL N'Y A AUCUNE AUTRE GARANTIE, EXPRESSE OU SOUS-ENTENDUE, MARCHANDABLE OU PROPICE A UNE UTILISATION PARTICULIÈRE.**

INFORMATION IMPORTANTE SUR LE MOTEUR
 CE MOTEUR EST CONFORME AUX NORMES AMÉRICAINES DE L'EPA (ANNÉE DU MODÈLE) ET DE LA CALIFORNIE POUR LES MOTEURS LARGES NON-ROUTIERS À IGNITION PAR COMPRESSION. CE MOTEUR EST CERTIFIÉ POUR OPERATION À ESSENCE DIESEL.

AVERTISSEMENT
 DES BLESSURES PEUVENT RÉSULTER ET LA GARANTIE S'ANNULER SI LES RPM DU TAUX D'ESSENCE OU L'ALTITUDE EXCÈDENT LES VALEURS MAXIMALES PUBLIÉES POUR CE MODÈLE ET SON APPLICATION.

IMPORTANT ENGINE INFORMATION

THIS ENGINE CONFORMS TO YYYY MODEL YEAR U.S. EPA REGULATION AND THE CALIFORNIA REGULATIONS LARGE NON ROAD COMPRESSION IGNITION ENGINES. THIS ENGINE IS CERTIFIED TO OPERATE ON DIESEL FUEL.

WARNING
 INJURY MAY RESULT AND WARRANTY IS VOIDED IF FUEL RATE RPM OR ALTITUDES EXCEED PUBLISHED MAXIMUM VALUES FOR THIS MODEL AND APPLICATION.

ENGINE MODEL	SERIAL NO.	DISPLACEMENT	LITERS
ENGINE FAMILY	DISPLACEMENT	FIRING ORDER	1 - 5 - 3 - 6 - 2 - 4
EXHAUST EMISSION CONTROL SYSTEM	Kw (HP)	RPM	
ADV. LOAD OUTPUT	EX. FUEL RATE AT ADV.	mm ³ /STROKE	
VALVE LASH COLD (mm)	IN.	TAUX D'ESSENCE À ADV.	
IDLE SPEED	RPM	FAMILY EMISSION LIMIT	
INITIAL INJECTION TIMING	DEG. BTDC	DATE OF MANUFACTURE	
		KOMATSU LTD. MADE IN JAPAN	

- MODÈLE DU MOTEUR
- FAMILLE DU MOTEUR
- SYSTÈME DE CONTRÔLE DES ÉMISSIONS D'ÉCHAPPEMENT
- CHARGE DE SORTIE ADV.
- PORTÉE DE VALVE À FROID (mm)
- VITESSE STATIQUE
- RÉGLAGE DE L'ALLUMAGE - INJECTION INITIALE
- DEG. BTDC

- NO. SÉRIE
- DÉPLACEMENT
- LITRES
- SÉQUENCE DE MISE À FEU
- mm³/BATTEMENT
- TAUX D'ESSENCE À ADV.
- LIMITE D'ÉMISSION DE LA FAMILLE
- DATE DE FABRICATION

KOMATSU LTD.
FABRIQUÉ AU JAPON

ENGINE DATAPLATE - ENGLISH / FRENCH

2. SAFETY INFORMATION

Most accidents are caused by the failure to follow fundamental safety rules for the operation and maintenance of machines. To avoid accidents, read, understand and follow all precautions and warnings in this manual and on the machine before performing operation and maintenance.

To identify safety messages in this manual and on machine labels, the following signal words are used.



DANGER

- This word is used on safety messages and safety labels where there is a high probability of serious injury or death if the hazard is not avoided. These safety messages or labels usually describe precautions that must be taken to avoid the hazard. Failure to avoid this hazard may also result in serious damage to the machine.



WARNING

- This word is used on safety messages and safety labels where there is a potentially dangerous situation which could result in serious injury or death if the hazard is not avoided. These safety messages or labels usually describe precautions that must be taken to avoid the hazard. Failure to avoid this hazard may also result in serious damage to the machine.



CAUTION

- This word is used on safety messages and safety labels for hazards which could result in minor or moderate injury if the hazard is not avoided. This word might also be word for hazards where the only result could be damage to the machine.

NOTICE

- This word is used for precautions that must be taken to avoid actions which could shorten the life of the machine.

Safety precautions are described in SAFETY from page 1-1.

Komatsu cannot predict every circumstance that might involve a potential hazard in operation and maintenance. Therefore the safety messages in this manual and on the machine may not include all possible safety precautions. If any procedures or actions not specifically recommended or allowed in this manual are used, you must be sure that you and others can do such procedures and actions safely and without damaging the machine. If you are unsure about the safety of some procedures, contact Komatsu distributor.

3. INTRODUCTION

3.1 INTENDED USE

This Komatsu HYDRAULIC EXCAVATOR is designed to be used mainly for the following work:

- Digging work
- Smoothing work
- Ditching work
- Loading work

See the section "12.15 WORK POSSIBLE USING HYDRAULIC EXCAVATOR" for further details.

3.2 FEATURES

- This Komatsu HYDRAULIC EXCAVATOR is equipped with various controls based on an advanced electronics system.
 - The monitor panel greatly facilitates daily maintenance and self-diagnosis.
 - Working mode, travel speed, and active mode are selectable.
 - Digging and lifting force can be increased by light-touch control.
(For details, see operation section.)
- Adjustable wrist control levers make operations smooth and easy.
- Air-conditioned operator's cab assures comfortable operation.
- Low noise level and smart urban-style design and coloring.
- Superb operating performance provided by powerful engine and high-performance hydraulic pumps.
- Low fuel consumption controlled by an electronic control system provides an environment-friendly machine.

3.3 BREAKING IN THE MACHINE

Your Komatsu machine has been thoroughly adjusted and tested before shipment. However, operating the machine under severe conditions at the beginning can adversely affect the performance and shorten the machine life.

Be sure to break in the machine for the initial 100 hours (as indicated by the service meter.)

During breaking in:

- Idle the engine for 5 minutes after starting it up.
- Avoid operation with heavy loads or at high speeds.
- Avoid sudden starts, sudden acceleration, sudden steering and sudden stops except in cases of emergency.


The precautions given in this manual for operating, maintenance, and safety procedures are only those that apply when this product is used for the specified purpose. If the machine is used for a purpose that is not listed in this manual, Komatsu cannot bear any responsibility for safety. All consideration of safety in such operations is the responsibility of the user.

Operations that are prohibited in this manual must never be carried out under any circumstances.

4. LOCATION OF PLATES, TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR


4.1 MACHINE SERIAL NO. PLATE POSITION

On the front bottom right of the operator's cab

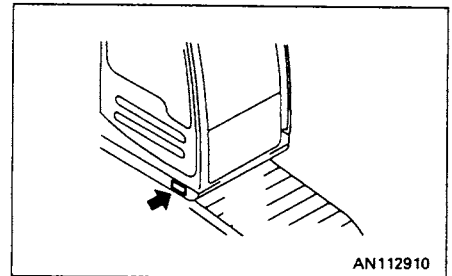

4.2 ENGINE SERIAL NO. PLATE POSITION

On the upper side of the engine cylinder head cover

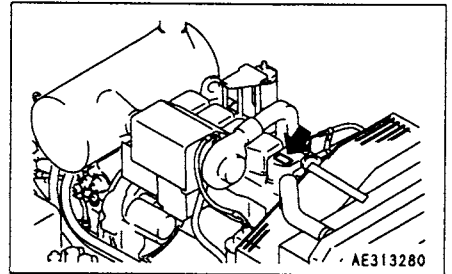

4.3 TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR

Machine serial No.:	
Engine serial No.:	
Distributor name:	
Address:	Phone:
Service personnel for your machine:	

REMARKS

5. CONTENTS

1. Foreword	0- 1
2. Safety information	0- 4
3. Introduction	0- 5
4. Location of plates, table to enter serial No. and distributor	0- 6

SAFETY

6. General precautions	1- 2
7. Precautions during operation	1- 9
7.1 Before starting engine	1- 9
7.2 After starting engine	1-11
7.3 Transportation	1-18
7.4 Battery	1-19
7.5 Towing	1-21
7.6 Lifting operations	1-21
8. Precautions for maintenance	1-22
8.1 Before carrying out maintenance	1-22
8.2 During maintenance	1-26
9. Position for attaching safety labels	1-32

OPERATION

10. General view	2- 2
10.1 General view of machine	2- 2
10.2 General view of controls and gauges	2- 3
11. Explanation of components	2- 4
11.1 Machine monitor	2- 4
11.2 Switches	2-15
11.3 Control levers, pedals	2-19
11.4 Ceiling window	2-24
11.5 Front window	2-25
11.6 Door lock	2-27
11.7 Cap, cover with lock	2-28
11.8 Hot/Cool box	2-29
11.9 Luggage box	2-29
11.10 Ashtray	2-29
11.11 Air conditioner	2-30
11.12 Car radio	2-33
11.13 Fuse	2-38
11.14 Fusible link	2-39
11.15 Controllers	2-39
11.16 Tool box	2-39
11.17 Grease pump holder	2-39
11.18 Handling accumulator	2-40

12. Operation	2- 42
12.1 Check before starting engine	2- 42
12.2 Starting engine	2- 52
12.3 Operations and checks after starting engine	2- 55
12.4 Moving machine off	2- 61
12.5 Steering machine	2- 64
12.6 Stopping machine	2- 66
12.7 Swinging	2- 67
12.8 Operation of work equipment	2- 68
12.9 Handling active mode	2- 69
12.10 Working mode selection	2- 71
12.11 Prohibitions for operation	2- 73
12.12 Precautions for operation	2- 75
12.13 Precautions when traveling up or down hills	2- 76
12.14 How to escape from mud	2- 78
12.15 Work possible using hydraulic excavator	2- 79
12.16 Replacement and inversion of bucket	2- 80
12.17 Parking machine	2- 82
12.18 Check after finishing work	2- 83
12.19 Stopping engine	2- 84
12.20 Check after stopping engine	2- 85
12.21 Locking	2- 85
13. Transportation	2- 86
13.1 Loading, unloading work	2- 86
13.2 Precautions for loading	2- 88
13.3 Precautions for transportation	2- 89
14. Cold weather operation	2- 90
14.1 Precautions for low temperature	2- 90
14.2 Precautions after completion of work	2- 92
14.3 After cold weather	2- 92
15. Long-term storage	2- 93
15.1 Before storage	2- 93
15.2 During storage	2- 94
15.3 After storage	2- 94
15.4 Starting machine after long-term storage	2- 94
16. Troubleshooting	2- 95
16.1 Phenomena that are not failures	2- 95
16.2 Method of towing machine	2- 95
16.3 Using method for light-weight towing hole	2- 95
16.4 Precautions on particular jobsites	2- 96
16.5 If battery is discharged	2- 96
16.6 Other trouble	2-100

MAINTENANCE

17. Guides to maintenance	3- 2
18. Outlines of service	3- 5
18.1 Outline of oil, fuel, coolant	3- 5
18.2 Outline of electric system	3- 8
18.3 Outline of hydraulic system	3- 9
19. Wear parts list	3-10
20. Use of fuel, coolant and lubricants according to ambient temperature	3-12
21. Standard tightening torques for bolts and nuts	3-16
21.1 Introduction of necessary tools	3-16
21.2 Torque list.....	3-17
22. Periodic replacement of safety critical parts	3-18
23. Maintenance schedule chart	3-22
23.1 Maintenance schedule chart	3-22
23.2 Maintenance interval when using hydraulic breaker.....	3-24
24. Service Procedure	3-25
24.1 Initial 250 hours service	3-25
24.2 When required	3-26
24.3 Check before starting	3-44
24.4 Every 100 hours service	3-49
24.5 Every 250 hours service	3-52
24.6 Every 500 hours service	3-58
24.7 Every 1000 hours service	3-63
24.8 Every 2000 hours service	3-66
24.9 Every 4000 hours service	3-69
24.10 Every 5000 hours service	3-70

SPECIFICATIONS

25. Specifications	4- 2
---------------------------------	------

OPTIONS, ATTACHMENTS

26. General precautions	5- 2
26.1 Precautions related to safety	5- 2
26.2 Precautions when installing attachments	5- 3
27. Handling bucket with hook	5- 4
27.1 Checking for damage to bucket with hook.....	5- 4
27.2 Prohibited operations	5- 4
27.3 Precautions during operations	5- 4
28. Using seat belt	5- 5
28.1 Seat belt.....	5- 5
29. Handling car heater	5- 7
29.1 Explanation of components	5- 7
29.2 Preparing car heater	5- 8
30. Machines ready for attachments	5- 9
30.1 Explanation of components	5- 9
30.2 hydraulic circuit.....	5-11
30.3 Attachment mounting/dismounting procedure	5-13
30.4 Operation	5-15
30.5 Long-term storage	5-16
30.6 Specifications	5-16
31. Introduction of attachments	5-17
31.1 Specification, use	5-17
31.2 Attachment installation combination table	5-19
31.3 Selection of track shoes	5-22
31.4 Selection of bucket teeth	5-23
31.5 Handling rubber pad shoe	5-24
31.6 Handling trapezoidal bucket	5-26
31.7 Handling extension arm	5-27
31.8 Handling clamshell bucket.....	5-28
31.9 Handling variable 2-piece boom, rotating arm	5-29
32. Extending machine service life	5-38
32.1 Hydraulic breaker	5-38
32.2 Power ripper	5-42
32.3 Fork grab.....	5-43
32.4 Grapple bucket	5-44
32.5 Scrap grapple	5-45
32.6 Crusher & cutter	5-46
32.7 Hydraulic pile driver	5-47
32.8 Hydraulic excavator with multi-purpose crane	5-48

SAFETY



WARNING

Read and follow all safety precautions. Failure to do so may result in serious injury or death.

This safety section also contains precautions for optional equipment and attachments.

6. GENERAL PRECAUTIONS


⚠ WARNING: For reasons of safety, always follow these safety precautions.

SAFETY RULES

- Only trained and authorized personnel can operate and maintain the machine.
- Follow all safety rules, precautions and instructions when operating or performing maintenance on the machine.
- Do not operate the machine if you are not feeling well, or if you are taking medicine which will make you sleepy, or if you have been drinking. Operating in such a condition will adversely affect your judgement and may lead to an accident.
- When working with another operator or with a person on worksite traffic duty, be sure that all personnel understand all hand signals that are to be used.
- Always follow all rules related to safety.

SAFETY FEATURES


- Be sure that all guards and covers are in their proper position. Have guards and covers repaired if damaged.
- Use safety features such as safety lock levers ① and the seat belt properly.
- Never remove any safety features. Always keep them in good operating condition.
Safety lock lever → See "12.17 PARKING MACHINE".
Seat belt → See "28. USING SEAT BELT".
- Improper use of safety features could result in serious bodily injury or death.

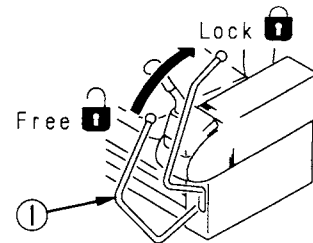

AB30576B

CLOTHING AND PERSONAL PROTECTIVE ITEMS

- Avoid loose clothing, jewelry, and loose long hair. They can catch on controls or in moving parts and cause serious injury or death.
- Also, do not wear oily clothes, because they are flammable.
- Wear a hard hat, safety glasses, safety shoes, mask or gloves when operating or maintaining the machine. Always wear safety goggles, hard hat and heavy gloves if your job involves scattering metal chips or minute materials particularly when driving pins with a hammer and when cleaning the air cleaner element with compressed air. Check also that there is no one near the machine.
- Check that all protective equipment functions properly before using.

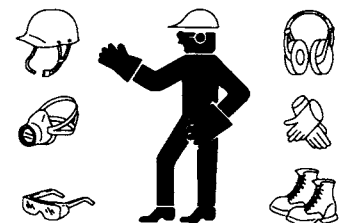

AE305770

UNAUTHORIZED MODIFICATION


Any modification made without authorization from Komatsu can create hazards. Before making a modification, consult your Komatsu distributor. Komatsu will not be responsible for any injury or damage caused by any unauthorized modification.

ALWAYS APPLY LOCK WHEN LEAVING OPERATOR'S SEAT

- When standing up from the operator's seat, always place the safety lock levers ① securely in the LOCK position. If you accidentally touch the levers when they are not locked, the work equipment may suddenly move and cause serious injury or damage.
- When leaving the machine, lower the blade and ripper completely to the ground, set the safety lock levers ① to the LOCK position, then stop the engine. Use the key to lock all the equipment. Always remove the key and take it with you.

Work equipment posture → See "12.17 PARKING MACHINE".

Locking → See "12.21 LOCKING"



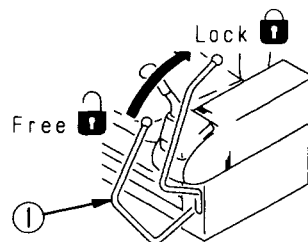


MOUNTING AND DISMOUNTING

- Never jump on or off the machine. Never get on or off a moving machine.
- When getting on or off the machine, always face the machine and use the handrails and steps.
- Never hold any control levers or lock levers when getting on or off the machine.
- To ensure safety, always maintain three-point contact (both feet and one hand, or both hands and one foot) with the handrails and steps to ensure that you support yourself.
- If there is any oil, grease, or mud on the handrails or steps, wipe it off immediately. Always keep these parts clean. Repair any damage and tighten any loose bolts.
- When getting on or off the machine, or when moving along the top of the track, if you hold the handrail inside the door when moving on top of the track shoe, and the door lock is not locked securely, the door may move and cause you to fall.

Always lock the door securely.

Method of locking door → See "11.6 DOOR LOCK".

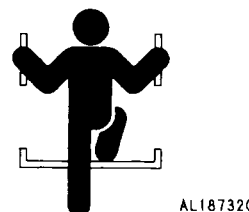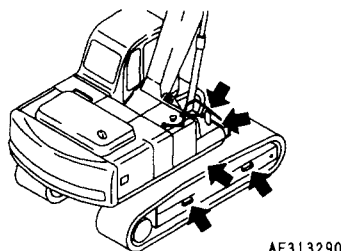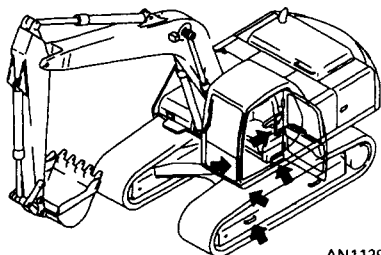

FIRE PREVENTION FOR FUEL AND OIL


Fuel, oil, and antifreeze can be ignited by a flame. Fuel is particularly flammable and can be hazardous.

Always observe the following:

- Keep any flame or lighted cigarette away from flammable fluids.
- Stop the engine and do not smoke when refueling.
- Tighten all fuel and oil caps securely.
- Use well-ventilated areas for adding or storing oil and fuel.
- Keep oil and fuel in the determined place and do not allow unauthorized persons to enter.



A0055020

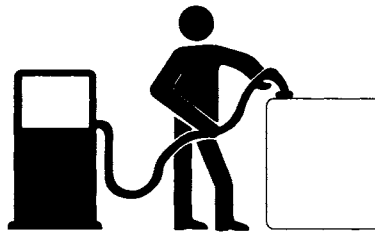

A0055030



A0055040

PRECAUTIONS WHEN HANDLING AT HIGH TEMPERATURE

- Immediately after operations are stopped, the engine oil and hydraulic oil are at high temperature and are still under pressure. Attempting to remove the cap, drain the oil or water, or replace the filters may lead to serious burns. Always wait for the temperature to go down, and follow the specified procedures when carrying out these operations.
- To prevent hot water from spurting out, stop the engine, wait for the water to cool, then loosen the cap slowly to relieve the pressure before removing the cap.
(When checking if the water temperature has gone down, put your hand near the front face of the radiator and check the air temperature. Be careful not to touch the radiator.)
- To prevent hot oil from spurting out, stop the engine, wait for the oil to cool, then loosen the cap slowly to relieve the pressure before removing the cap.
(When checking if the oil temperature has gone down, put your hand near the front face of the hydraulic tank and check the air temperature. Be careful not to touch the hydraulic tank.)



A0055050

ASBESTOS DUST HAZARD PREVENTION

Asbestos dust can be hazardous to your health if it is inhaled.

Komatsu does not use asbestos in its products, but if you handle materials containing asbestos fibers, follow the guidelines given below:

- Never use compressed air for cleaning.
- Use water to keep down the dust when cleaning.
- If there is danger that there may be asbestos dust in the air, operate the machine from an upwind position whenever possible.
- Use an approved respirator if necessary.



A0055060

CRUSHING OR CUTTING PREVENTION

Do not enter, or put your hand or arm or any other part of your body between movable parts such as the work equipment and cylinders, or between the machine and work equipment.

If the work equipment is operated, the clearance will change and this may lead to serious damage or personal injury.

If it is necessary to go between movable parts, always lock the levers and be sure that the work equipment cannot move. For details, see "8. PRECAUTIONS FOR MAINTENANCE".




A0066090

FIRE EXTINGUISHER AND FIRST AID KIT

Always follow the precautions below to prepare for action if any injury or fire should occur.

- Be sure that fire extinguishers have been provided and read the labels to ensure that you know how to use them.
- Provide a first aid kit at the storage point. Carry out periodic checks and add to the contents if necessary.
- Know what to do in the event of a fire or injury.
- Decide the phone numbers of persons (doctor, ambulance, fire station, etc.) to contact in case of an emergency. Post these contact numbers in specified places and make sure that all personnel know the numbers and correct contact procedures.

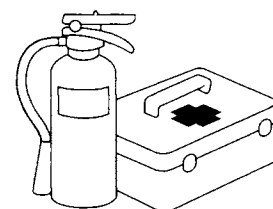

A0055070

PROTECTION AGAINST FALLING OR FLYING OBJECTS

If there is any danger of falling or flying objects hitting the operator, install protective guards in place to protect the operator as required for each particular situation.


- For work with breakers, install a front guard on the windshield. Also, place a laminate coating sheet over the windshield.
- For demolition or shear work, install a front guard on the windshield and a top guard on the cab. Also, place a laminate coating sheet over the windshield.
- For work in mines, tunnel or other places where there is danger of falling rocks, put FOPS (falling object protective structure) in place. Also, place a laminate coating sheet over the windshield.

The above comments are made with regards to typical working conditions. By all means you should put on other guards if required by conditions at your particular site. For details of safety guards, please contact your Komatsu distributor.

Also, even for other types of work, if there is any danger of getting hit by falling or flying objects, or of objects entering the operator's cab, select and install a guard that matches the working conditions.

Be sure to close the front window before commencing work.

When carrying out the above operations, make sure to keep all persons other than the operator outside the range of falling or flying objects. Be particularly sure to maintain a proper distance when carrying out shear operations.

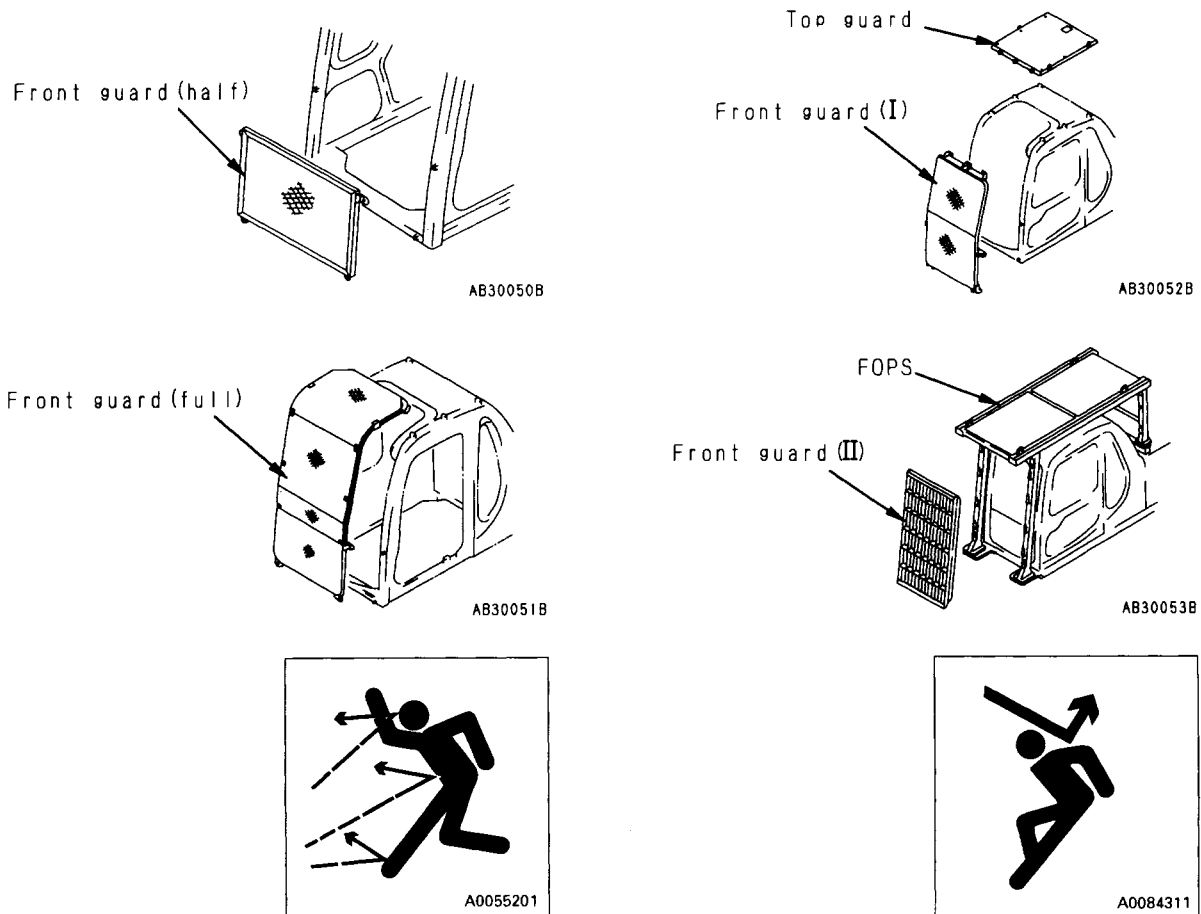

PRECAUTIONS FOR ATTACHMENTS

- When installing and using an optional attachment, read the instruction manual for the attachment and the information related to attachments in this manual.
- Do not use attachments that are not authorized by Komatsu or your Komatsu distributor. Use of unauthorized attachments could create a safety problem and adversely affect the proper operation and useful life of the machine.
- Any injuries, accidents, product failures resulting from the use of unauthorized attachments will not be the responsibility of Komatsu.

MACHINES WITH ACCUMULATOR

On machines equipped with an accumulator, for a short time after the engine is stopped, the work equipment will lower under its own weight when the work equipment control lever is shifted to LOWER. After the engine is stopped, set the safety lock lever ① to the lock position and also lock the attachment pedal with the lock pin.


When releasing the pressure inside the work equipment circuit on machines equipped with an accumulator, follow the procedure given in the inspection and maintenance section.

Method of releasing pressure → See "11.18 HANDLING ACCUMULATOR".

The accumulator is filled with high-pressure nitrogen gas, and it is extremely dangerous if it is handled in the wrong way. Always observe the following precautions.

- Never make any hole in the accumulator or expose it to flame or fire.
- Do not weld any boss to the accumulator.
- When carrying out disassembly or maintenance of the accumulator, or when disposing of the accumulator, it is necessary to release the gas from the accumulator. A special air bleed valve is necessary for this operation, so please contact your Komatsu distributor.


Gas in accumulator → See "11.18 HANDLING ACCUMULATOR".

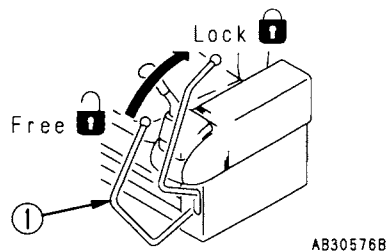

VENTILATION FOR ENCLOSED AREAS

Exhaust fumes from the engine can kill.

- If it is necessary to start the engine within an enclosed area, or you handle fuel, flushing oil, or paint, open the doors and windows to ensure that you provide adequate ventilation to prevent gas poisoning.
- If opening the doors and windows still does not provide adequate ventilation, set up fans.

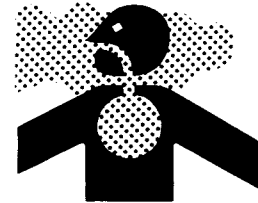


A0055060

PRECAUTIONS WITH CAB GLASS

If by mistake the cab glass on the work equipment side should crack, there is danger of direct contact between the operator's body and the work equipment. This is extremely dangerous. If the glass is cracked, stop operations immediately and replace the glass.

EMERGENCY EXIT FROM OPERATOR'S CAB

- If it should become impossible to open the cab door, open the rear window and use it as an emergency escape.
- Remove the rear window as follows.
 1. Pull ring ① and completely remove seal ② from the window frame rubber.
 2. Push the corner of the rear window glass strongly to push it out and make it possible to remove.
- Remove the rear window only when it is being used as an emergency escape.

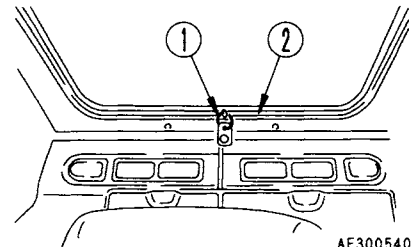

AE300540

7. PRECAUTIONS DURING OPERATION

⚠ WARNING: Failure to follow these safety precautions may lead to a serious accident.


7.1 BEFORE STARTING ENGINE

SAFETY AT WORKSITE

- Before starting operations, thoroughly check the area for any unusual conditions that could be dangerous.
- Check the terrain and condition of the ground at the worksite, and determine the best and safest method of operation.
- Make the ground surface as hard and horizontal as possible before carrying out operations. If the jobsite is dusty, spray water before starting operations.
- If you need to operate on a road, protect pedestrians and cars by designating a person for worksite traffic duty or by installing fences and putting up No Entry signs around the worksite.
- If water lines, gas lines, or high-voltage electrical lines may be buried under the worksite, contact each utility and identify their locations. Be careful not to sever or damage any of these lines.
- Check the ground condition and the depth and flow of water before operating in water or crossing a river. NEVER be in water which is in excess of the permissible water depth.

Permissible water depth →

See "12.12 PRECAUTIONS FOR OPERATION".

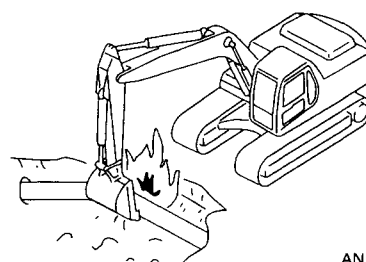

AN112960

CHECKS BEFORE STARTING ENGINE

Carry out the following checks before starting the engine at the beginning of the days work. Failure to carry out these checks may lead to serious injury or damage.

- Completely remove all flammable materials accumulated around the engine and battery, return all fuel containers to their proper place, remove all parts and tools from the operator's compartment, and remove any dirt from the mirrors, handrails, and steps.
Walk-around checks → See "12.1.1 WALK-AROUND CHECK".
- Check the coolant level, fuel level, and oil level in the hydraulic tank, check for clogging of the air cleaner, and check the electric wiring.
Checks before starting → See "12.1.2 CHECK BEFORE STARTING".
- Adjust the operator's seat to a position where it is easy to carry out operations, and check for wear or damage to the seat belt and seat belt mounting equipment.
Adjusting operator's seat → See "12.1.3 ADJUSTING SEAT POSITION".
Seat belt → See "28. USING SEAT BELT".
- Check that the gauges work properly, and check that the control levers are all at the NEUTRAL position.
Method of checking operation of gauges →
See "12.1.4 OPERATIONS AND CHECKS BEFORE STARTING ENGINE".
- Clean all dirt off the surface of the mirrors, window glass, and lights to ensure good visibility.
- Adjust the mirrors so that they give the optimum view from the operator's seat.
When adjusting → See "12.1 CHECK BEFORE STARTING ENGINE".
- If any of the mirrors are broken, replace them with new ones.
- When removing and installing the mirrors for replacement or transportation, see "13.3 PRECAUTIONS FOR TRANSPORTATION".

If the above inspections show any abnormality, carry out repairs immediately.



A0055020